

690 SMC R

Art. no. 3213548en



KTM

DEAR KTM CUSTOMER

Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it properly.

We hope you enjoy your new vehicle!

Enter the serial numbers of your vehicle below.

| | |
|--------------------------|----------------|
| Chassis number (📖 p. 20) | Dealer's stamp |
| Engine number (📖 p. 21) | |
| Key number (📖 p. 21) | |

The Owner's Manual contained the latest information for this model series at the time of going to print. However, minor differences due to developments in design cannot be ruled out completely.

All specifications are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from illustrations and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2016 KTM Sportmotorcycle GmbH, Mattighofen Austria
All rights reserved



3213548en

09/2016

DEAR KTM CUSTOMER

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

According to the international quality management standard ISO 9001, KTM uses quality assurance processes that lead to the maximum possible quality of the products.

Issued by: TÜV Management Service

KTM Sportmotorcycle GmbH
5230 Mattighofen, Austria

This document is valid for the following models:

690 SMC R EU (F9703Q9)

TABLE OF CONTENTS

| | | | | | |
|------|--|----|---------|--|----|
| 1 | MEANS OF REPRESENTATION | 7 | 5.5 | Fork part number | 22 |
| 1.1 | Symbols used | 7 | 5.6 | Shock absorber article number | 22 |
| 1.2 | Formats used..... | 8 | 6 | CONTROLS..... | 23 |
| 2 | SAFETY ADVICE..... | 9 | 6.1 | Clutch lever..... | 23 |
| 2.1 | Use definition - intended use | 9 | 6.2 | Hand brake lever..... | 23 |
| 2.2 | Misuse..... | 9 | 6.3 | Throttle grip | 24 |
| 2.3 | Safety advice..... | 9 | 6.4 | Horn button..... | 24 |
| 2.4 | Degrees of risk and symbols | 10 | 6.5 | Light switch | 25 |
| 2.5 | Tampering warning..... | 10 | 6.6 | Turn signal switch..... | 25 |
| 2.6 | Safe operation | 11 | 6.7 | Emergency OFF switch | 26 |
| 2.7 | Protective clothing | 12 | 6.8 | Electric starter button..... | 26 |
| 2.8 | Work rules..... | 12 | 6.9 | Ignition/steering lock..... | 27 |
| 2.9 | Environment..... | 12 | 6.10 | Combination instrument | 27 |
| 2.10 | Owner's Manual | 13 | 6.10.1 | Combination instrument overview | 27 |
| 3 | IMPORTANT NOTES..... | 14 | 6.10.2 | Function buttons | 28 |
| 3.1 | Manufacturer and implied warranty..... | 14 | 6.10.3 | Tachometer..... | 28 |
| 3.2 | Operating and auxiliary substances | 14 | 6.10.4 | Indicator lamps | 29 |
| 3.3 | Spare parts, accessories | 14 | 6.10.5 | Display | 30 |
| 3.4 | Service | 15 | 6.10.6 | Speed display..... | 31 |
| 3.5 | Figures | 15 | 6.10.7 | Setting the kilometers or miles..... | 31 |
| 3.6 | Customer service..... | 15 | 6.10.8 | Time..... | 32 |
| 4 | VIEW OF VEHICLE | 16 | 6.10.9 | Setting the clock | 32 |
| 4.1 | View of vehicle, front left side (example) | 16 | 6.10.10 | ODO display | 33 |
| 4.2 | View of vehicle, rear right side (example)..... | 18 | 6.10.11 | Setting/resetting display TRIP 1 | 33 |
| 5 | SERIAL NUMBERS | 20 | 6.10.12 | Setting/resetting display TRIP 2 | 34 |
| 5.1 | Chassis number | 20 | 6.10.13 | TRIP F display..... | 35 |
| 5.2 | Type label | 20 | 6.10.14 | GEAR display | 35 |
| 5.3 | Key number..... | 21 | 6.10.15 | Coolant temperature indicator | 36 |
| 5.4 | Engine number | 21 | 6.11 | Opening the filler cap..... | 36 |

TABLE OF CONTENTS




| | | | | | |
|------|--|----|-------|--|----|
| 6.12 | Closing filler cap..... | 38 | 10.4 | Compression damping of the shock absorber..... | 65 |
| 6.13 | Seat unlocking..... | 38 | 10.5 | Adjusting the low-speed compression damping of the shock absorber..... | 65 |
| 6.14 | Handrails..... | 39 | 10.6 | Adjusting the high-speed compression damping of the shock absorber..... | 66 |
| 6.15 | Passenger footrest..... | 39 | 10.7 | Adjusting the rebound damping of the shock absorber..... | 67 |
| 6.16 | Shift lever..... | 40 | 10.8 | Handlebar position..... | 68 |
| 6.17 | Foot brake lever..... | 41 | 10.9 | Adjusting the handlebar position  | 69 |
| 6.18 | Side stand..... | 41 | 11 | SERVICE WORK ON THE CHASSIS..... | 70 |
| 7 | PREPARING FOR USE..... | 42 | 11.1 | Raising the motorcycle with a lift stand..... | 70 |
| 7.1 | Advice on first use..... | 42 | 11.2 | Removing the motorcycle from the lift stand..... | 70 |
| 7.2 | Running in the engine..... | 43 | 11.3 | Raising the motorcycle with the rear wheel stand..... | 71 |
| 7.3 | Loading the vehicle..... | 44 | 11.4 | Removing the rear of the motorcycle from the wheel stand..... | 72 |
| 8 | RIDING INSTRUCTIONS..... | 46 | 11.5 | Raising the motorcycle with the front wheel stand..... | 72 |
| 8.1 | Performing checks and vehicle care when preparing for use..... | 46 | 11.6 | Taking the motorcycle from the front lifting gear ... | 73 |
| 8.2 | Starting..... | 47 | 11.7 | Cleaning the dust boots of the fork legs..... | 74 |
| 8.3 | Starting off..... | 49 | 11.8 | Removing the fork protector..... | 75 |
| 8.4 | Shifting, riding..... | 49 | 11.9 | Installing the fork protector..... | 75 |
| 8.5 | Applying the brakes..... | 52 | 11.10 | Removing the seat..... | 76 |
| 8.6 | Stopping, parking..... | 54 | 11.11 | Mounting the seat..... | 76 |
| 8.7 | Transport..... | 55 | 11.12 | Removing the air filter  | 77 |
| 8.8 | Refueling..... | 56 | 11.13 | Installing the air filter  | 78 |
| 9 | SERVICE SCHEDULE..... | 59 | 11.14 | Checking the chain for dirt..... | 79 |
| 9.1 | Additional information..... | 59 | 11.15 | Cleaning the chain..... | 79 |
| 9.2 | Required work..... | 59 | 11.16 | Checking the chain tension..... | 80 |
| 9.3 | Recommended work..... | 62 | 11.17 | Adjusting the chain tension..... | 82 |
| 10 | TUNING THE CHASSIS..... | 63 | | | |
| 10.1 | Fork/shock absorber..... | 63 | | | |
| 10.2 | Adjusting the compression damping of the fork..... | 63 | | | |
| 10.3 | Adjusting the rebound damping of the fork..... | 64 | | | |

TABLE OF CONTENTS















| | | | | | |
|-------|--|-----|-------|--|-----|
| 11.18 | Checking the chain, rear sprocket, engine sprocket, and chain guide..... | 83 | 14 | ELECTRICAL SYSTEM..... | 116 |
| 11.19 | Adjusting the basic position of the clutch lever..... | 87 | 14.1 | Removing the battery  | 116 |
| 11.20 | Checking/correcting the fluid level of the hydraulic clutch..... | 88 | 14.2 | Installing the battery  | 118 |
| 12 | BRAKE SYSTEM..... | 90 | 14.3 | Recharging the battery  | 120 |
| 12.1 | Antilock braking system (ABS)..... | 90 | 14.4 | Changing the main fuse..... | 123 |
| 12.2 | Adjusting the basic position of the hand brake lever..... | 91 | 14.5 | Changing the ABS fuses..... | 124 |
| 12.3 | Checking the brake discs..... | 92 | 14.6 | Changing the fuses of individual power consumers..... | 126 |
| 12.4 | Checking the front brake fluid level..... | 93 | 14.7 | Removing the headlight mask with the headlight..... | 128 |
| 12.5 | Adding front brake fluid  | 94 | 14.8 | Installing the headlight mask with the headlight..... | 129 |
| 12.6 | Checking the front brake linings..... | 95 | 14.9 | Changing the headlight bulb..... | 131 |
| 12.7 | Checking the free travel of foot brake lever..... | 96 | 14.10 | Changing the parking light bulb..... | 132 |
| 12.8 | Adjusting the basic position of the foot brake lever  | 97 | 14.11 | Changing the turn signal bulb..... | 134 |
| 12.9 | Checking rear brake fluid level..... | 98 | 14.12 | Checking the headlight setting..... | 135 |
| 12.10 | Adding rear brake fluid  | 99 | 14.13 | Adjusting the headlight range..... | 135 |
| 12.11 | Checking the rear brake linings..... | 101 | 15 | COOLING SYSTEM..... | 137 |
| 13 | WHEELS, TIRES..... | 103 | 15.1 | Cooling system..... | 137 |
| 13.1 | Removing the front wheel  | 103 | 15.2 | Checking the antifreeze and coolant level..... | 138 |
| 13.2 | Installing the front wheel  | 104 | 15.3 | Checking the coolant level..... | 140 |
| 13.3 | Removing the rear wheel  | 106 | 15.4 | Draining the coolant  | 142 |
| 13.4 | Installing the rear wheel  | 107 | 15.5 | Filling/bleeding the cooling system  | 143 |
| 13.5 | Checking the rear hub rubber dampers  | 109 | 16 | TUNING THE ENGINE..... | 146 |
| 13.6 | Checking the tire condition..... | 111 | 16.1 | Adjusting the engine characteristic..... | 146 |
| 13.7 | Tubeless tire system..... | 113 | 16.2 | Checking the basic position of the shift lever..... | 147 |
| 13.8 | Checking the tire air pressure..... | 113 | 16.3 | Adjusting the basic position of the shift lever  | 148 |
| 13.9 | Checking the spoke tension..... | 114 | 17 | SERVICE WORK ON THE ENGINE..... | 149 |
| | | | 17.1 | Checking the engine oil level..... | 149 |

TABLE OF CONTENTS

| | | | | | |
|--------|--|-----|-------|----------------------------|-----|
| 17.2 | Changing the engine oil and filter, cleaning the oil screens | 150 | 22.9 | Chassis tightening torques | 183 |
| 17.3 | Draining the engine oil | 150 | 23 | SUBSTANCES | 188 |
| 17.4 | Removing the oil filter | 151 | 24 | AUXILIARY SUBSTANCES | 191 |
| 17.5 | Cleaning the oil screens | 153 | 25 | STANDARDS | 193 |
| 17.6 | Installing the oil filter | 155 | 26 | INDEX OF SPECIAL TERMS | 194 |
| 17.7 | Filling up with engine oil | 155 | 27 | LIST OF ABBREVIATIONS | 195 |
| 17.8 | Adding engine oil | 156 | 28 | LIST OF SYMBOLS | 196 |
| 18 | CLEANING, CARE | 158 | 28.1 | Red symbols | 196 |
| 18.1 | Cleaning the motorcycle | 158 | 28.2 | Yellow and orange symbols | 196 |
| 18.2 | Checks and maintenance steps for winter operation | 160 | 28.3 | Green and blue symbols | 196 |
| 19 | STORAGE | 162 | INDEX | | 198 |
| 19.1 | Storage | 162 | | | |
| 19.2 | Preparing for use after storage | 164 | | | |
| 20 | TROUBLESHOOTING | 165 | | | |
| 21 | BLINK CODE | 168 | | | |
| 22 | TECHNICAL DATA | 174 | | | |
| 22.1 | Engine | 174 | | | |
| 22.2 | Engine tightening torques | 175 | | | |
| 22.3 | Capacities | 178 | | | |
| 22.3.1 | Engine oil | 178 | | | |
| 22.3.2 | Coolant | 179 | | | |
| 22.3.3 | Fuel | 179 | | | |
| 22.4 | Chassis | 179 | | | |
| 22.5 | Electrical system | 180 | | | |
| 22.6 | Tires | 181 | | | |
| 22.7 | Fork | 181 | | | |
| 22.8 | Shock absorber | 182 | | | |

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop. There, your motorcycle will be optimally cared for by specially trained experts using the specialist tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.

1 MEANS OF REPRESENTATION

1.2 Formats used

The typographical formats used in this document are explained below.

| | |
|--------------------------------|---|
| Specific name | Identifies a proprietary name. |
| Name® | Identifies a protected name. |
| Brand™ | Identifies a brand available on the open market. |
| <u>Underlined terms</u> | Refer to technical details of the vehicle or indicate technical terms that are explained in the glossary. |

2.1 Use definition - intended use

KTM sport motorcycles are designed and constructed to meet the normal demands of regular road operation but not for use on race courses or offroad.



Info

The motorcycle is only authorized for operation on public roads in the homologated version.

2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Degrees of risk and symbols

**Danger**

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.

**Warning**

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.

**Caution**

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.

**Warning**

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencer, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving part of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

2.6 Safe operation



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

An appropriate driver's license is needed to ride the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

2.7 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, KTM recommends that you only operate the vehicle while wearing protective clothing.

2.8 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite**®) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

2.9 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to advise you.

2.10 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and maintain your motorcycle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer.

The Owner's Manual is an important component of the vehicle and must be handed over to the new owner if the vehicle is sold.

3.1 Manufacturer and implied warranty

The work specified in the service schedule may only be performed in an authorized KTM workshop and must be recorded in both the Service & Warranty Booklet and in **KTM Dealer.net**, otherwise any warranty coverage will become void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the warranty. Additional information on the manufacturer or implied warranty and the procedures involved can be found in the Service & Warranty Booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use operating and auxiliary substances (such as fuel and lubricants) as specified in the Owner's Manual.

3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss. Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized KTM dealer will be glad to advise you.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.
International KTM Website: <http://www.ktm.com>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. Incorrect adjustment and tuning of the engine and chassis can lead to damage and breakage of components.

Use of the vehicle under difficult conditions, such in rain, high heat or with a heavy load, can lead to considerably more rapid wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.6 Customer service

Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.

International KTM Website: <http://www.ktm.com>

4 VIEW OF VEHICLE

4.1 View of vehicle, front left side (example)




4 VIEW OF VEHICLE

| | |
|----|---|
| 1 | Hand brake lever (📖 p. 23) |
| 2 | Clutch lever (📖 p. 23) |
| 3 | Handrails (📖 p. 39) |
| 4 | Filler cap |
| 5 | Engine number (📖 p. 21) |
| 6 | Shift lever (📖 p. 40) |
| 7 | Side stand (📖 p. 41) |
| 8 | Seat unlocking (📖 p. 38) |
| 9 | Compression damping of the shock absorber (📖 p. 65) |
| 10 | Passenger footrest (📖 p. 39) |

4 VIEW OF VEHICLE


4.2 View of vehicle, rear right side (example)

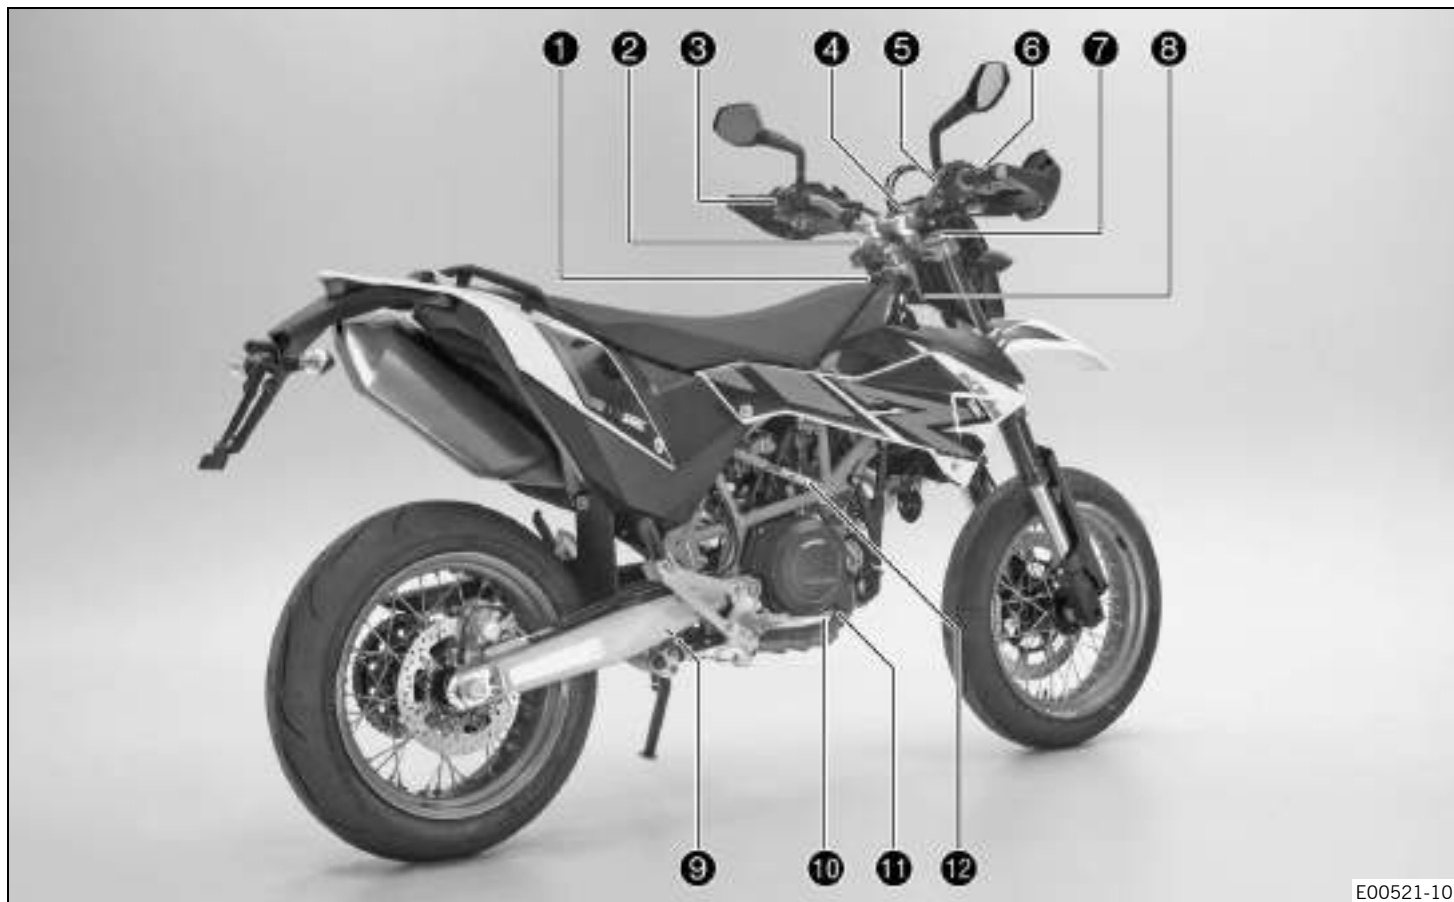

4 VIEW OF VEHICLE


| | |
|----|------------------------------------|
| 1 | Ignition/steering lock (📖 p. 27) |
| 2 | Fork compression adjustment |
| 3 | Light switch (📖 p. 25) |
| 3 | Turn signal switch (📖 p. 25) |
| 3 | Horn button (📖 p. 24) |
| 4 | Function buttons (📖 p. 28) |
| 4 | Indicator lamps (📖 p. 29) |
| 5 | Emergency OFF switch (📖 p. 26) |
| 5 | Electric starter button (📖 p. 26) |
| 6 | Throttle grip (📖 p. 24) |
| 7 | Fork rebound adjustment |
| 8 | Chassis number (📖 p. 20) |
| 9 | Shock absorber, rebound adjustment |
| 10 | Foot brake lever (📖 p. 41) |
| 11 | Level viewer, engine oil |
| 12 | Type label (📖 p. 20) |

5.1 Chassis number

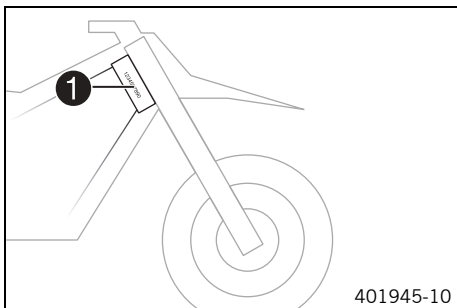

The chassis number **1** is stamped on the steering head on the right.

5.2 Type label

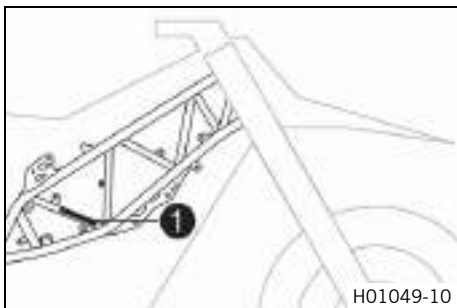

The type label **1** is located on the right side of the frame.

5.3 Key number




The key number **1** can be found on the **KEYCODECARD**.



Info


You need the key number to order a spare key. Keep the **KEYCODECARD** in a safe place.

5.4 Engine number

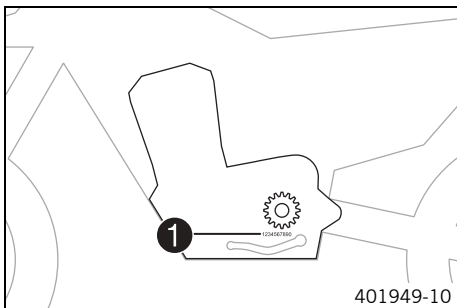


The engine number **1** is stamped on the left side of the engine under the engine sprocket.

5.5 Fork part number

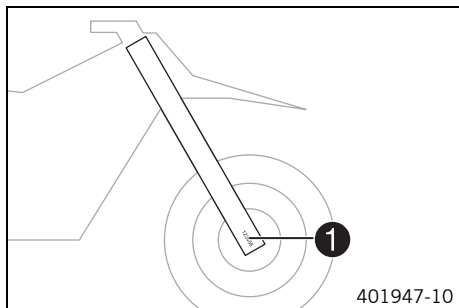

The fork part number ❶ is stamped on the inner side of the fork stub.

5.6 Shock absorber article number

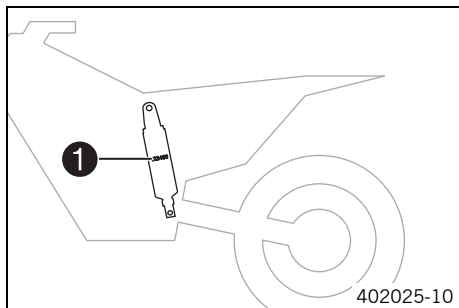


The shock absorber article number ❶ is on the left side of the shock absorber.

6.1 Clutch lever



The clutch lever ❶ is fitted on the left side of the handlebar.
The clutch is hydraulically operated and self-adjusting.

6.2 Hand brake lever

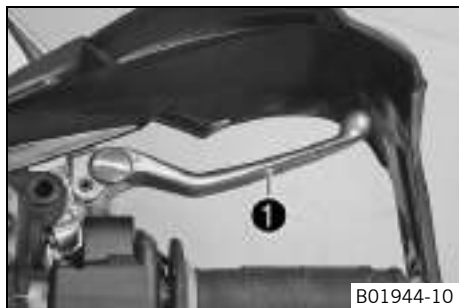

The hand break lever ❶ is fitted on the right side of the handlebar.
The hand brake lever operates the front brake.

6.3 Throttle grip



B01945-10

The throttle grip ❶ is fitted on the right side of the handlebar.



6.4 Horn button



B01946-10

The horn button ❶ is fitted on the left side of the handlebar.

Possible states



- Horn button  in neutral position
- Horn button  pressed – The horn is operated in this position.

6.5 Light switch



The light switch ❶ is fitted on the left side of the handlebar.

Possible states



| | |
|---|---|
|  | Low beam on – Light switch is turned downward. In this position, the low beam and tail light are switched on. |
|  | High beam on – Light switch is turned upward. In this position, the high beam and tail light are switched on. |

6.6 Turn signal switch



The turn signal switch ❶ is fitted on the left side of the handlebar.

Possible states

| | |
|---|---|
| | Turn signal off |
|  | Turn signal light, left, on – Turn signal switch pressed to the left. The turn signal switch returns automatically to the central position after use. |
|  | Turn signal light, right, on – Turn signal switch pressed to the right. The turn signal switch returns automatically to the central position after use. |



To switch off the turn signal light, press the turn signal switch towards the switch case.

6.7 Emergency OFF switch



The emergency OFF switch ❶ is fitted on the right side of the handlebar.

Possible states

| | |
|---|---|
|  | Emergency OFF switch off – In this position, the ignition circuit is interrupted, a running engine stops, and the engine cannot be started. |
|  | Emergency OFF switch on – This position is necessary for operation as the ignition circuit is closed. |

6.8 Electric starter button



The electric starter button ❶ is fitted on the right side of the handlebar.

Possible states

- Electric starter button ❸ in basic position
- Electric starter button ❸ pressed – In this position, the electric starter is actuated.

6.9 Ignition/steering lock



The ignition/steering lock ❶ is located in front of the seat.

Possible states

| | |
|--|---|
| | <p>Ignition OFF – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start. The ignition key can be removed.</p> |
| | <p>Ignition ON – In this position, the ignition circuit is closed and the engine can be started.</p> |
| | <p>Steering locked – In this position, the ignition circuit is interrupted and the steering locked. The ignition key can be removed.</p> |

6.10 Combination instrument

6.10.1 Combination instrument overview



The combination instrument is installed in front of the handlebar. The combination instrument is divided into 4 function areas.

- ❶ Function buttons (📖 p. 28)
- ❷ Tachometer (📖 p. 28)
- ❸ Indicator lamps (📖 p. 29)
- ❹ Display (📖 p. 30)

6.10.2 Function buttons



You can change the display mode with the **MODE** button ❶.

Possible display modes are distance traveled (**ODO**), trip master 1 (**TRIP 1**) and trip master 2 (**TRIP 2**).

Press the **SET** button ❷ to reset the trip master 1 function (**TRIP 1**) and trip master 2 function (**TRIP 2**) to **0.0**.

The ABS can be switched off with button ❸.

6.10.3 Tachometer



The tachometer ❶ shows the engine speed in revolutions per minute.

The red marking ❷ shows the excess speed range of the engine.










6.10.4 Indicator lamps



401428-01

The indicator lamps offer additional information about the operating state of the motorcycle.

Possible states

| | |
|---|---|
|  | The turn signal indicator lamp flashes green simultaneously with the turn signal – The turn signal is switched on. |
|  | The idling speed indicator lamp lights up green – The transmission is shifted to idle. |
|  | The high beam indicator lamp lights up blue – The high beam is switched on. |
|  | The temperature warning lamp lights up red – The coolant temperature has reached a critical value. |
|  | The low fuel warning lamp lights up yellow – The fuel level has reached the reserve mark. The display switches to TRIP F . |
|  | The oil pressure warning lamp lights up red – The oil pressure is too low. |
|  | FI warning lamp (MIL) lights up/flashes yellow – The <u>OBD</u> has detected an emission- or safety-critical fault. |
|  | The battery warning lamp lights up red – The voltage in the vehicle system is too low. |
|  | ABS warning lamp lights up/flashes yellow – Status or error messages relating to <u>ABS</u> . |

6.10.5 Display



When the ignition is switched on, all display segments light up for one second as a function check.



LEnGth

After the display function check, the wheel circumference **LEnGth** is displayed for one second.



Info

The number 1870 mm equals the circumference of the 17" front wheel with a series production tire.

The display then changes to the last selected mode.

6.10.6 Speed display



The speed ❶ is shown in kilometers per hour **km/h** or in miles per hour **mph**.

6.10.7 Setting the kilometers or miles




Info

If the unit is changed, the value is retained and converted accordingly.
Make the setting according to the country.

Condition

The motorcycle is stationary.



- Switch on the ignition by turning the ignition key to position **ON** .
- Press the **MODE** button repeatedly until the **ODO** display mode is active.
- Keep the **MODE** button pressed until the display mode changes from **km/h** to **mph** or from **mph** to **km/h**.

6.10.8 Time



The time is shown in area **1** of the display.



Info


The time must be reset after the battery was disconnected or the fuse was removed.

6.10.9 Setting the clock

Condition

The motorcycle is stationary.



- Switch on the ignition by turning the ignition key to position **ON** .
- Press the **MODE** button repeatedly until the **ODO** mode is active.
- Keep the **MODE** button and the **SET** button pressed simultaneously.
 - ✓ The time display begins to flash.
- Press the **MODE** button to set the hour.
- Press the **SET** button to set the minute.
- Keep the **MODE** button and the **SET** button pressed simultaneously.
 - ✓ The time is set.

6.10.10 ODO display



In the **ODO** display mode, the total distance traveled is shown in kilometers or miles.



Info

This value is retained, even if the battery is disconnected from the vehicle and/or the fuse blows.

6.10.11 Setting/resetting display TRIP 1




Info

The **TRIP 1** trip counter is always running and counts up to **999.9**.

The trip counter can be used to measure the distance covered during trips or between two refueling stops. After the value **999.9** is reached, the trip counter starts at **0.0** again.



- Switch on the ignition by turning the ignition key to position **ON** .
- Press the **MODE** button repeatedly until the **TRIP 1** mode is active.
- Keep the **SET** button pressed.
- ✓ The **TRIP 1** display is set to **0.0**.

6.10.12 Setting/resetting display TRIP 2




Info

The **TRIP 2** trip counter is always running and counts up to **999.9**.

The trip counter can be used to measure the distance covered during trips or between two refueling stops. After the value **999.9** is reached, the trip counter starts at **0.0** again.



- Switch on the ignition by turning the ignition key to position **ON** .
- Press the **MODE** button repeatedly until the **TRIP 2** mode is active.
- Keep the **SET** button pressed.
- ✓ The **TRIP 2** display is set to **0.0**.

6.10.13 TRIP F display



If the fuel level drops to the reserve mark, the display automatically changes to **TRIP F** and starts to count from **0.0**, regardless of the previous display mode.



Info


The low fuel warning lamp lights up in parallel to the **TRIP F** display.

6.10.14 GEAR display



In display mode **GEAR**, the gear currently engaged is displayed.

6.10.15 Coolant temperature indicator

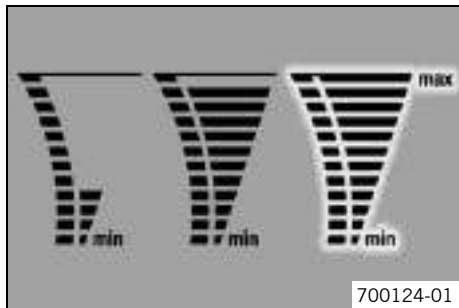

The temperature display consists of 12 bars. The more bars that light up, the hotter the coolant. When the upper bar lights up, all bars in the display begin to flash and the temperature warning lamp lights up.

Possible states

- Engine cold – Up to four bars light up.
- Engine warm – Five to eleven bars light up.
- Engine hot – All twelve bars flash.

6.11 Opening the filler cap



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.



- Lift cover **1** of filler cap and insert the ignition key.
- Turn the ignition key 90° counterclockwise and remove the filler cap.



Info

The filler cap has a fuel tank breather.

6.12 Closing filler cap



- Put the filler cap back on and turn the ignition key 90° clockwise.
- Remove the ignition key and fold down the cover.

6.13 Seat unlocking



The loop ❶ unlocks the seat.

6.14 Handrails



The handrails **1** are used for moving the motorcycle around.
When you have a passenger, the passenger can hold on the handrails during the journey.

6.15 Passenger footrest




The passenger footrests are foldable.


Possible states

- Passenger footrest folded in – For operation without a passenger.
- Passenger footrest folded out – For operation with a passenger.

6.16 Shift lever

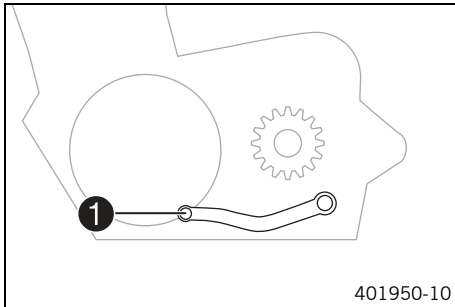


The shift lever ❶ is mounted on the left side of the engine.

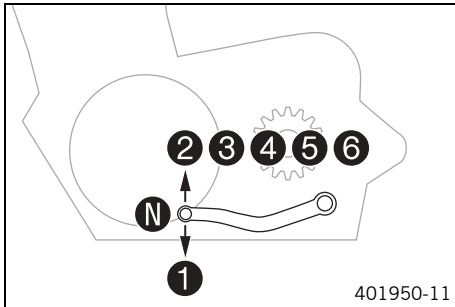


The gear positions can be seen in the photograph.
The neutral or idle position is between the first and second gears.

6.17 Foot brake lever

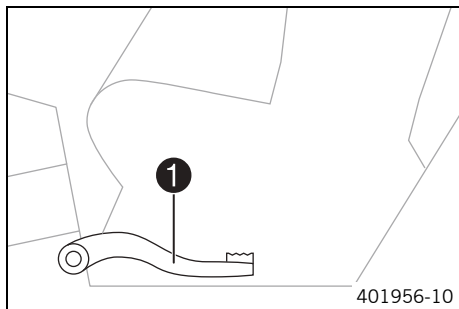

Foot brake lever ❶ is located in front of the right footrest. The rear brake is engaged with the foot brake lever.

6.18 Side stand

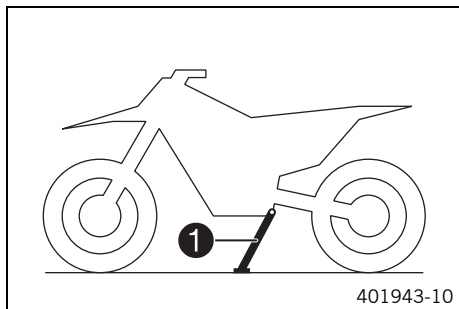

The side stand ❶ is located on the left side of the vehicle. The side stand is used for parking the motorcycle.



Info

The side stand must be folded up during motorcycle use. The side stand is coupled with the safety starting system – see the riding instructions.

Possible states

- Side stand folded out – The vehicle can be supported on the side stand. The safety starting system is active.
- Side stand folded in – This position is mandatory when riding the motorcycle. The safety starting system is inactive.

7.1 Advice on first use



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.



Warning

Danger of accidents Reduced road grip with new tires.

- New tires have a smooth rolling surface and therefore cannot provide full road grip. The entire rolling surface must be roughened in the first 200 kilometers (124.3 miles) by moderate riding at alternating angles. The full grip levels are not achieved until the tires have been run in.



Warning

- Danger of accidents** The brake system fails in the event of overheating.
If the foot brake lever is not released, the brake linings drag continuously.
- Take your foot off the foot brake lever when you are not braking.
-



Info

When using your vehicle, remember that others may feel disturbed by excessive noise.

- Make sure that the pre-delivery inspection work has been carried out by an authorized KTM workshop.
 - ✓ You receive a delivery certificate and the Service and Warranty Booklet at vehicle handover.
- Before your first trip, read the entire Owner's Manual carefully.
- Get to know the controls.
- Adjust the basic position of the clutch lever. (📖 p. 87)
- Adjust the basic position of the hand brake lever. (📖 p. 91)
- Adjust the basic position of the foot brake lever. 🦶 (📖 p. 97)
- Get used to handling the motorcycle on a suitable piece of land before making a longer trip. Try also to ride as slowly as possible and in a standing position to get a better feeling for the motorcycle.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- Run the engine in. (📖 p. 43)

7.2 Running in the engine

- During the running-in phase, do not exceed the specified engine speed.

Guideline

| | |
|-------------------------------------|-----------|
| Maximum engine speed | |
| During the first: 1,000 km (620 mi) | 6,000 rpm |
| After the first: 1,000 km (620 mi) | 7,800 rpm |

- Avoid fully opening the throttle!

7.3 Loading the vehicle



Warning

Danger of accidents Unstable handling characteristics.

- Do not exceed the maximum permitted weight and axle loads. The overall weight consists of: motorcycle operational and with a full tank, driver and passenger with protective clothing and helmet, baggage.



Warning

Danger of accidents Unstable handling characteristics due to incorrect mounting of suitcase and/or tank rucksack.

- Mount and secure suitcase and tank rucksack according to the manufacturer's instructions.



Warning

Danger of accidents Unstable handling characteristics at high speed.

- Adapt your speed according to your payload. Ride more slowly if your motorcycle is loaded with cases or other baggage.
Maximum speed with baggage 130 km/h (80.8 mph)



Warning

Danger of accidents Risk of breakage of suitcase system.

- If you have fitted suitcases on your motorcycle, read the manufacturer's specifications concerning the maximum payload.

7 PREPARING FOR USE



Warning

Danger of accidents Poor visibility for other road users due to slipped baggage.

- If the tail light is covered, you are less visible to traffic behind you, especially when it is dark. Check that your baggage is fixed properly at regular intervals.



Warning

Danger of accidents Changed handling characteristics and longer stopping distance with excessive payload.

- Adapt your speed according to your payload.



Warning

Danger of accidents Unstable handling characteristics due to slipped baggage.

- Check the way your baggage is fixed regularly.



Warning

Danger of burns A hot exhaust system can burn baggage.

- Fasten your baggage in such a way that it cannot be burned or singed by the hot exhaust system.

-
- If you carry luggage, make sure you secure it firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.
 - Do not exceed the maximum permissible weight and the maximum permissible axle loads.

Guideline

| | |
|-------------------------------------|------------------|
| Maximum permissible overall weight | 350 kg (772 lb.) |
| Maximum permissible front axle load | 150 kg (331 lb.) |
| Maximum permissible rear axle load | 200 kg (441 lb.) |

8.1 Performing checks and vehicle care when preparing for use



Info

Before each use, check the state and roadworthiness of the vehicle.
Make sure that the vehicle is in perfect technical condition before use.

- Check the engine oil level. (📖 p. 149)
- Check the front brake fluid level. (📖 p. 93)
- Check the rear brake fluid level. (📖 p. 98)
- Check the front brake linings. (📖 p. 95)
- Check the rear brake linings. (📖 p. 101)
- Check the brake system function.
- Check the coolant level. (📖 p. 140)
- Check the chain for dirt. (📖 p. 79)
- Check the chain tension. (📖 p. 80)
- Check the tire condition. (📖 p. 111)
- Check the tire air pressure. (📖 p. 113)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check that the electrical equipment is functioning correctly.
- Check that baggage is correctly secured.
- Sit on the motorcycle and check the rear mirror setting.
- Check the fuel level.

8.2 Starting



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.



Caution


Danger of accidents If the vehicle is operated with a discharged battery or without a battery, electronic components and safety equipment may be damaged.

- Never operate the vehicle with a discharged battery or without a battery.

Note

Engine damage High revving speed with a cold engine negatively impacts the lifespan of the engine.

- Always run the engine warm at a low speed.

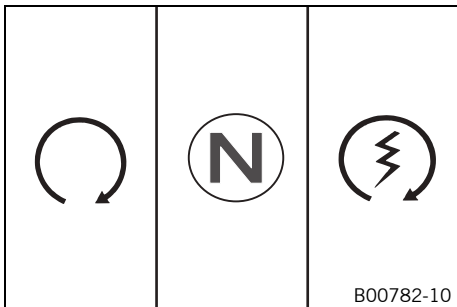

- Turn the emergency OFF switch to the position
- Switch on the ignition by turning the ignition key to position **ON**
- ✓ After you switch on the ignition, you can hear the fuel pump working for about two seconds. The function check of the combination instrument is run at the same time.
- ✓ The ABS warning lamp lights up and goes back out after starting off.
- Shift gear to neutral.
- ✓ The green idling speed indicator lamp **N** lights up.
- Press the electric starter button

i Info

Do not press the electric starter button until the combination instrument function check is finished.

When starting, **DO NOT** open the throttle. If you open the throttle during the starting procedure, fuel is not injected by the engine management system and the engine cannot start.

Press the starter for a maximum of 5 seconds. Wait for a least 5 seconds before trying again.

This motorcycle is equipped with a safety starting system. You can only start the engine if the transmission is in neutral or if the clutch lever is pulled when a gear is engaged. If the side stand is folded out and you shift into gear and release the clutch, the engine stops.

- Take the weight off the side stand and swing it back up with your foot as far as it will go.

Switching off ABS

KTM recommends riding with ABS at all times. However, situations may arise in which ABS is not advantageous.

Condition

Vehicle stationary, engine running.

- Press button **1** for 3 – 5 seconds.
 - ✓ The ABS warning lamp starts flashing; ABS is deactivated.



8.3 Starting off

- Pull the clutch lever, engage 1st gear, release the clutch lever slowly and simultaneously open the throttle carefully.

8.4 Shifting, riding



Warning

Danger of accidents Abrupt load alterations can cause the vehicle to get out of control.

- Avoid abrupt load alterations and sudden braking actions, and adapt your speed to the road conditions.



Warning

Danger of accidents If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



Warning

Danger of accidents Malfunctions caused by incorrect ignition key position.

- Do not change the ignition key position during a journey.



Warning

Danger of accidents Distraction from traffic activity by adjustments to the vehicle.

- Make all adjustments when the vehicle is at a standstill.



Warning

Risk of injury Falling off of the passenger.

- The passenger must be seated properly on the passenger seat and hold on to the front rider or the grab handles. The feet must be positioned on the passenger footrests. Note the regulations governing the minimum age of passengers.



Warning

Danger of accidents Danger of accidents caused by dangerous driving.

- Comply with traffic regulations and ride defensively and foresightedly to detect sources of danger early on.



Warning

Danger of accidents Reduced road grip with cold tires.

- On every journey, take the first miles carefully at moderate speed until the tires reach operating temperature and optimal road grip is ensured.



Warning

Danger of accidents Reduced road grip with new tires.

- New tires have a smooth rolling surface and therefore cannot provide full road grip. The entire rolling surface must be roughened in the first 200 kilometers (124.3 miles) by moderate riding at alternating angles. The full grip levels are not achieved until the tires have been run in.



Warning

Danger of accidents Unstable handling characteristics.

- Do not exceed the maximum permitted weight and axle loads. The overall weight consists of: motorcycle operational and with a full tank, driver and passenger with protective clothing and helmet, baggage.



Warning

Danger of accidents Unstable handling characteristics due to slipped baggage.

- Check the way your baggage is fixed regularly.



Warning

Danger of accidents Lack of roadworthiness.

- After a fall, check the vehicle as usual before preparing for use.

Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt will enter the engine without an air filter.

- Never start to use the vehicle without an air filter.

Note


Engine failure Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
- Allow the engine and cooling system to cool down.
- Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.



Info

If unusual noises arise during operation, stop immediately, switch off the engine, park the vehicle properly, and contact an authorized KTM workshop.

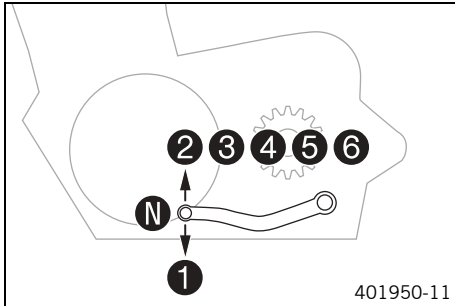

- Shift into a higher gear when conditions allow (incline, road situation, etc.).
- Release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever, and open the throttle.



Info

You can see the positions of the 6 forward gears in the figure. The neutral or idle position is between the first and second gears. First gear is used for starting off or for steep inclines.

The operating temperature is reached when 5 bars of the temperature indicator light up.

- After reaching maximum speed by fully opening the throttle grip, turn the throttle back so it is $\frac{3}{4}$ open. This will barely reduce the speed but fuel consumption will be considerably lower.
- Accelerate only up to a speed suitable for the road surface and weather conditions. Particularly in bends, do not shift, and accelerate very carefully.
- Brake if necessary and close the throttle at the same time in order to shift down.

- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and open the throttle or shift again.
- If the engine stalls (e.g. at a crossroads), just pull the clutch lever and press the electric starter button. You do not have to shift into neutral.
- Switch off the engine if running at idle or standing for a long time.
- Avoid frequent and longer slipping of the clutch. This heats the engine oil, the engine, and the cooling system.
- Ride with a lower engine speed instead of with a high engine speed and a slipping clutch.
- Stop immediately if the **FI** warning lamp (**MIL**) lights up during a trip. When you shift to neutral, the **FI** warning lamp (**MIL**) starts to flash.



Info

From the flash rhythm you can deduce a two-digit number, the so-called blink code. The blink code tells you which component is affected by a malfunction.

8.5 Applying the brakes



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.



Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)

**Warning**

Danger of accidents The brake system fails in the event of overheating. If the foot brake lever is not released, the brake linings drag continuously.

- Take your foot off the foot brake lever when you are not braking.

**Warning**

Danger of accidents Longer stopping distance due to higher overall weight.

- Take the longer stopping distance into account when carrying a passenger and baggage.

**Warning**

Danger of accidents Delayed brake action on salted roads.

- There may be salt deposits on the brake discs. In order to restore the normal braking efficiency, you will need to remove the deposits from the discs by carefully applying the brakes.

**Warning**

Danger of accidents Greater stopping distance due to ABS.

- Braking should be appropriate to the driving situation and the road conditions.

**Warning**

Danger of accidents Very forceful braking can cause the wheels to block.


- ABS must be switched on to be effective.


**Warning**

Danger of accidents The rear wheel can lock due to the engine braking effect.

- Pull in the clutch, if you perform emergency or full braking, or if you brake on a slippery ground.

-
- When braking, release the throttle and apply the front and rear brakes at the same time.

 **Info** When the ABS is enabled, you can achieve maximum braking power even on low grip surfaces such as sandy, wet, or slippery terrain without locking of the wheels.

 **Warning**
Danger of accidents Banked or laterally sloping ground reduces the maximum possible delay.


- If possible finish braking before going into a bend.

- Always finish braking before you go into a bend. Change down to a lower gear appropriate to your road speed.
- Use the braking effect of the engine on long downhill stretches. Change down one or two gears, but do not over-rev the engine. You will have to apply the brakes far less frequently as a result and the brake system will not overheat.

8.6 Stopping, parking

 **Warning**
Risk of misappropriation Usage by unauthorized persons.

- Never leave the vehicle unattended while the engine is running. Secure the vehicle against use by unauthorized persons. If you leave the vehicle, lock the steering and remove the ignition key.

 **Warning**
Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
 - Allow the vehicle to cool down before covering it.
-

- Apply the brakes on the motorcycle.
 - Shift gear to neutral.
 - Switch off the ignition by turning the ignition key to position **OFF** ☒.
-



Info

If the engine is switched off with the emergency OFF switch and the ignition remains switched on at the ignition lock, power continues to flow to most power consumers. This discharges the battery. You should therefore always switch off the engine with the ignition key – the emergency OFF switch is intended for emergencies only.

- Park the motorcycle on a firm surface.
- Swing the side stand forward with your foot as far as it will go and lean the vehicle on it.
- Lock the steering by turning the handlebar fully to the left, pressing down the ignition key to position ☒ and turning it to position ☒. To make the steering lock engage more easily, move the handlebar a little to the left and right. Remove the ignition key.

8.7 Transport

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

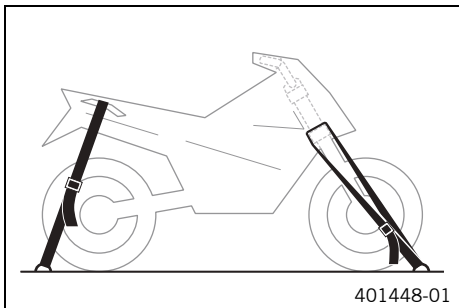

- Switch off the engine and remove the ignition key.
- Use tension belts or other suitable devices to secure the motorcycle against accidents or falling over.

8.8 Refueling



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.

Note

Material damage Inadequate fuel quality causes the fuel filter to quickly become clogged.

In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.


- Refuel only with clean fuel that meets the specified standards. (Your authorized KTM workshop will be glad to help.)



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.
-

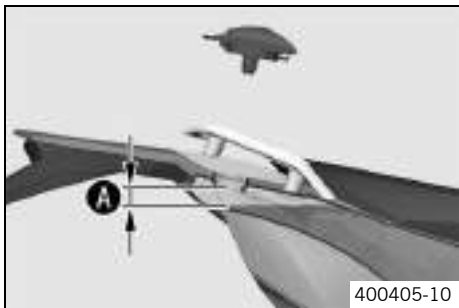


- Switch off the engine.
- Open the filler cap. (📖 p. 36)
- Fill the fuel tank with fuel up to measurement **A**.

Guideline

| | |
|----------------------|-----------------|
| Measurement A | 20 mm (0.79 in) |
|----------------------|-----------------|

| | | |
|-----------------------------------|-------------------|--|
| Total fuel tank capacity, approx. | 12 l (3.2 US gal) | Super unleaded (ROZ 95/RON 95/PON 91) (📖 p. 190) |
|-----------------------------------|-------------------|--|

- Close the filler cap. (📖 p. 38)
- Press the **SET** button **2** for two seconds.
- ✓ The fuel level warning lamp **1** switches off. **TRIP F** is set to **0.0** and the display returns to the previous display mode.

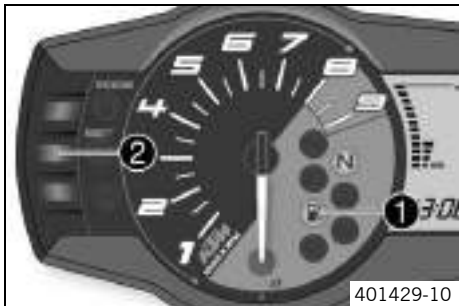

i Info
 If you do not press the **SET** button **2**, the reset takes place automatically after approx. three minutes.

9 SERVICE SCHEDULE

9.1 Additional information

Any further work that results from the required work or from the recommended work must be ordered separately and can be invoiced separately.

9.2 Required work

| | Every two years | | | | |
|--|---|---|---|---|---|
| | Every year | | | | |
| | every 20,000 km (12,400 mi) | | | | |
| | every 10,000 km (6,200 mi) / after every sporting use | | | | |
| | after 1,000 km (620 mi) | | | | |
| Read out the fault memory using the KTM diagnostics tool. 🛠️ | ○ | ● | ● | ● | ● |
| Check that the electrical system is functioning properly. | ○ | ● | ● | ● | ● |
| Change the engine oil and filter, clean the oil screens. 🛠️ (📖 p. 150) | ○ | ● | ● | ● | ● |
| Check the front brake linings. (📖 p. 95) | ○ | ● | ● | ● | ● |
| Check the rear brake linings. (📖 p. 101) | ○ | ● | ● | ● | ● |
| Check the brake discs. (📖 p. 92) | ○ | ● | ● | ● | ● |
| Check the brake lines for damage and leakage. | ○ | ● | ● | ● | ● |
| Change the front brake fluid. 🛠️ | | | | | ● |
| Change the rear brake fluid. 🛠️ | | | | | ● |
| Change the hydraulic clutch fluid. 🛠️ | | | | | ● |
| Check the front brake fluid level. (📖 p. 93) | ○ | ● | ● | ● | |
| Check the rear brake fluid level. (📖 p. 98) | ○ | ● | ● | ● | |
| Check/correct the fluid level of the hydraulic clutch. (📖 p. 88) | | ● | ● | ● | |
| Check the free travel of the foot brake lever. (📖 p. 96) | ○ | ● | ● | ● | ● |

9 SERVICE SCHEDULE

| | Every two years | | | | |
|---|---|---|---|---|---|
| | Every year | | | | |
| | every 20,000 km (12,400 mi) | | | | |
| | every 10,000 km (6,200 mi) / after every sporting use | | | | |
| | after 1,000 km (620 mi) | | | | |
| Check the shock absorber and fork for leaks. Perform a fork service and shock absorber service as needed and depending on how the vehicle is used. 🛠️ | ○ | ● | ● | ● | ● |
| Clean the dust boots of the fork legs. (📖 p. 74) | | ● | ● | | |
| Check the steering head bearing play. | ○ | ● | ● | ● | ● |
| Check the tire condition. (📖 p. 111) | ○ | ● | ● | ● | ● |
| Check the tire air pressure. (📖 p. 113) | ○ | ● | ● | ● | ● |
| Check the spoke tension. (📖 p. 114) | ○ | ● | ● | ● | ● |
| Check for rim run-out. 🛠️ | ○ | ● | ● | ● | ● |
| Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 83) | | ● | ● | ● | ● |
| Check the chain tension. (📖 p. 80) | ○ | ● | ● | ● | ● |
| Change fuel screen. 🛠️ | ○ | ● | ● | ● | ● |
| Change the spark plug. 🛠️ | | | ● | | |
| Check the valve clearance. 🛠️ | | ● | ● | | |
| Check the antifreeze and coolant level. (📖 p. 138) | ○ | ● | ● | ● | ● |
| Check the cables for damage and routing without sharp bends. 🛠️ | | ● | ● | ● | ● |
| Change the air filter. Clean the air filter box. 🛠️ | | ● | ● | | |
| Check the fuel pressure. 🛠️ | | ● | ● | ● | ● |
| Check the headlight setting. (📖 p. 135) | ○ | ● | ● | | |

9 SERVICE SCHEDULE

| | Every two years | | | | |
|--|---|---|---|---|---|
| | Every year | | | | |
| | every 20,000 km (12,400 mi) | | | | |
| | every 10,000 km (6,200 mi) / after every sporting use | | | | |
| | after 1,000 km (620 mi) | | | | |
| Check that the radiator fan is functioning properly. 🐦 | ○ | ● | ● | ● | ● |
| Final check: Check the vehicle is roadworthy and take a test ride. | ○ | ● | ● | ● | ● |
| Read out the fault memory using the KTM diagnostics tool after a test ride. 🐦 | ○ | ● | ● | ● | ● |
| Check the CO adjustment using the KTM diagnostics tool. 🐦 | | ● | ● | | |
| Make the service entry in KTM Dealer.net and in the Service and Warranty Booklet. 🐦 | ○ | ● | ● | ● | ● |

- One-time interval
- Periodic interval


9 SERVICE SCHEDULE

9.3 Recommended work

| | | | Every four years | | |
|--|---|-----------------------------|------------------|---|---|
| | | | Every year | | |
| | | every 30,000 km (18,600 mi) | | | |
| | every 10,000 km (6,200 mi) / after every sporting use | | | | |
| | after 1,000 km (620 mi) | | | | |
| Check the frame. 🛠️ | | | • | | |
| Check the swingarm. 🛠️ | | | • | | |
| Check the swingarm bearing for play. 🛠️ | | • | • | | |
| Check the wheel bearing for play. 🛠️ | ○ | • | • | • | • |
| Grease all moving parts (e.g. side stand, hand lever, chain, etc.) and check for smooth operation. 🛠️ | ○ | • | • | • | • |
| Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and sleeves for cracking, leaks, and incorrect routing. 🛠️ | | • | • | • | • |
| Check the screws and nuts for tightness. 🛠️ | ○ | • | • | • | • |
| Change the coolant. 🛠️ | | | | | • |

- One-time interval
- Periodic interval

10.1 Fork/shock absorber

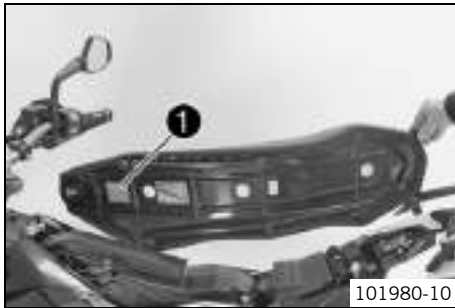

The fork and the shock absorber offer many options of adapting the chassis to your riding style and the payload.

i Info


To help you adapt the vehicle, we have summarized our findings in Table ①. You can find the table on the underside of the seat.

These adjustments should be understood as a guideline and should always be the basis of your own personal suspension setting. Do not change the adjustments at random or by more than $\pm 40\%$, since otherwise the riding characteristics could deteriorate, particularly at high speeds.

10.2 Adjusting the compression damping of the fork

i Info

The hydraulic compression damping determines the fork suspension behavior.

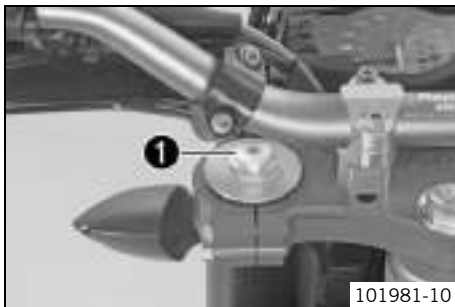

- Turn white adjusting screw ① all the way clockwise.

i Info

Adjusting screw ① is located at the upper end of the left fork leg. The compression damping is located in left fork leg **COMP** (white adjusting screw). The rebound damping is located in right fork leg **REB** (red adjusting screw).

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

| Compression damping | |
|---------------------|-----------|
| Comfort | 20 clicks |
| Standard | 15 clicks |
| Sport | 10 clicks |
| Full payload | 10 clicks |



Info


Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.3 Adjusting the rebound damping of the fork



Info

The hydraulic rebound damping determines the fork suspension behavior.

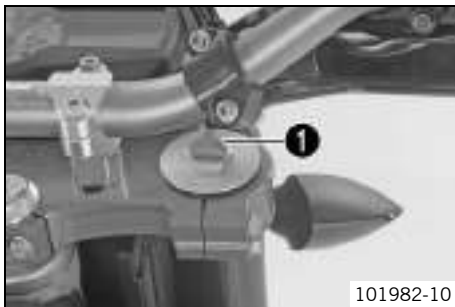

- Turn red adjusting screw ① all the way clockwise.



Info

Adjusting screw ① is located at the upper end of the right fork leg. The rebound damping is located in right fork leg **REB** (red adjusting screw). The compression damping is located in left fork leg **COMP** (white adjusting screw).

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

| Rebound damping | |
|-----------------|-----------|
| Comfort | 20 clicks |
| Standard | 15 clicks |
| Sport | 10 clicks |
| Full payload | 10 clicks |



Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.4 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed.

High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed setting, for example, has an effect when riding over an asphalt edge: the rear wheel suspension compresses quickly.

The low-speed setting, for example, has an effect when riding over long ground swells: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is gradual. Thus, changes in the high-speed range affect the compression damping in the low-speed range and vice versa.

10.5 Adjusting the low-speed compression damping of the shock absorber



Caution

Risk of injury Parts of the shock absorber will fly off if the shock absorber is disassembled incorrectly.


The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)



Info

The effect of the low-speed setting can be seen in slow to normal compression of the shock absorber.

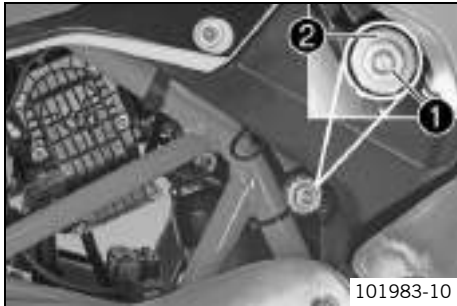

- Turn adjusting screw **1** clockwise with a screwdriver up to the last perceptible click.



Info

Do not loosen fitting **2**!

- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

| Compression damping, low-speed | |
|--------------------------------|-----------|
| Comfort | 25 clicks |
| Standard | 20 clicks |
| Sport | 15 clicks |
| Full load capacity | 15 clicks |



Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.6 Adjusting the high-speed compression damping of the shock absorber



Caution


Risk of injury Parts of the shock absorber will fly off if the shock absorber is disassembled incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)



Info

The effect of the high-speed setting can be seen in fast compression of the shock absorber.

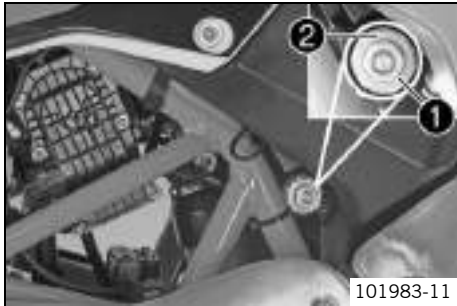

- Turn adjusting screw ❶ all the way clockwise with a socket wrench.



Info

Do not loosen fitting ❷!

- Turn counterclockwise by the number of turns corresponding to the shock absorber type.

Guideline

| Compression damping, high-speed | |
|---------------------------------|-----------|
| Comfort | 2 turns |
| Standard | 1.5 turns |
| Sport | 1 turn |
| Full payload | 1 turn |



Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.7 Adjusting the rebound damping of the shock absorber



Caution

Risk of injury Parts of the shock absorber will fly off if the shock absorber is disassembled incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized KTM workshop will be glad to help.)




- Turn adjusting screw ❶ clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

| Rebound damping | |
|-----------------|-----------|
| Comfort | 20 clicks |
| Standard | 15 clicks |
| Sport | 10 clicks |
| Full payload | 10 clicks |

i Info Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.8 Handlebar position

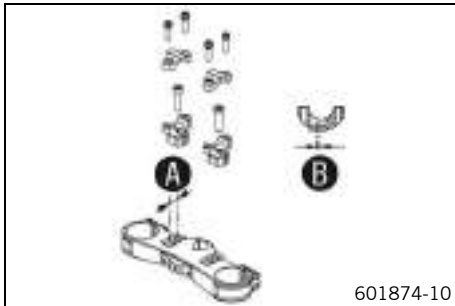

On the upper triple clamp, there are two holes at a distance of ❶ to each other.


| | |
|-----------------|-----------------|
| Hole distance ❶ | 15 mm (0.59 in) |
|-----------------|-----------------|

The holes on the handlebar support are placed at a distance of ❷ from the center.

| | |
|-----------------|-------------------|
| Hole distance ❷ | 3.5 mm (0.138 in) |
|-----------------|-------------------|

The handlebar can be mounted in 4 different positions. In this way, the handlebar can be mounted in the most comfortable position for the rider.

10.9 Adjusting the handlebar position ↩

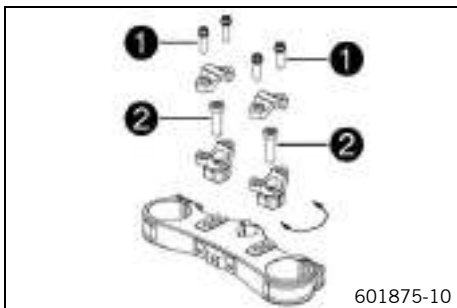

- Remove screws ①. Take off the handlebar clamps. Remove the handlebar and lay it to one side.

i **Info**

Cover the components to protect them against damage.
Do not kink the cables and lines.

- Remove screws ②. Remove the handlebar support.
- Place the handlebar support in the required position. Mount and tighten screws ②.

Guideline

| | | | |
|--------------------------|-----|------------------------|---------------|
| Screw, handlebar support | M10 | 40 Nm (29.5 lbf ft) | Loctite® 243™ |
|--------------------------|-----|------------------------|---------------|

i **Info**

Position the left and right handlebar supports evenly.

- Position the handlebar.

i **Info**

Make sure the cables and wiring are positioned correctly.

- Position the handlebar clamps. Mount screws ① and tighten evenly.

Guideline


| | | | |
|------------------------|----|------------------------|--|
| Screw, handlebar clamp | M8 | 20 Nm (14.8 lbf ft) | |
|------------------------|----|------------------------|--|

11.1 Raising the motorcycle with a lift stand

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

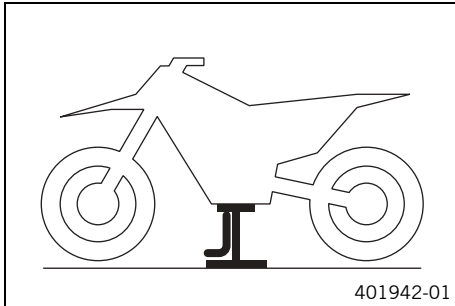

- Raise the motorcycle in the area of the footrest bracket.
 - ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.


11.2 Removing the motorcycle from the lift stand

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

11 SERVICE WORK ON THE CHASSIS

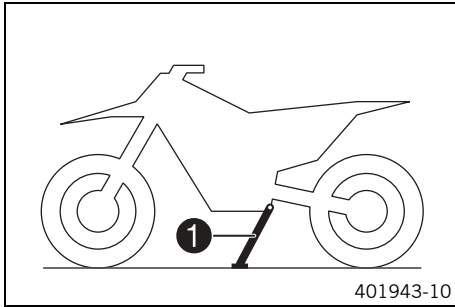


- Remove the motorcycle from the lift stand and rest it on side stand ①.
- Remove the lift stand.

11.3 Raising the motorcycle with the rear wheel stand

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

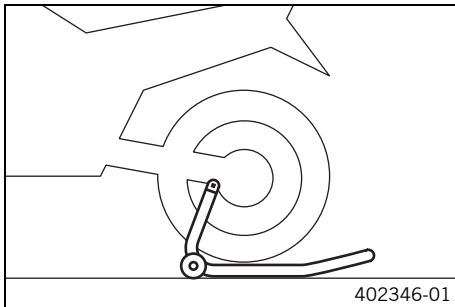

- Insert the adapter into the rear wheel stand and screw into the swingarm on both sides.

| |
|----------------------------------|
| Adapter (61029055110) |
| Lifting gear, rear (61029055400) |


- Position the motorcycle upright, align the stand and raise the motorcycle.

11.4 Removing the rear of the motorcycle from the wheel stand

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

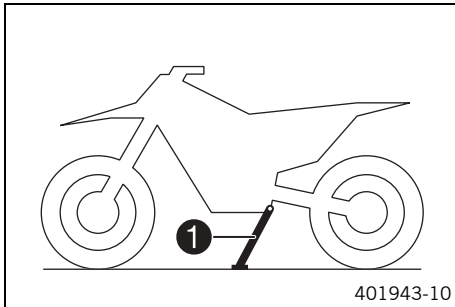

- Secure the motorcycle against falling over.
- Remove the rear wheel stand and lean the vehicle on side stand ①.

11.5 Raising the motorcycle with the front wheel stand


Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

Preparatory work

- Raise the motorcycle with the rear wheel stand. (📖 p. 71)

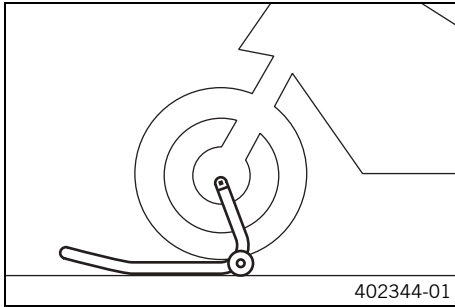

Main work

- Move the handlebar to the straight-ahead position. Align the front wheel stand with the fork legs using the adapters.

Front wheel stand (61029055300)



Info

Always raise the rear of the motorcycle first.


- Raise the front of the motorcycle.

11.6 Taking the motorcycle from the front lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

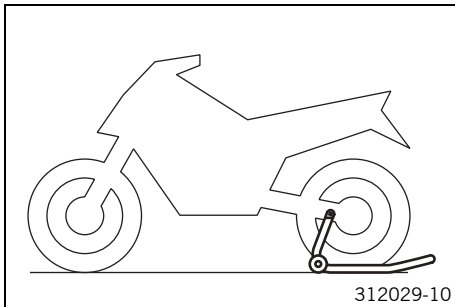

- Secure the motorcycle against falling over.
- Remove the front lifting gear.

11.7 Cleaning the dust boots of the fork legs



Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 70)
- Remove the fork protector. (📖 p. 75)

Main work

- Push dust boots ① of both fork legs downward.

Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
 - Clean the brake discs with brake cleaner when necessary.
-
- Clean and oil the dust boots and inner fork tube of both fork legs.


Universal oil spray (📖 p. 192)

- Press the dust boots back into their installation position.
- Remove excess oil.

Finishing work


- Install the fork protector. (📖 p. 75)
- Remove the motorcycle from the lift stand. (📖 p. 70)

11.8 Removing the fork protector

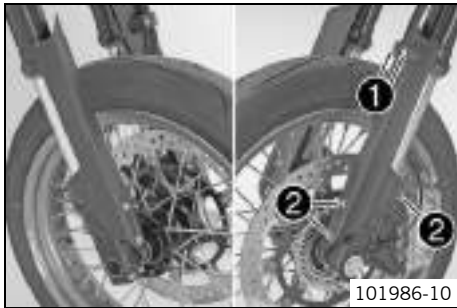

- Remove screws **1** and take off clamp.
- Remove screws **2** on left fork leg. Remove the fork protector.
- Remove the screws on the right fork leg. Remove the fork protector.

11.9 Installing the fork protector

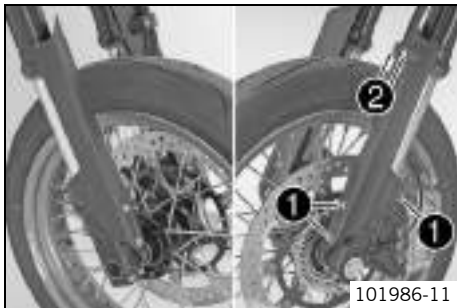

- Position the fork protection on the left fork leg. Mount and tighten screws **1**.

Guideline

| | | |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

- Position the brake line and cable harness. Put the clamp on, mount and tighten screws **2**.
- Position the fork protection on the right fork leg. Mount and tighten the screws.

Guideline

| | | |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

11.10 Removing the seat



- Pull on strap **1** and raise the rear of the seat at the same time.
- Pull back the seat and lift it off.

11.11 Mounting the seat




- Hook slot **1** of the seat onto screw **2**, press the rear downward and at the same time push it forward.
- Push locking pin **3** into lock housing **4** and push the back of the seat down until the locking pin locks in place with an audible click.
- Check, finally, that the seat is correctly mounted.

11.12 Removing the air filter




Preparatory work

- Remove the seat. ( p. 76)

Main work

- Remove screws **1**.
- Remove the upper part of the air filter box **2**.

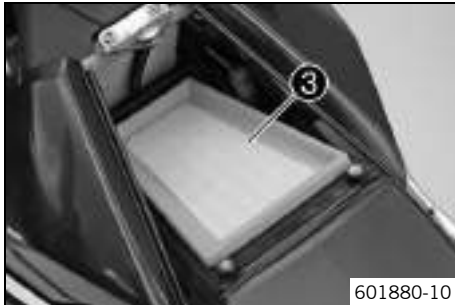


Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt will enter the engine without an air filter.

- Never start to use the vehicle without an air filter.
-
- Remove air filter **3**.

11.13 Installing the air filter

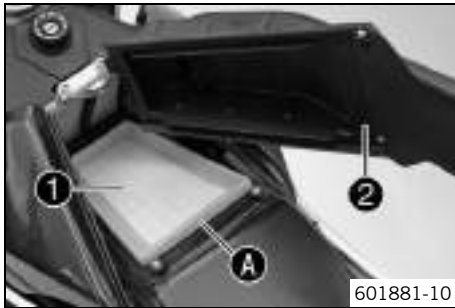

Main work

- Clean the air filter box.
- Mount air filter ①.

Info


The air filter must lie flush against the air filter box along the entire sealing surface A.

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.


- Hook air filter box top ② into the front of the air filter box and swing down.
- Mount and tighten screws ③.

Guideline


| | | |
|---------------------------|----|-------------------|
| Screw, air filter box top | M6 | 2 Nm (1.5 lbf ft) |
|---------------------------|----|-------------------|

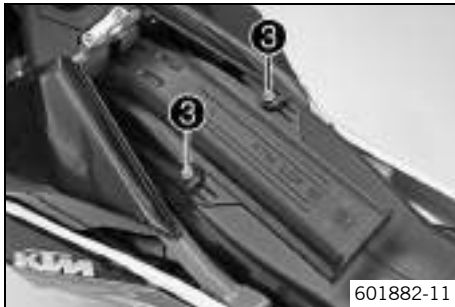

Finishing work

- Mount the seat. ( p. 76)

11.14 Checking the chain for dirt

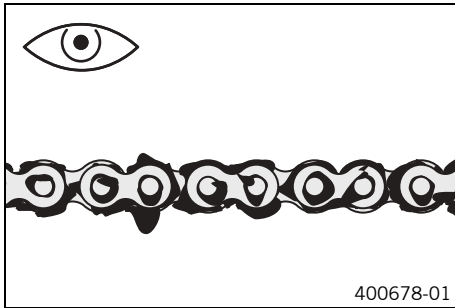

- Check the chain for heavy soiling.
 - » If the chain is very dirty:
 - Clean the chain. (📖 p. 79)

11.15 Cleaning the chain



Warning

Danger of accidents Oil or grease on the tires reduces the road grip.

- Remove the lubricant from the tires using a suitable cleaning agent.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

The service life of the chain depends largely on its maintenance.

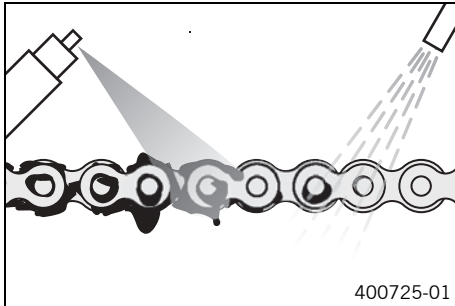

Preparatory work

- Raise the motorcycle with the rear wheel stand. (📖 p. 71)

Main work

- Clean the chain regularly.
- Rinse off loose dirt with a soft jet of water.
- Remove old grease remains with chain cleaner.

Chain cleaner (📖 p. 191)

- After drying, apply chain spray.

Chain lube for road use (📖 p. 191)

Finishing work

- Remove the rear of the motorcycle from the wheel stand. (📖 p. 72)

11.16 Checking the chain tension




Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

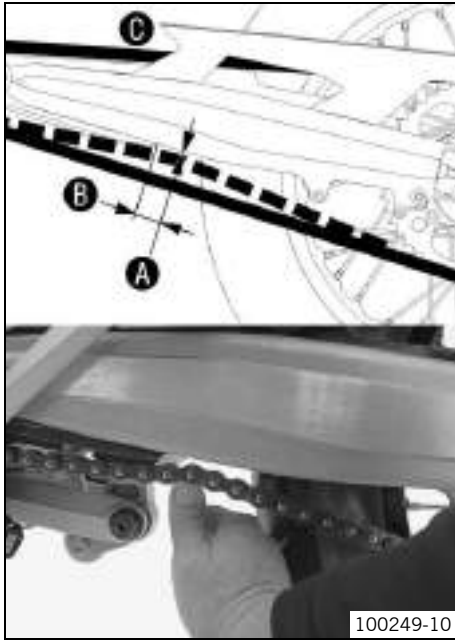

- Lean the motorcycle on the side stand.
- Shift gear to neutral.
- Push the chain upward at a distance **B** from the chain sliding guard and determine the chain tension **A**.

i Info

The upper chain section **C** must be taut.

Chain wear is not always even. Repeat this measurement at different chain positions.

| | |
|---------------------------------|-----------------|
| Chain tension | 5 mm (0.2 in) |
| Distance to chain sliding guard | 30 mm (1.18 in) |

- » If the chain tension does not meet specifications:
 - Adjust the chain tension. (📖 p. 82)

11.17 Adjusting the chain tension



Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.


If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Check the chain tension. (📖 p. 80)

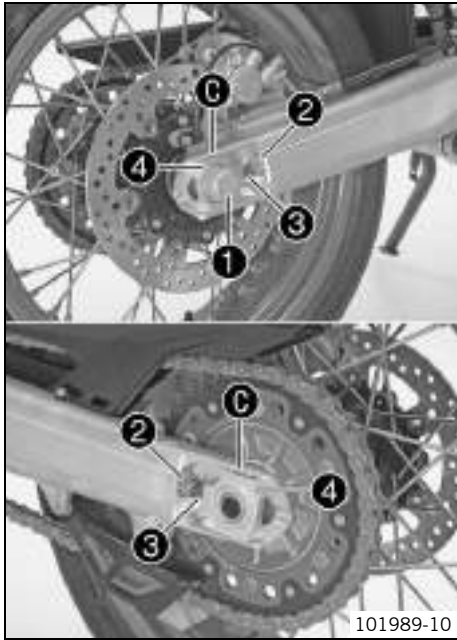

Main work

- Loosen nut ①.
- Loosen nuts ②.
- Adjust the chain tension by turning adjusting screws ③ on the left and right.

Guideline

| | |
|--|---------------|
| Chain tension | 5 mm (0.2 in) |
| Turn adjusting screws ③ on the left and right so that the markings on the left and right chain adjusters ④ are in the same position relative to reference marks ①. The rear wheel is then correctly aligned. | |

i Info

The upper chain section must be taut.
Chain wear is not always even. Repeat this measurement at different chain positions.

- Tighten nuts ②.
- Make sure that the chain adjusters ④ are installed correctly on adjusting screws ③.
- Tighten nut ①.


Guideline

| | | |
|-------------------------|---------|------------------------|
| Nut, rear wheel spindle | M25x1.5 | 90 Nm (66.4 lbf ft) |
|-------------------------|---------|------------------------|

11.18 Checking the chain, rear sprocket, engine sprocket, and chain guide

Preparatory work

- Raise the motorcycle with the rear wheel stand. (📖 p. 71)

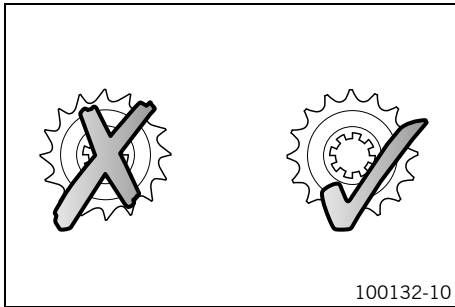

Main work

- Shift the transmission to idle.
- Check the rear sprocket and engine sprocket for wear.
 - » If the rear sprocket or engine sprocket is worn:
 - Change the power set. 🛠️



Info

The engine sprocket, rear sprocket, and chain should always be replaced together.

- Pull at the top part of the chain with the specified weight **A**.

Guideline

| | |
|----------------------------------|----------------|
| Weight of chain wear measurement | 15 kg (33 lb.) |
|----------------------------------|----------------|

- Measure distance **B** of 18 chain rollers in the lower chain section.




Info

Chain wear is not always even, so you should repeat this measurement at different chain positions.

| | |
|--|-------------------|
| Maximum distance B at the longest chain section | 272 mm (10.71 in) |
|--|-------------------|


- » If the distance **B** is greater than the specified measurement:
 - Replace the chain. 🛠️

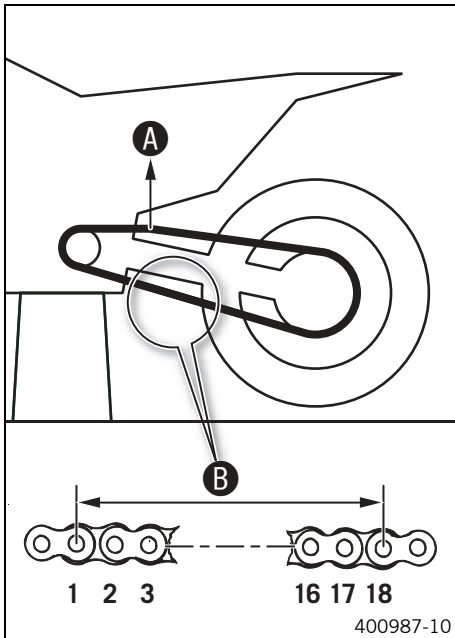



Info

When the chain is replaced, the rear sprocket and engine sprocket should also be changed.
New chains wear out faster on an old, worn rear sprocket or engine sprocket.

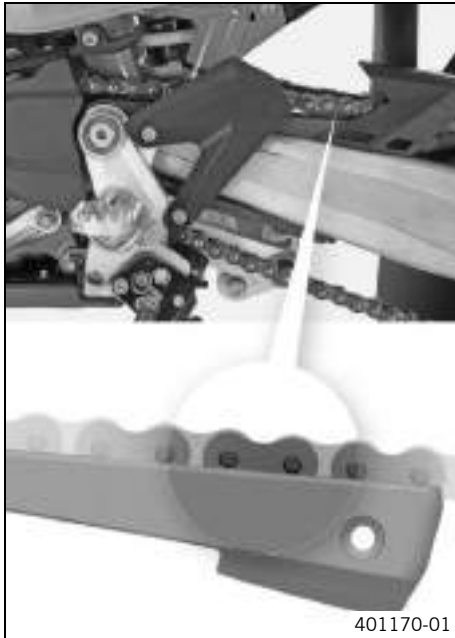

401170-01

- Check the chain sliding guard for wear.
 - » If the lower edge of the chain pins is in line with or below the chain sliding guard:
 - Replace the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly seated.
 - » If the chain sliding guard is loose:
 - Tighten the screws on the chain sliding guard.

Guideline


| | | | |
|----------------------------|----|----------------------|----------------------|
| Screw, chain sliding guard | M6 | 8 Nm (5.9 lbf ft) | Loctite® 243™ |
|----------------------------|----|----------------------|----------------------|



- Check the chain sliding piece for wear.
 - » If the lower edge of the chain pins is in line with or below the chain sliding piece:
 - Change the chain sliding piece. 🛠️
- Check that the chain sliding piece is firmly seated.
 - » If the chain sliding piece is loose:
 - Tighten the screw on the chain sliding piece.

Guideline

| | | |
|----------------------------|----|------------------------|
| Screw, chain sliding piece | M8 | 15 Nm (11.1 lbf ft) |
|----------------------------|----|------------------------|

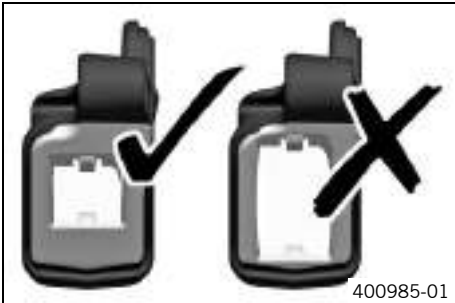

- Check the chain guide for wear.



Info

Wear can be seen on the front of the chain guide.

- » If the light part of the chain guide is worn:
 - Change the chain guide. 🛠️



- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the screws on the chain guide.

Guideline

| | | |
|---------------------------|----|-----------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|-----------------------|

Finishing work


- Remove the rear of the motorcycle from the wheel stand. (📖 p. 72)

11.19 Adjusting the basic position of the clutch lever



Info

Turn the adjusting screw clockwise to increase the distance between the clutch lever and the handlebar.
Turn the adjusting screw counterclockwise to decrease the distance between the clutch lever and the handlebar.
The range of adjustment is limited.
Turn the adjusting screw by hand only, and do not apply any force.
Do not make any adjustments while riding.

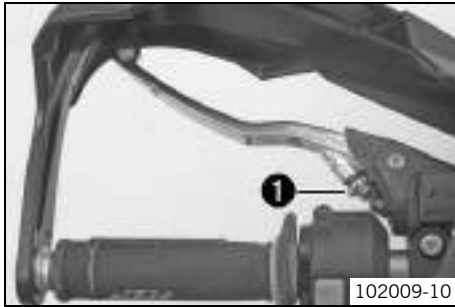

- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw ❶.
- When adjusting the clutch lever, make sure to leave a minimum clearance to other parts of the vehicle.

Guideline

| | |
|-------------------|---------------|
| Minimum clearance | 5 mm (0.2 in) |
|-------------------|---------------|

11.20 Checking/correcting the fluid level of the hydraulic clutch



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.


i Info

The fluid level rises with increasing wear of the clutch facing discs.

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and clutch lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

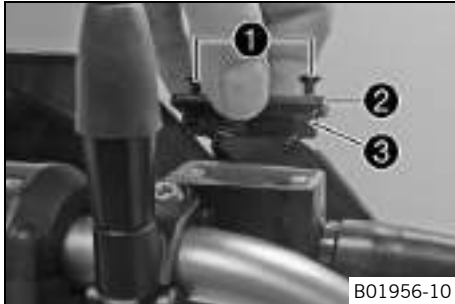

- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Remove cover ② with membrane ③.
- Check the fluid level.

| | |
|---------------------------------|----------------|
| Fluid level below container rim | 4 mm (0.16 in) |
|---------------------------------|----------------|

» If the fluid level does not meet specifications:

- Correct the fluid level of the hydraulic clutch.


| |
|--|
| Brake fluid DOT 4 / DOT 5.1 (📖 p. 188) |
|--|

- Position the cover with the membrane. Mount and tighten the screws.

i Info

Clean up overflowed or spilled brake fluid immediately with water.

12.1 Antilock braking system (ABS)

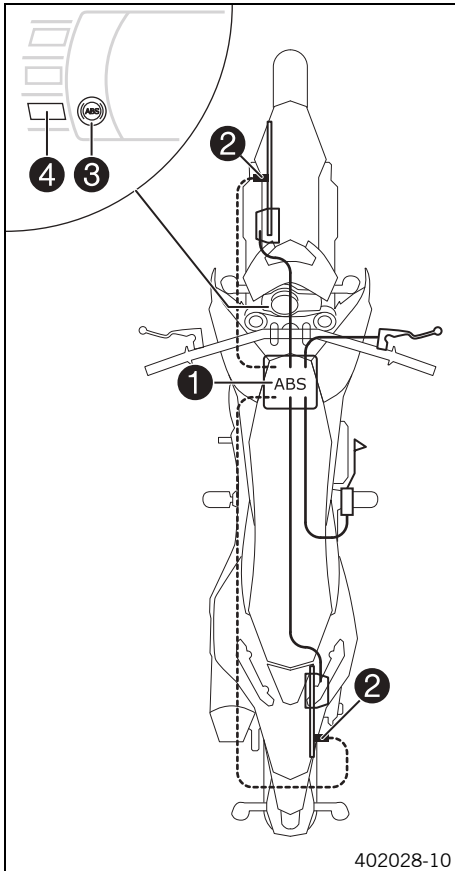

The ABS unit **1**, which consists of a hydraulic unit, ABS control unit, and return pump, is installed under the seat. A wheel speed sensor **2** is located at both the front and the rear wheel.



Warning

Danger of accidents Changes to the vehicle impair the function of the ABS.

- Only allow the rear wheel to spin with the front brake applied away from public road traffic if the ABS is switched off.
- Do not make any changes to the suspension travel.
- Only use spare parts on the brake system which have been approved and recommended by KTM.
- Only use tires/wheels approved by KTM with the corresponding speed index.
- Maintain the specified tire air pressure.
- Service work and repairs must be performed professionally. (Your authorized KTM workshop will be glad to help.)

The ABS is a safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces.



Warning

Danger of accidents Vehicle rollover

- It is not always possible to prevent vehicle rollover in extreme riding situations (e. g. luggage loaded with a high center of gravity, varying road surfaces, steep descents, full braking without disengaging the gear). Adapt your riding style to the road conditions and your driving ability.

The ABS operates with two independent brake circuits (front and rear brakes). During normal operation, the brake system operates like a conventional brake system without ABS. When the ABS control unit detects a locking tendency in a wheel, ABS begins regulating

the brake pressure. The regulating process causes a slight pulsing of the hand and foot brake levers.


ABS warning lamp ③ must light up after the ignition is switched on and go out after starting off. If it does not go out after starting off or if it lights up while riding, this indicates a fault in the ABS system. In this case, the ABS is no longer enabled and the wheels may lock during braking. The brake system itself stays functional; only ABS control is not available.

The ABS warning lamp may also light up if the rotating speeds of the front and rear wheels differ greatly under extreme riding conditions, for example when making wheelies or if the rear wheel spins. This causes the ABS to switch off.

To reactivate the ABS, the vehicle must be stopped and the ignition switched off. The ABS is reactivated when the vehicle is switched on again. The ABS warning lamp goes out when you start off.

Button ④ can be used to switch ABS off manually (see Starting).

12.2 Adjusting the basic position of the hand brake lever

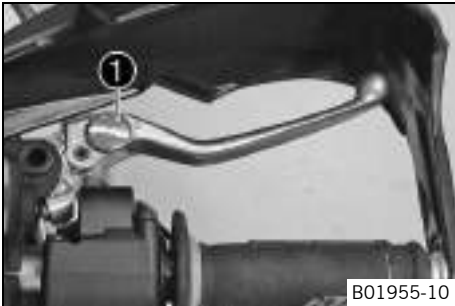

- Adjust the basic position of the hand brake lever to your hand size by turning adjusting wheel ①.



Info

Push the hand brake lever forward and turn the adjusting wheel.
Do not make any adjustments while riding.


12.3 Checking the brake discs



Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

- Make sure that worn-out brake discs are replaced immediately. (Your authorized KTM workshop will be glad to help.)

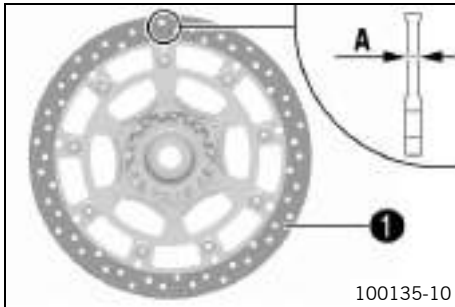

- Check the thickness of the front and rear brake discs in several places to ensure that it conforms to measurement **A**.

i Info

Wear reduces the thickness of the brake disc at the contact surface **1** of the brake disc.

| Brake discs - wear limit | |
|--------------------------|-------------------|
| Front | 4.0 mm (0.157 in) |
| Rear | 4.5 mm (0.177 in) |

- » If the brake disc thickness is less than the specified value:
 - Replace the brake disc.
- Check the front and rear brake discs for damage, cracks, and deformation.
 - » If damage, cracks, or deformation are visible on the brake disc:
 - Replace the brake disc.

12.4 Checking the front brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

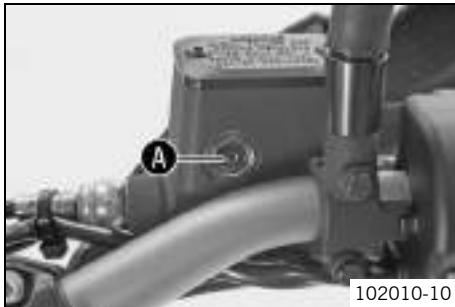

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in the viewer.
 - » If the brake fluid has dropped below marking **A**:
 - Add front brake fluid. 🛠️ (📖 p. 94)

12.5 Adding front brake fluid



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)




Warning

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

i **Info**

Never use DOT 5 brake fluid! It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.
 Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!
 Use only clean brake fluid from a sealed container.

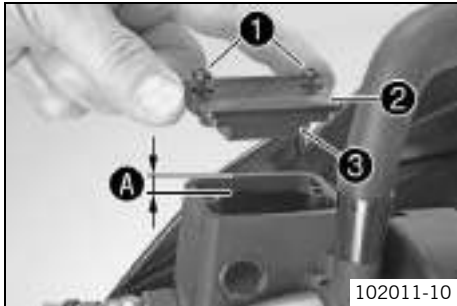

Preparatory work

- Check the front brake linings. (📖 p. 95)

Main work

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws **1**.
- Remove cover **2** with membrane **3**.
- Add brake fluid to level **A**.

Guideline

| | |
|-------------------------|---------------|
| Measurement of A | 5 mm (0.2 in) |
|-------------------------|---------------|

| |
|--|
| Brake fluid DOT 4 / DOT 5.1 (📖 p. 188) |
|--|

- Position the cover with the membrane. Mount and tighten the screws.

i **Info**

Clean up overflowed or spilt brake fluid immediately with water.

12.6 Checking the front brake linings

⚠ **Warning**

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)




Warning

Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

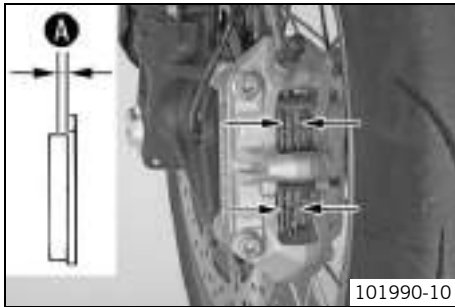

- Check the brake linings for minimum thickness **A**.

| | |
|----------------------------|---|
| Minimum thickness A | $\geq 1 \text{ mm } (\geq 0.04 \text{ in})$ |
|----------------------------|---|

- » If the minimum thickness is less than specified:

- Change the brake linings of the front brake. 🛠️

- Check the brake linings for damage and cracking.

- » If there is wear or tearing:

- Change the brake linings of the front brake. 🛠️

12.7 Checking the free travel of foot brake lever




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

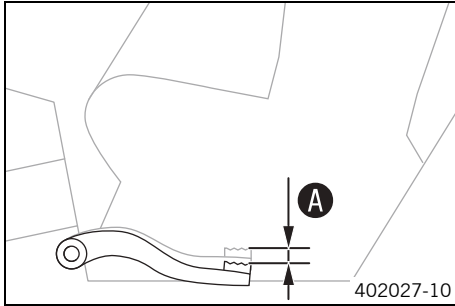

- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel **A**.

Guideline

| | |
|---------------------------------|----------------------------|
| Free travel at foot brake lever | 3... 5 mm (0.12... 0.2 in) |
|---------------------------------|----------------------------|

i Info

You will know that contact has been made with the foot brake cylinder piston when there is increased resistance when you activate the foot brake lever.

- » If the free travel does not meet specifications:
 - Adjust the basic position of the foot brake lever. 🛠️ (📖 p. 97)

12.8 Adjusting the basic position of the foot brake lever 🛠️




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

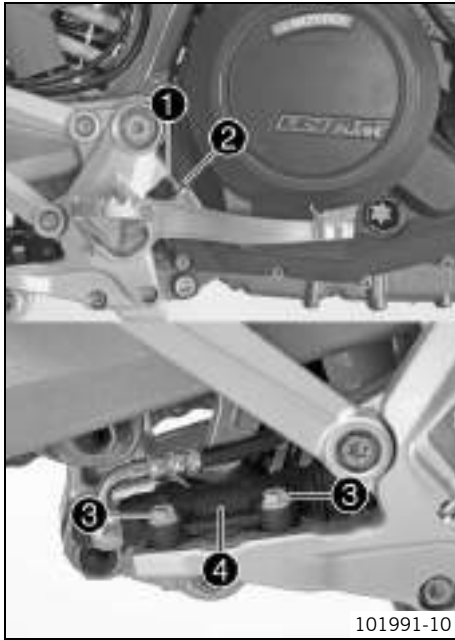

- Loosen fittings ③ on foot brake cylinder ④.
- To adjust the basic position of the foot brake lever individually, loosen nut ① and turn screw ② accordingly.



Info

The range of adjustment is limited. The screw must be screwed into the footrest bracket by at least four turns.

- Position foot brake cylinder ④ so that the foot brake lever has the necessary free travel.
- Mount and tighten fittings ③.

Guideline

| | | |
|---------------------------------------|----|--------------------|
| Screw connection, foot brake cylinder | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------------------|----|--------------------|

- Check the free travel of the foot brake lever. (📖 p. 96)
- Tighten nut ①.

12.9 Checking rear brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

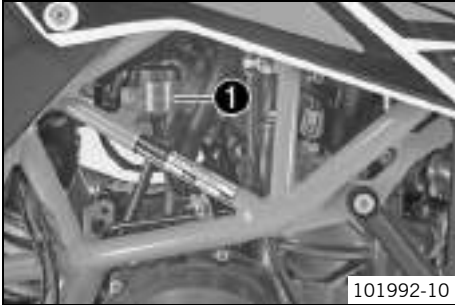

- Stand the vehicle upright.
- Check the brake fluid level in the brake fluid reservoir.
 - » If the fluid level reaches the **MIN** marking ❶:
 - Add rear brake fluid. 🛠️ (📖 p. 99)

12.10 Adding rear brake fluid 🛠️



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info


Never use DOT 5 brake fluid! It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!

Use only clean brake fluid from a sealed container.

Preparatory work

- Check the rear brake linings. (📖 p. 101)

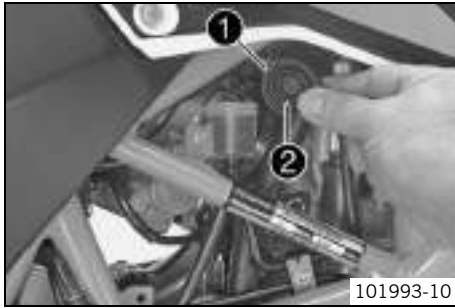

Main work

- Stand the vehicle upright.
- Remove screw cap ❶ with the washer and membrane ❷.
- Add brake fluid to the **MAX** mark.

Brake fluid DOT 4 / DOT 5.1 (📖 p. 188)

- Mount the screw cap with the washer and membrane.



Info

Clean up overflowed or spilt brake fluid immediately with water.

12.11 Checking the rear brake linings



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)




Warning

Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

12 BRAKE SYSTEM

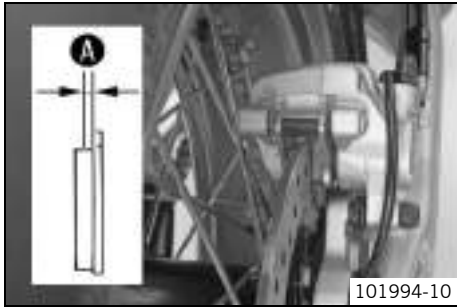

- Check the brake linings for minimum thickness **A**.

| | |
|----------------------------|---|
| Minimum thickness A | $\geq 1 \text{ mm } (\geq 0.04 \text{ in})$ |
|----------------------------|---|

- » If the minimum thickness is less than specified:
 - Change the rear brake linings. 🛠️
- Check the brake linings for damage and cracking.
 - » If there is wear or tearing:
 - Change the rear brake linings. 🛠️

13.1 Removing the front wheel ↘

Preparatory work

- Raise the motorcycle with the rear wheel stand. (📖 p. 71)
- Raise the motorcycle with the front wheel stand. (📖 p. 72)

Main work

- Remove screw ❶ and pull wheel speed sensor ❷ out of the hole.
- Remove screws ❸ and spacers ❹.
- Press back the brake linings with a light lateral tilting of the brake caliper on the brake disc. Pull the brake caliper carefully back from the brake disc and hang it to one side.

Info

Do not pull the hand brake lever while the brake caliper is removed.



- Loosen screw ❺ and screws ❻.
- Unscrew screw ❺ about 6 turns and press your hand on the screw to push the wheel spindle out of the axle clamp. Remove screw ❺.


Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Holding the front wheel, withdraw the wheel spindle. Take the front wheel out of the fork.

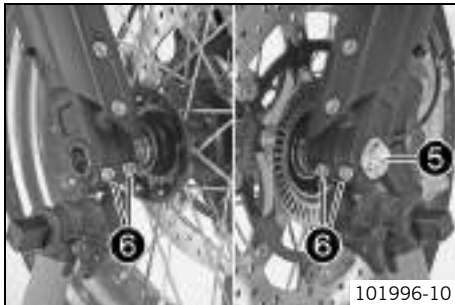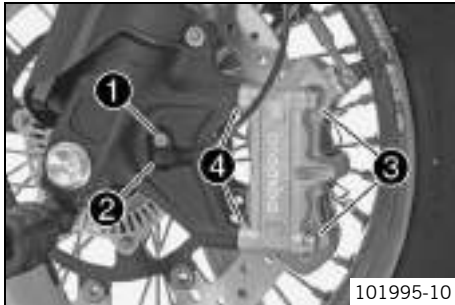

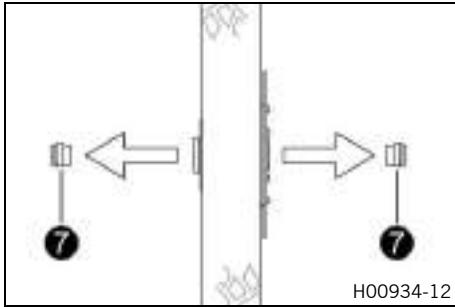

- Remove spacers ⑦.


13.2 Installing the front wheel ↘



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

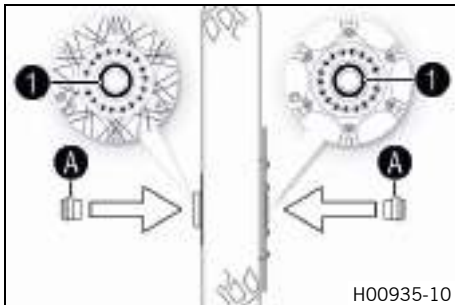


Main work

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Replace the wheel bearing. ↘
- Clean and grease shaft seal rings ① and mating surfaces A of the spacers.

Long-life grease (📖 p. 191)

- Insert the spacers.

13 WHEELS, TIRES

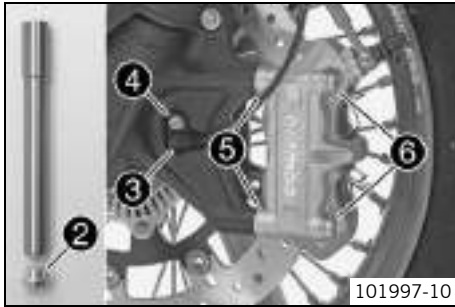

- Lift the front wheel into the fork, position it, and insert the wheel spindle.
- Mount and tighten screw ②.

Guideline

| | | |
|----------------------------|---------|------------------------|
| Screw, front wheel spindle | M24x1.5 | 45 Nm (33.2 lbf ft) |
|----------------------------|---------|------------------------|

- Position the wheel speed sensor ③ in the drill hole. Mount and tighten screw ④.

Guideline

| | | |
|---------------------------|----|-------------------|
| Screw, wheel speed sensor | M6 | 6 Nm (4.4 lbf ft) |
|---------------------------|----|-------------------|

- Position the brake caliper on the brake disc.
 - ✓ The brake linings are correctly positioned.
- Position spacers ⑤. Mount screws ⑥ but do not tighten yet.
- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point. Fix the hand brake lever in the activated position.
 - ✓ The brake caliper straightens.
- Tighten screws ⑥.

Guideline

| | | | |
|----------------------------|----------|------------------------|----------------------|
| Screw, front brake caliper | M10x1.25 | 45 Nm (33.2 lbf ft) | Loctite® 243™ |
|----------------------------|----------|------------------------|----------------------|

- Remove the fixation of the hand brake lever.



- Take the motorcycle from the front lifting gear. (📖 p. 73)
- Operate the front brake and compress the fork a few times firmly.
✓ The fork legs straighten.
- Tighten screws 7.


Guideline

| | | |
|------------------|----|------------------------|
| Screw, fork stub | M8 | 15 Nm (11.1 lbf ft) |
|------------------|----|------------------------|

Finishing work

- Remove the rear of the motorcycle from the wheel stand. (📖 p. 72)

13.3 Removing the rear wheel ↩

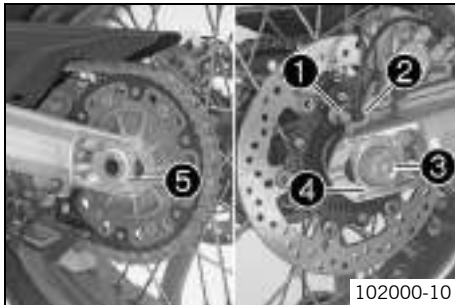


Preparatory work

- Raise the motorcycle with the rear wheel stand. (📖 p. 71)

Main work

- Press the brake caliper onto the brake disc by hand in order to push back the brake piston.
- Remove screw 1 and pull wheel speed sensor 2 out of the hole.
- Remove nut 3. Remove chain adjuster 4.

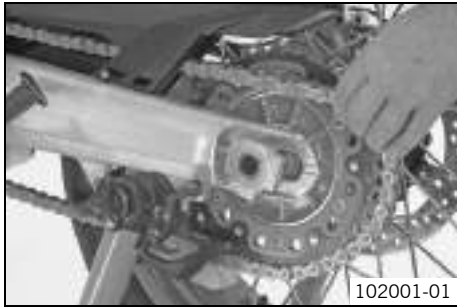

- Pull out wheel spindle **5** to the point where the chain adjuster is no longer in contact with the adjusting screw.
- Push the rear wheel forward as far as possible and take the chain off the rear sprocket.



Info

Cover the components to protect them against damage.

- Holding the rear wheel, withdraw the wheel spindle.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Take the rear wheel out of the swingarm.



Info

Do not operate the foot brake when the rear wheel is removed.

13.4 Installing the rear wheel ↩



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.


- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning

Danger of accidents There is no braking effect to start with at the rear brake after installing the rear wheel.

- Actuate the foot brake several times before going on a ride until you can feel a firm pressure point.

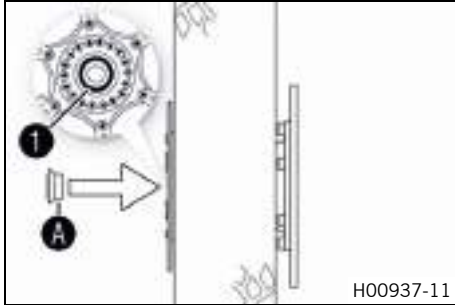

Main work


- Check the rear hub rubber dampers. 🛠️ (📖 p. 109)
- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Replace the wheel bearing. 🛠️
- Remove spacer.
- Clean and grease shaft seal ring ① and contact surface ② of the spacer.

Long-life grease (📖 p. 191)

- Insert the spacer.
- Clean and grease the thread of the wheel spindle and nut ②.

Long-life grease (📖 p. 191)

- Mount the rubber damper and rear sprocket carrier in the rear wheel.
- Position the rear wheel.
 - ✓ The brake linings are correctly positioned.

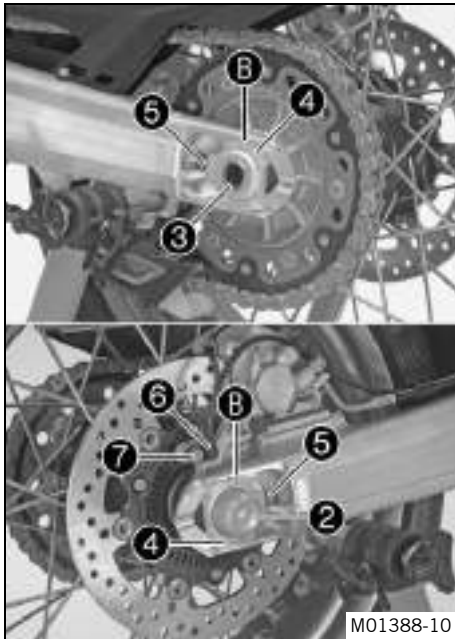

- Push the rear wheel forward as far as possible and lay the chain on the rear sprocket.
- Mount wheel spindle ③ and chain adjuster ④. Mount nut ②, but do not tighten it yet.
- Make sure that chain adjusters ④ are fitted correctly on adjusting screws ⑤.
- Make sure that the markings on the left and right chain adjusters are in the same position relative to reference marks B. The rear wheel is then correctly aligned.
- Tighten nut ②.

Guideline

| | | |
|-------------------------|---------|------------------------|
| Nut, rear wheel spindle | M25x1.5 | 90 Nm (66.4 lbf ft) |
|-------------------------|---------|------------------------|

- Position the wheel speed sensor ⑥ in the drill hole. Mount and tighten screw ⑦.

Guideline

| | | |
|---------------------------|----|-------------------|
| Screw, wheel speed sensor | M6 | 6 Nm (4.4 lbf ft) |
|---------------------------|----|-------------------|

- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

Finishing work

- Remove the rear of the motorcycle from the wheel stand. (📖 p. 72)
- Check the chain tension. (📖 p. 80)

13.5 Checking the rear hub rubber dampers 🛠️

Info

The engine power is transmitted from the rear sprocket to the rear wheel via 6 rubber dampers. They eventually wear out during operation. If the rubber dampers are not changed in time, the rear sprocket carrier and the rear hub become damaged.

Preparatory work

- Raise the motorcycle with the rear wheel stand. (📖 p. 71)
- Remove the rear wheel. 🛠️ (📖 p. 106)

Main work

- Check bearing ❶.
 - » If the bearing is damaged or worn:
 - Replace the bearings. 🛠️
- Check rubber dampers ❷ of the rear hub for damage and wear.
 - » If the rubber dampers of the rear hub are damaged or worn:
 - Change all rubber dampers in the rear hub.



- Lay the rear wheel on a workbench with the rear sprocket facing upwards and insert the wheel spindle in the hub.
- To check play ❸, hold the rear wheel tight and try to turn the rear sprocket with your hand.



Info


Measure the play on the outside of the rear sprocket.

| | |
|------------------------------------|-------------------|
| Play in rubber dampers, rear wheel | ≤ 5 mm (≤ 0.2 in) |
|------------------------------------|-------------------|

- » If clearance ❸ larger than the specified value:
 - Change all rubber dampers in the rear hub.

Finishing work

- Install the rear wheel. 🛠️ (📖 p. 107)
- Remove the rear of the motorcycle from the wheel stand. (📖 p. 72)
- Check the chain tension. (📖 p. 80)

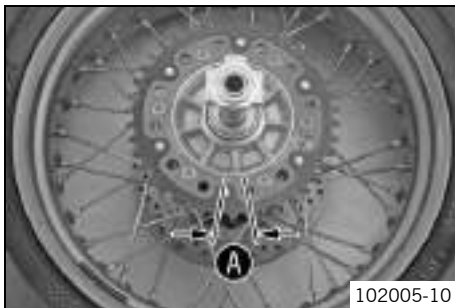

13.6 Checking the tire condition



Warning

Danger of accidents If a tire bursts while riding, the vehicle becomes uncontrollable.

- Ensure that damaged or worn tires are replaced immediately. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic. Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.



Warning

Danger of accidents Reduced road grip with new tires.


- New tires have a smooth rolling surface and therefore cannot provide full road grip. The entire rolling surface must be roughened in the first 200 kilometers (124.3 miles) by moderate riding at alternating angles. The full grip levels are not achieved until the tires have been run in.



Info

The type, condition, and air pressure of the tires all have a major impact on the handling characteristics of the motorcycle. Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

13 WHEELS, TIRES

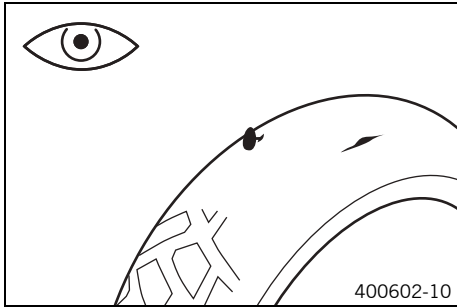

- Check the front and rear tires for cuts, run-in objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires.
- Check the tread depth.



Info

Adhere to the legally required minimum tread depth.

| | |
|---------------------|--------------------|
| Minimum tread depth | ≥ 2 mm (≥ 0.08 in) |
|---------------------|--------------------|

- » If the tread depth is less than the minimum tread depth:
 - Change the tires.
- Check the tire age.




Info

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture. KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tires are more than 5 years old:
 - Change the tires.



13.7 Tubeless tire system

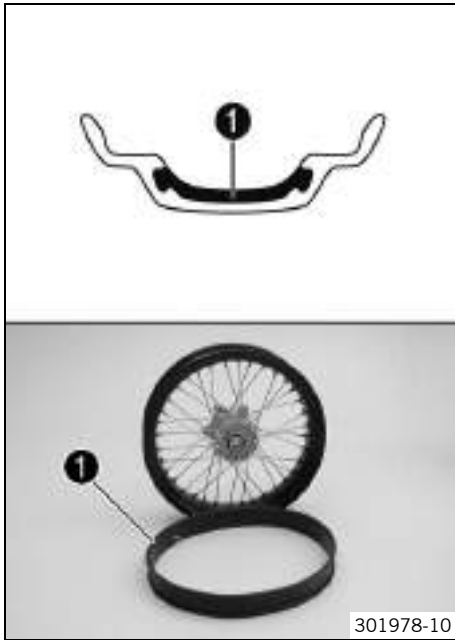

This vehicle makes use of a tubeless tire system in which a tubeless sealing profile ❶ is used instead of the conventional tube.

The advantages of the tubeless system lie in the absence of danger from a faulty tube. This greatly reduces the risk of a sudden loss in pressure.

The masses and moments of inertia of these wheels are smaller than in conventional spoke wheels with a tube. This results in better handling and riding comfort.

The rigid rim design results in a spoke wheel that is almost entirely maintenance-free.

KTM recommends that the tubeless sealing profile be changed after 5 years at the latest, regardless of the actual state of wear.


13.8 Checking the tire air pressure



Info

Low tire air pressure leads to abnormal wear and overheating of the tire.

Correct tire air pressure ensures optimal riding comfort and maximum tire service life.

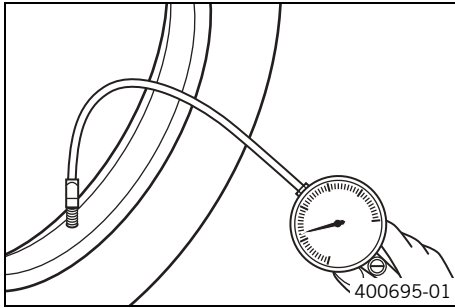

- Remove the protection cap.
- Check tire air pressure when tires are cold.

| Tire air pressure, solo | |
|-------------------------|------------------|
| Front | 2.0 bar (29 psi) |
| Rear | 2.0 bar (29 psi) |

| Tire air pressure with passenger / fully loaded | |
|---|------------------|
| Front | 2.0 bar (29 psi) |
| Rear | 2.2 bar (32 psi) |

- » If the tire pressure does not meet specifications:
 - Correct tire pressure.
- Mount the protection cap.

13.9 Checking the spoke tension



Warning

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and result in secondary damage.

The spokes break due to being overloaded if they are too tightly tensioned. If the tension in the spokes is too low, then lateral and radial run-out will form in the wheel. Other spokes will become looser as a result.

- Check spoke tension regularly, and in particular on a new vehicle. (Your authorized KTM workshop will be glad to help.)




Info

A loose spoke causes wheel imbalance and rapidly leads to more loose spokes.

If the spokes are too tight, they can break due to local overload.

Check the spoke tension regularly, especially on a new motorcycle.

13 WHEELS, TIRES

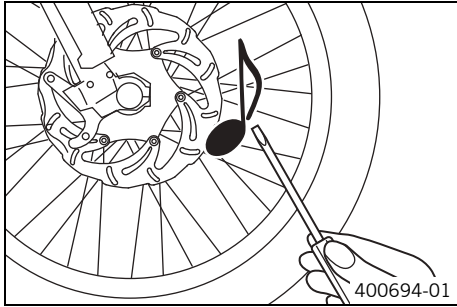

- Briefly strike each spoke with a screwdriver blade.



Info

The frequency of the tone is a function of the spoke length and spoke diameter. If you hear different tone frequencies from individual spokes of the same length and thickness, this is an indication of different spoke tensions.

You should hear a high note.

- » If the spoke tensions differ:
 - Correct the spoke tension. 🛠️

14.1 Removing the battery ↴



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.


- Keep batteries out of the reach of children.
- Wear suitable protective clothing and goggles.
- Avoid contact with battery acid and battery gases.
- Keep sparks and open flames away from the battery. Only charge in well-ventilated rooms.
- In the event of skin contact, rinse with large amounts of water. If battery acid gets in the eyes, rinse with water for at least 15 minutes and contact a physician.


Preparatory work

- Switch off the ignition by turning the ignition key to position **OFF** ☒.
- Remove the seat. (📖 p. 76)


Main work

- Remove battery cover ①.
- Pull engine electronics control unit ② off of the holder and set it to one side.

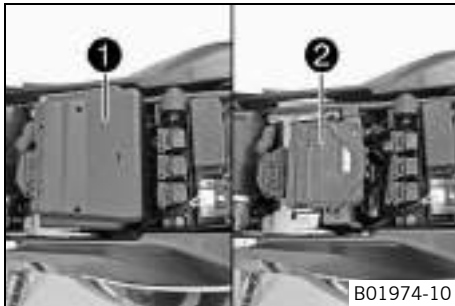


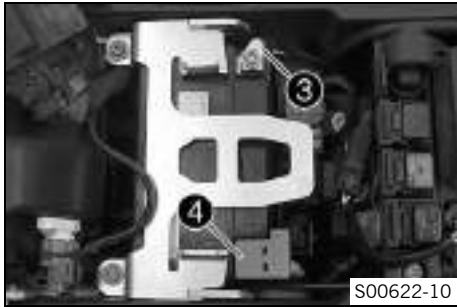

- Disconnect negative cable ③ from the battery.
- Take off positive terminal cover ④.

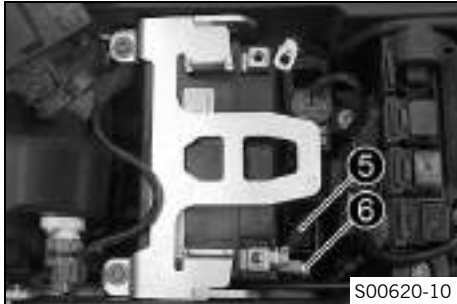

- Disconnect ABS connection cable ⑤ and positive cable ⑥ from the battery.

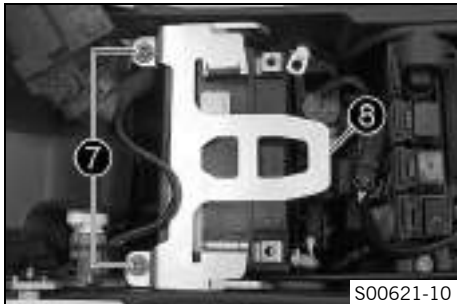


- Remove screws ⑦.
- Pull retaining bracket ⑧ of the battery forward and remove it.
- Lift the battery up and out.



Info

Never operate the motorcycle with a discharged battery or without a battery. In both cases, electrical components and safety devices can be damaged. The vehicle will therefore no longer be roadworthy.

14.2 Installing the battery ↩

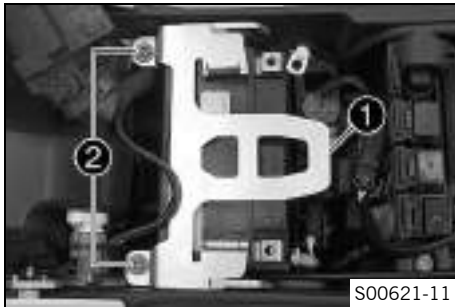

Main work


- Insert the battery into the battery compartment with the terminals facing rearward.

Battery (YTZ10S) (📖 p. 180)

- Position retaining bracket **1** and mount and tighten screws **2**.

Guideline


| | | |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

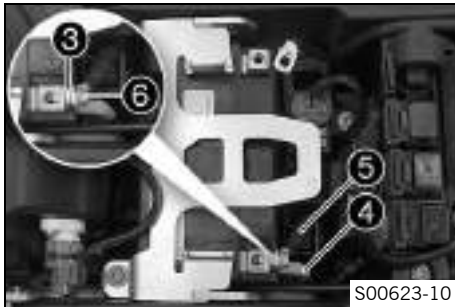

- Position washer **3**, positive cable **4**, and ABS connection cable **5**.
- Mount and tighten screw **6**.

Guideline

| | | |
|-------------------------|----|-------------------------|
| Screw, battery terminal | M6 | 4.5 Nm (3.32 lbf ft) |
|-------------------------|----|-------------------------|

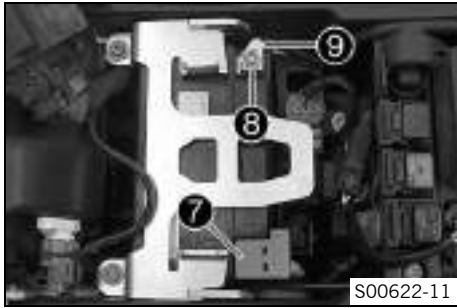


S00622-11

- Position positive terminal cover 7.
- Position washer 8 and negative cable 9, and mount and tighten the screw.

Guideline

| | | |
|-------------------------|----|-------------------------|
| Screw, battery terminal | M6 | 4.5 Nm (3.32 lbf ft) |
|-------------------------|----|-------------------------|

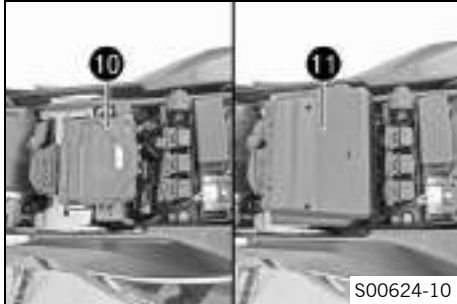

S00624-10

- Position the engine electronics control unit 10.
- Mount battery cover 11.

Finishing work

- Mount the seat. (📖 p. 76)
- Set the clock. (📖 p. 32)

14.3 Recharging the battery ↩



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep batteries out of the reach of children.
- Wear suitable protective clothing and goggles.
- Avoid contact with battery acid and battery gases.
- Keep sparks and open flames away from the battery. Only charge in well-ventilated rooms.
- In the event of skin contact, rinse with large amounts of water. If battery acid gets in the eyes, rinse with water for at least 15 minutes and contact a physician.



Warning

Environmental hazard Batteries contain environmentally-hazardous materials.

- Do not dispose of batteries as household waste.
- Dispose of batteries at a collection point for used batteries.



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.
-



Info

Even when there is no load on the battery, it still loses power steadily.

The charging level and the method of charging are very important for the service life of the battery.

Rapid recharging with a high charging current shortens the battery's service life.





If the charging current, charging voltage and charging time are exceeded, electrolyte escapes through the safety valves. This reduces the battery capacity.

If the battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately.

If the battery is left in a discharged state for an extended period, it will become over-discharged and sulfate, destroying the battery.

The battery is maintenance-free, which means that the acid level does not need to be checked.

Preparatory work

- Switch off the ignition by turning the ignition key to position **OFF** .
- Remove the seat.  p. 76)
- Remove the battery.   p. 116)



Main work

- Connect the battery charger to the battery. Switch on the battery charger.

| |
|-------------------------------|
| Battery charger (58429074000) |
|-------------------------------|

You can also use the battery charger to test rest potential and start potential of the battery, and to test the alternator. With this device, you cannot overcharge the battery.

i Info

Never remove lid ①.

Charge the battery with a maximum of 10% of the capacity specified on the battery housing ②.

- Switch off the battery charger after charging and disconnect from the battery.

Guideline

| | |
|--|----------|
| The charge current, charge voltage and charge time must not be exceeded. | |
| Charge the battery regularly when the motorcycle is not in use | 3 months |

Finishing work

- Install the battery. 🛠️ (📖 p. 118)
- Mount the seat. (📖 p. 76)
- Set the clock. (📖 p. 32)

14.4 Changing the main fuse



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.



Info

The main fuse protects all power consumers of the vehicle. It is in the housing of the starter relay next to the battery.

Preparatory work


- Switch off the ignition by turning the ignition key to position **OFF** ☒.
- Remove the seat. (📖 p. 76)

Main work

- Take off protection caps ❶.



102006-10

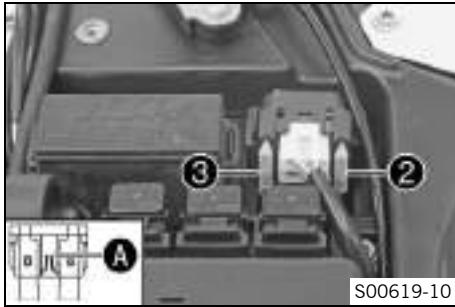

- Remove a defective main fuse ② with needle nose pliers.

i Info

A defective fuse is indicated by a burned-out fuse wire A.
A spare fuse ③ is located in the starter relay.

- Install a new main fuse.

Fuse (58011109130) (📖 p. 180)

i Info

Insert a new spare fuse into the starter relay to have it available when needed.

- Check that the electrical equipment is functioning properly.
- Mount the protection caps.

Finishing work

- Mount the seat. (📖 p. 76)
- Set the clock. (📖 p. 32)

14.5 Changing the ABS fuses



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

i Info

Two fuses for the ABS are located under the seat. These fuses protect the return pump and the hydraulic unit of the ABS. The third fuse, which protects the ABS control unit, is located in the fuse box.

Preparatory work


- Switch off all power consumers and switch off the engine.
- Remove the seat. (🗨️ p. 76)
- Remove the battery cover.
- Pull the EFI control unit off of the holder and set it to one side.

To change the fuse of the ABS hydraulic unit:

- Take off protection cap **1** and remove the fuse.
- Insert a new fuse.

Fuse (58011109115)

- Mount the protection cap.

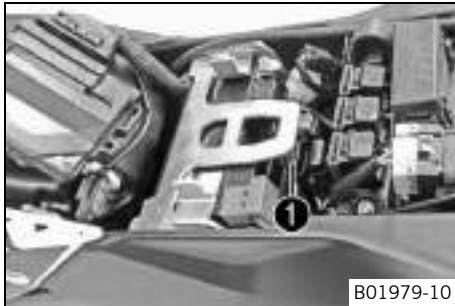


B01979-10

To change the fuse of the ABS return pump:

- Take off protection cap **2** and remove the fuse.
- Insert a new fuse.

Fuse (58011109125) (🗨️ p. 180)

- Mount the protection cap.

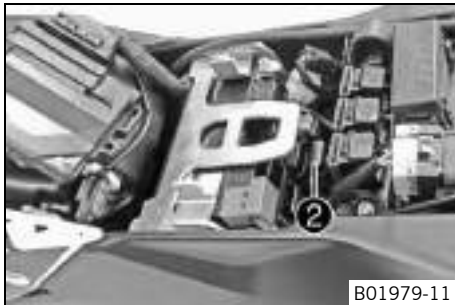

B01979-11

Finishing work

- Position the EFI control unit.
- Mount the battery cover.
- Mount the seat. (📖 p. 76)

14.6 Changing the fuses of individual power consumers



Info


The fuse box containing the fuses of individual power consumers is located under the seat.


Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the seat. (📖 p. 76)

Main work

- Open fuse box cover ①.

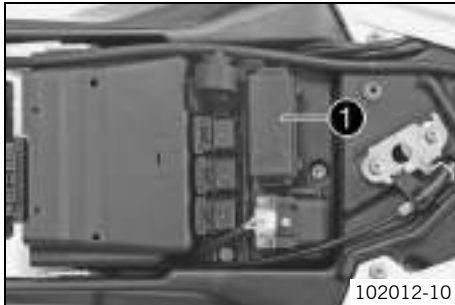

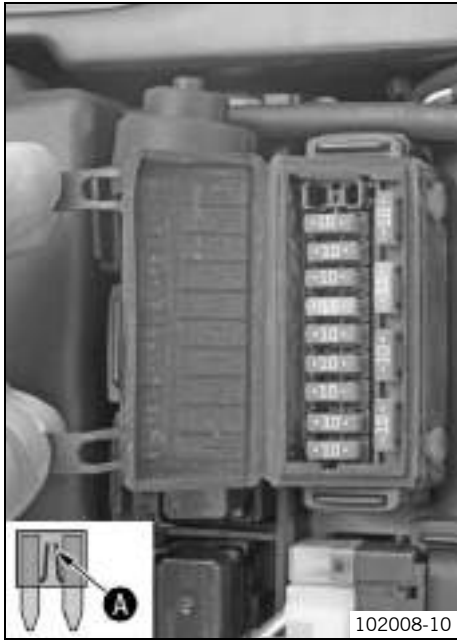

- Remove the defective fuse.

Guideline

| |
|--|
| Fuse 1 - 10 A - ignition, combination instrument, clock, engine electronics control unit |
| Fuse 2 - 10 A - ignition, combination instrument, engine electronics control unit |
| Fuse 3 - 10 A - fuel pump |
| Fuse 4 - 10 A - radiator fan |
| Fuse 5 - 10 A - horn, brake light, turn signal |
| Fuse 6 - 15 A - high beam, low beam, parking light, tail light, license plate lamp |
| Fuse 7 - 10 A - for auxiliary equipment (permanent positive) |
| Fuse 8 - 10 A - for auxiliary equipment (accessories connected with ignition switch) |
| Fuse 9 - 10 A - ABS |
| Fuse 10 - not assigned |
| Fuse SPARE - 10 A/15 A - spare fuses |

Info
 You can recognize a faulty fuse by a burned-out fuse wire **A**.

Warning
Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Use spare fuses with the correct rating only.

| |
|-------------------------------|
| Fuse (75011088010) (📖 p. 181) |
| Fuse (75011088015) (📖 p. 180) |

**Tip**


Replace the spare fuse in the fuse box so that it is available if needed.

- Check that the power consumer is functioning properly.
- Close the fuse box cover.

Finishing work

- Mount the seat. (📖 p. 76)


14.7 Removing the headlight mask with the headlight

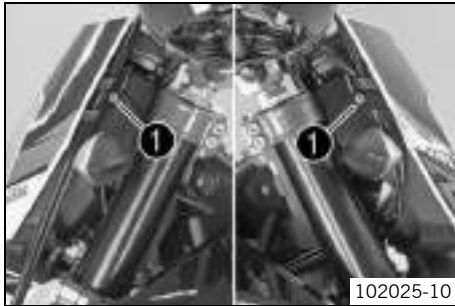**Preparatory work**

- Switch off all power consumers and switch off the engine.

Main work

- Cover the fender with a cloth to protect it from damage.
- Remove screws **1** on both sides.
- Tip the headlight mask forward.

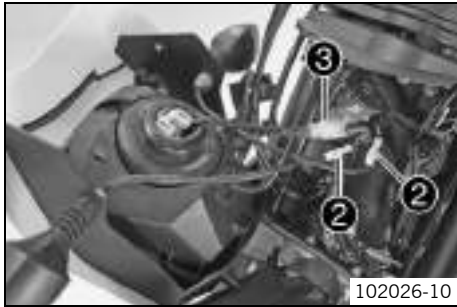

- Disconnect plug-in connectors ② for the turn signals and ③ for the headlight.
- Remove the headlight mask.


14.8 Installing the headlight mask with the headlight




Main work

- Connect plug-in connectors ① of the headlight and ② of the turn signals.
- Check that the lighting is functioning properly.


14 ELECTRICAL SYSTEM

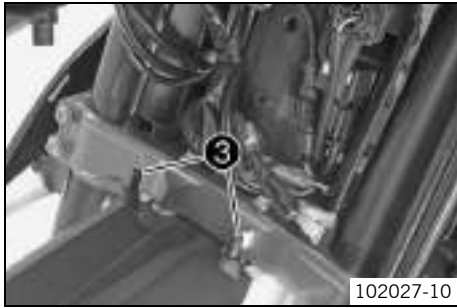

- Remove the cloth from the fender and position the headlight mask.
✓ Holding lugs ③ engage in the headlight mask.

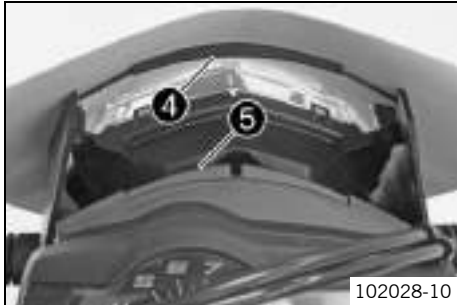

- Position groove ④ on counterpiece ⑤.

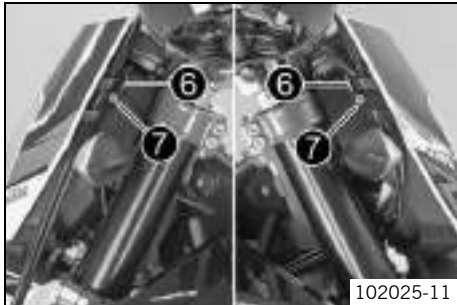

- Position brake line guides ⑥. Mount and tighten screws ⑦.

Guideline

| | | |
|-----------------------|----|-------------------|
| Screw, headlight mask | M5 | 5 Nm (3.7 lbf ft) |
|-----------------------|----|-------------------|

Finishing work

- Check the headlight setting. (📖 p. 135)

14.9 Changing the headlight bulb

Note

Damage to reflector Reduced brightness.


- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.


Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the headlight mask with the headlight. (📖 p. 128)

Main work

- Unplug connector ❶.
- Take off protection cap ❷ of the headlight bulb.

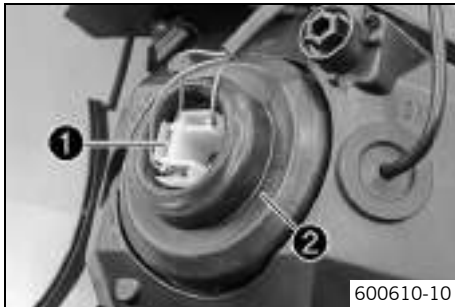

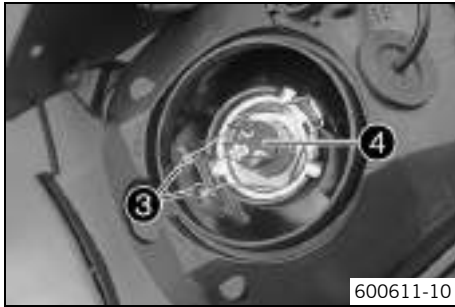

- Detach spring bar ③.
- Remove headlight bulb ④.
- Insert a new headlight bulb into the headlight housing.

Headlight (H4 / socket P43t) (📖 p. 181)

- Fix the headlight bulb in the headlight using the spring bar.
- Mount protection cap. Plug in connector.

Finishing work

- Install the headlight mask with the headlight. (📖 p. 129)
- Check the headlight setting. (📖 p. 135)

14.10 Changing the parking light bulb


Note

Damage to reflector Reduced brightness.

- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.


Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the headlight mask with the headlight. (📖 p. 128)

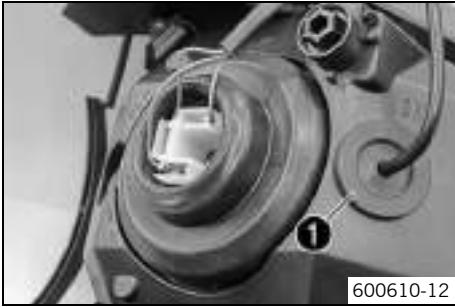

Main work

- Remove protection cap ❶.

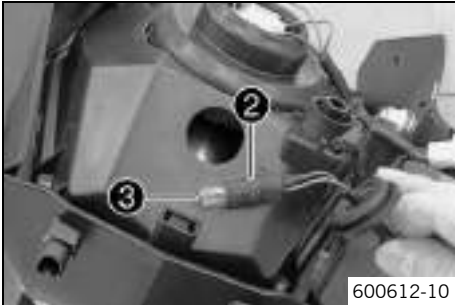

- Pull bulb socket ❷ out of the reflector.
- Pull parking light bulb ❸ out of the bulb socket.
- Insert a new parking light bulb in the bulb socket.

Parking light (W5W / socket W2.1x9.5d) (📖 p. 181)

- Insert the bulb socket in the reflector.
- Insert the protection cap.

Finishing work

- Install the headlight mask with the headlight. (📖 p. 129)
- Check the headlight setting. (📖 p. 135)

14.11 Changing the turn signal bulb

Note

Damage to reflector Reduced brightness.

- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.



Main work

- Remove the screw on the rear of the turn signal housing.
- Tilt headlamp diffuser ① forward carefully and take it off.
- Press the turn signal bulb lightly into the socket, turn it counterclockwise by about 30°, and take it out of the socket.



Info

Do not touch the reflector with your fingers, and keep it free from grease.

- Press the new turn signal bulb carefully into the socket and turn it clockwise until it stops.


Turn signal (RY10W / socket BAU15s) (🗨️ p. 181)

- Position the diffuser.
- Insert the screw and first turn counterclockwise until it engages in the thread with a small jerk. Tighten the screw lightly.

Finishing work

- Check that the turn signal system is functioning properly.

14.12 Checking the headlight setting

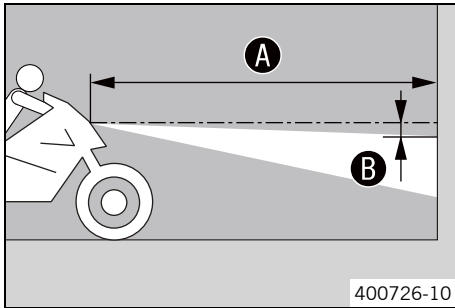

- Position the vehicle upright on a horizontal surface in front of a light wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance **B** under the first mark.

Guideline

| | |
|-------------------|-------------|
| Distance B | 5 cm (2 in) |
|-------------------|-------------|

- Position the vehicle vertically at a distance **A** away from the wall.

Guideline

| | |
|-------------------|-------------|
| Distance A | 5 m (16 ft) |
|-------------------|-------------|

- The rider, with luggage and passenger if applicable, now mounts the motorcycle.
- Switch on the low beam.
- Check the headlight setting.


The light-dark boundary must lie exactly on the lower mark when the motorcycle is ready to operate with the rider mounted along with any luggage and a passenger if applicable.

- » If the boundary between light and dark does not meet specifications:
 - Adjust the headlight range. (📖 p. 135)

14.13 Adjusting the headlight range

Preparatory work

- Check the headlight setting. (📖 p. 135)

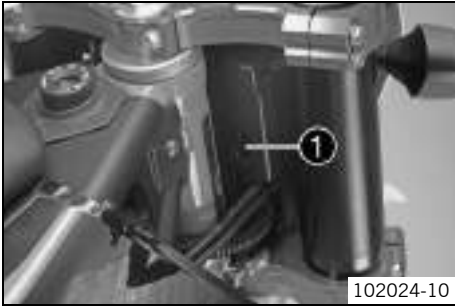

Main work

- Turn adjusting screw ❶ to adjust the headlight range.

Guideline

The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider (instructions on how to apply the mark: Checking the headlight setting).




Info

Turn clockwise to increase the headlight range; turn counterclockwise to reduce the headlight range.

If you have a payload, you may have to correct the headlight range.


15.1 Cooling system

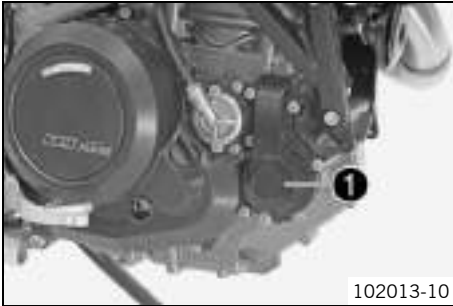

The water pump ① in the engine forces the coolant to flow.

The pressure in the cooling system resulting from heat is regulated by a valve in the radiator cap ②. The heat expansion causes the surplus coolant to flow into the compensating tank ③. When the temperature falls, this surplus coolant is sucked back into the cooling system. This permits the specified coolant temperature without causing any malfunctions.

125 °C (257 °F)

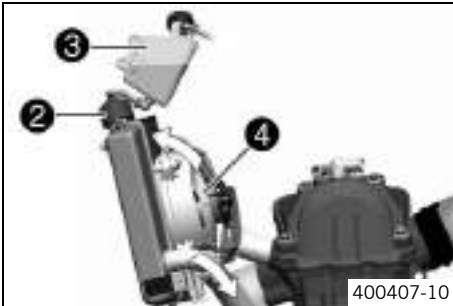

Cooling takes place by means of the air stream and a radiator fan ④, which is controlled by a thermostat.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

15.2 Checking the antifreeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

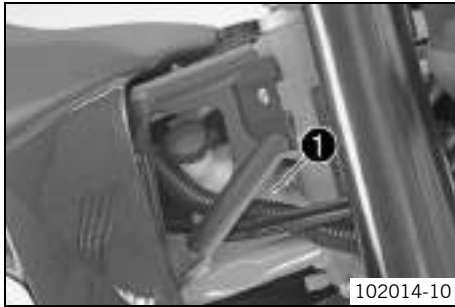

- Stand the motorcycle on its side stand on a horizontal surface.
- Remove the cover of compensating tank ❶.
- Check the antifreeze in the coolant.

-25... -45 °C (-13... -49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.
- Check the coolant level in the compensating tank.

The coolant level must be within the range shown in the figure.

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (📖 p. 188)

- Mount the cover of the compensating tank.
- Remove radiator cap ❷.
- Check the antifreeze in the coolant.


-25... -45 °C (-13... -49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.
- Check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not match the specified value:
 - Check the coolant level and the reason for the loss.

Coolant (📖 p. 188)

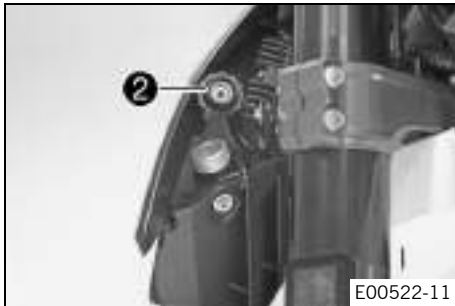

- Mount the radiator cap.

15.3 Checking the coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning


Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

15 COOLING SYSTEM

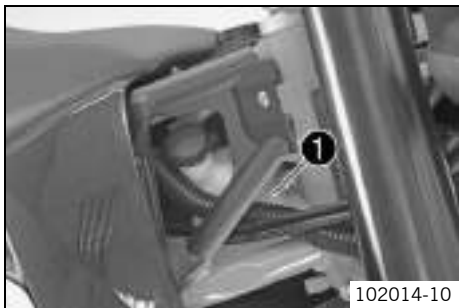

- Stand the motorcycle on its side stand on a horizontal surface.
- Check the coolant level in compensating tank ①.

The coolant level must be within the range shown in the figure.

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (📖 p. 188)



- Remove radiator cap ② and check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not match the specified value:
 - Check the coolant level and the reason for the loss.

Coolant (📖 p. 188)

- Mount the radiator cap.

15.4 Draining the coolant



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.


- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
 - Do not allow coolant to come into contact with the skin, the eyes and clothing.
 - Consult a doctor immediately if coolant is swallowed.
 - Rinse the affected area immediately with plenty of water in the event of contact with the skin.
 - Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
 - Change clothing if coolant spills onto your clothing.
-

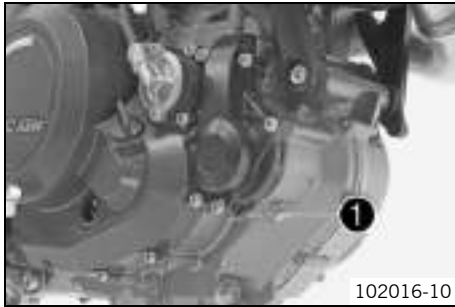

- Position the motorcycle upright.
- Place a suitable container under the engine.
- Remove screw ❶. Remove the radiator cap.
- Completely drain the coolant.
- Mount and tighten screw ❶ with a new seal ring.

Guideline

| | | |
|--------------------------------|-------|------------------------|
| Plug, drain hole of water pump | M10x1 | 15 Nm (11.1 lbf ft) |
|--------------------------------|-------|------------------------|

15.5 Filling/bleeding the cooling system 🛠️



Warning


Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

15 COOLING SYSTEM




- Stand the motorcycle on its side stand on a horizontal surface.
- Remove radiator cap ❶.

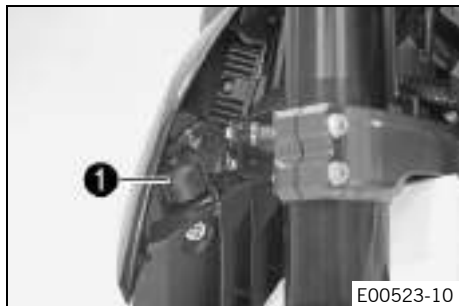

- Refill with coolant.

Coolant (📖 p. 188)

- Completely fill the radiator with coolant.
- Mount radiator cap ❶.

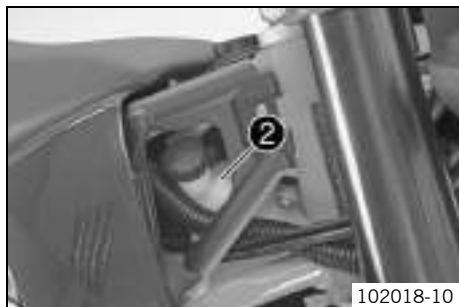


- Remove the cover of compensating tank ❷.
- Add coolant to the level shown in the figure.
- Mount the cover of the compensating tank.

**Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
 - Use an effective exhaust extraction system when starting or running the engine in an enclosed space.
-
- Start the engine and run it until the 5th bar of the temperature indicator lights up.
 - Stop the engine and allow it to cool down.
 - Check the coolant level. (📖 p. 140)

16.1 Adjusting the engine characteristic

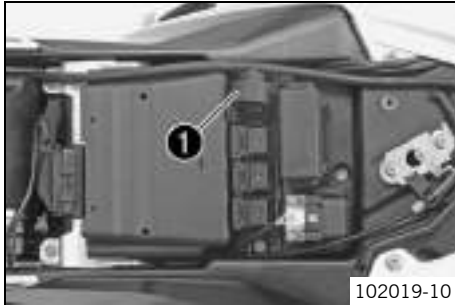

102019-10



601802-10

Preparatory work

- Switch off the ignition by turning the ignition key to position **OFF** ☒.
- Remove the seat. (📖 p. 76)

Main work

- Pull the **Map-Select** switch and holder ❶ upward off of the retaining bracket.
- Pull the **Map-Select** switch out of the holder.

- Turn the adjusting wheel until the desired digit is next to marking ❷.

Set the Map-Select switch to Soft.

- Set the adjusting wheel to position 1.
 - ✓ Soft – reduced homologated peak performance for better driveability.

Set the Map-Select switch to Advanced.

- Set the adjusting wheel to position 2.
 - ✓ Advanced – homologated performance with extremely direct responsiveness.

Set the Map-Select switch to Standard.

- Set the adjusting wheel to position 3, 4, 5, 6, 7, 8 or 9.
 - ✓ Standard – homologated performance with balanced responsiveness.

Set the Map-Select switch to poor fuel quality.

- Set the adjusting wheel to position 0.
 - ✓ Poor fuel quality – homologated performance is reduced in accordance with the fuel quality, use for no more than 1 tank of fuel

- Position the **Map-Select** switch in the holder.
- Slide the **Map-Select** switch with the holder downward onto the retaining bracket.

Finishing work


- Mount the seat. (📖 p. 76)

16.2 Checking the basic position of the shift lever

Info

When driving, the shift lever must not touch the rider's boot when in the basic position.

When the shift lever keeps touching the boot, the transmission will be subject to an excessive load.

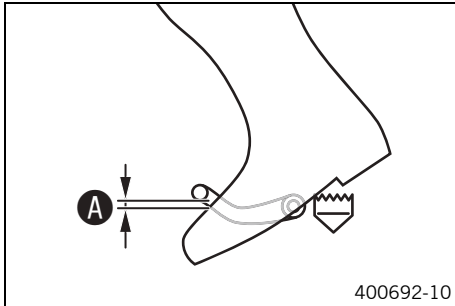


- Sit on the vehicle in the riding position and determine distance **A** between the upper edge of your boot and the shift lever.


| | |
|---|-------------------------------|
| Distance between shift lever and upper edge of boot | 10... 20 mm (0.39... 0.79 in) |
|---|-------------------------------|

- » If the distance does not meet specifications:
 - Adjust the basic position of the shift lever. 🛠️ (📖 p. 148)

16.3 Adjusting the basic position of the shift lever ↩

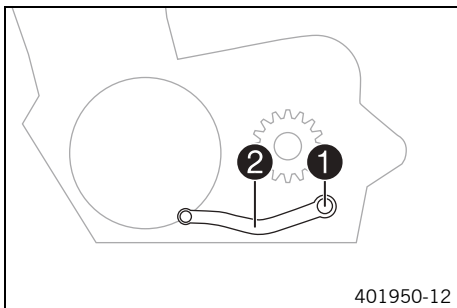

- Remove screw ❶ with the washers and take off shift lever ❷.

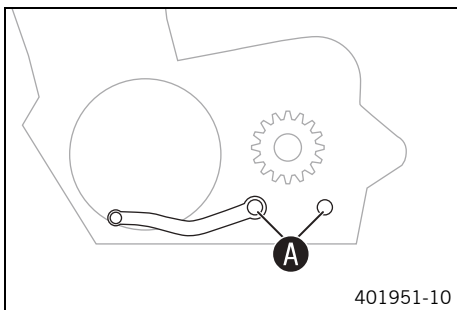

- Clean gear teeth A of the shift lever and shift shaft.
- Mount shift lever ❷ on the shift shaft in the required position and engage the gearing.

i Info

The range of adjustment is limited.
The shift lever must not come into contact with any other vehicle components during the shift procedure.

- Mount and tighten screw ❶ with the washers.

Guideline

| | | | |
|--------------------|----|------------------------|---------------|
| Screw, shift lever | M6 | 14 Nm (10.3 lbf ft) | Loctite® 243™ |
|--------------------|----|------------------------|---------------|

17.1 Checking the engine oil level



Info

The engine oil level must be checked when the engine is warm.



C00182-10

Condition

The engine is at operating temperature.

Preparatory work

- Stand the motorcycle upright on a horizontal surface.

Main work

- Check the engine oil level.



Info





 
After switching off the engine, wait one minute before checking the level.

The engine oil must be between the lower and upper edge of the oil level viewer.

- » If the engine oil level is not at the specified level:
 - Add engine oil. (📖 p. 156)

17.2 Changing the engine oil and filter, cleaning the oil screens



- Drain the engine oil.  (📖 p. 150)
- Remove the oil filter.  (📖 p. 151)
- Clean the oil screens.  (📖 p. 153)
- Install the oil filter.  (📖 p. 155)
- Fill up with engine oil.  (📖 p. 155)

17.3 Draining the engine oil



Warning

Danger of scalding Engine and gear oil get very hot when the motorcycle is ridden.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Drain the engine oil while the engine is at operating temperature.

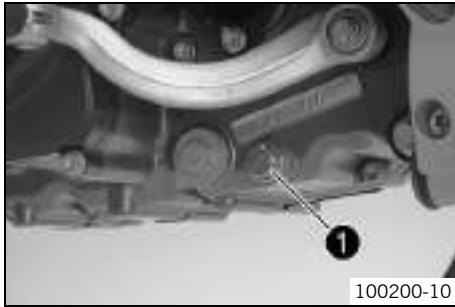

- Place a suitable container under the engine.
- Remove oil drain plug ① with the magnet and seal ring.
- Completely drain the engine oil.



- Thoroughly clean the oil drain plug with magnet.
- Mount the oil drain plug with the magnet and seal ring and tighten it.

Guideline

| | | |
|----------------------------|---------|------------------------|
| Oil drain plug with magnet | M12x1.5 | 20 Nm (14.8 lbf ft) |
|----------------------------|---------|------------------------|

17.4 Removing the oil filter 🛠️



Warning

Danger of scalding Engine and gear oil get very hot when the motorcycle is ridden.


- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

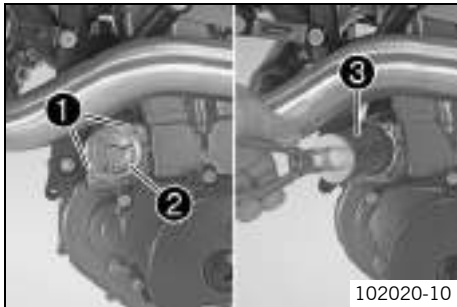


Preparatory work

- Place a suitable container under the engine.

Main work

- Remove screws **1**. Remove the oil filter cover **2** with the O-ring.
- Pull oil filter **3** out of the oil filter housing.

Circlip pliers reverse (51012011000)

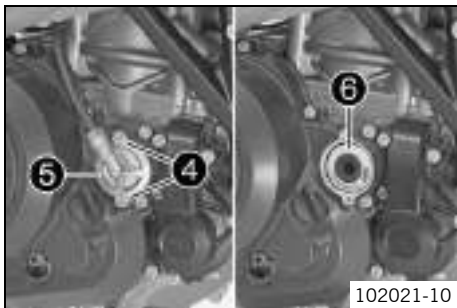

- Remove screws **4**. Remove the oil filter cover **5** with the O-ring.
- Pull oil filter **6** out of the oil filter housing.

Circlip pliers reverse (51012011000)

- Completely drain the engine oil.
- Thoroughly clean the parts and sealing area.

17.5 Cleaning the oil screens



Warning

Danger of scalding Engine and gear oil get very hot when the motorcycle is ridden.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Environmental hazard Hazardous substances cause environmental damage.


- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

Preparatory work


- Place a suitable container under the engine.

Main work


- Remove screw plug **1** with oil screen **2** and the O-rings.

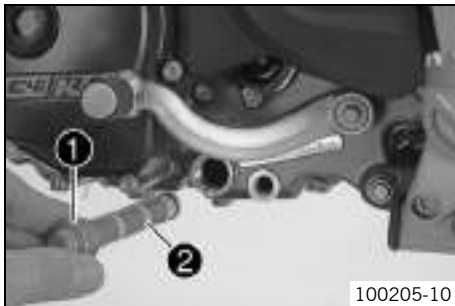

17 SERVICE WORK ON THE ENGINE

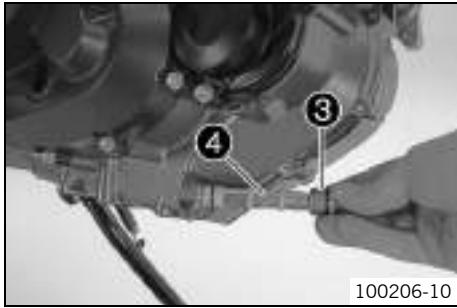


- Remove screw plug ③ with oil screen ④ and the O-rings.
- Completely drain the engine oil.
- Thoroughly clean the parts and sealing surface.

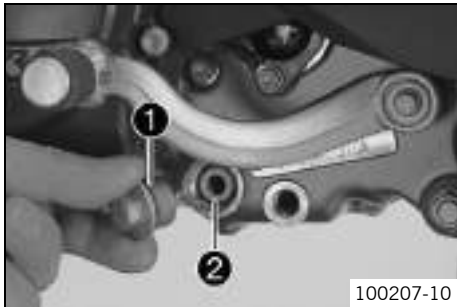

- Position oil screen ② with the O-rings.
- Mount and tighten screw plug ① with the O-ring.

Guideline

| | | |
|------------------|---------|------------------------|
| Plug, oil screen | M20x1.5 | 15 Nm (11.1 lbf ft) |
|------------------|---------|------------------------|

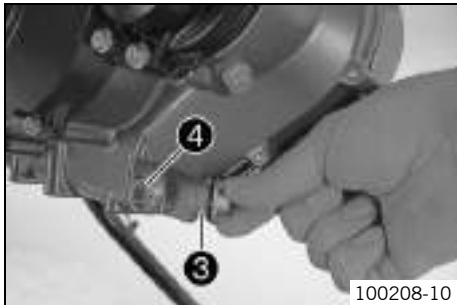


- Position oil screen ④ with the O-rings.
- Mount and tighten screw plug ③ with the O-ring.

Guideline

| | | |
|------------------|---------|------------------------|
| Plug, oil screen | M20x1.5 | 15 Nm (11.1 lbf ft) |
|------------------|---------|------------------------|

17.6 Installing the oil filter ↴

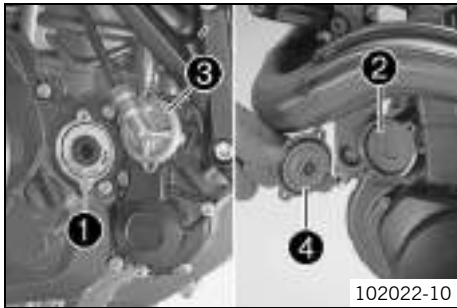

- Insert oil filters ❶ and ❷.
- Oil the O-rings of the oil filter covers. Mount oil filter covers ❸ and ❹.
- Mount and tighten the screws.

Guideline

| | | |
|-------------------------|----|-------------------|
| Screw, oil filter cover | M5 | 6 Nm (4.4 lbf ft) |
|-------------------------|----|-------------------|

17.7 Filling up with engine oil ↴



Info

Too little engine oil or poor-quality engine oil results in premature wear to the engine.



Main work

- Remove filler plug with O-ring ❶ from the clutch cover and add engine oil.

| | | |
|------------|------------------|---|
| Engine oil | 1.70 l (1.8 qt.) | Engine oil (SAE 10W/60) (00062010035) (📖 p. 189) |
| | | Alternative engine oil oil |
| | | Engine oil (SAE 10W/50) (📖 p. 189) |

- Refit plug with O-ring ❶ and tighten it.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

- Start the engine and check that it is oil-tight.

Finishing work


- Check the engine oil level. (📖 p. 149)

17.8 Adding engine oil



Info

Too little engine oil or poor-quality engine oil results in premature wear of the engine.

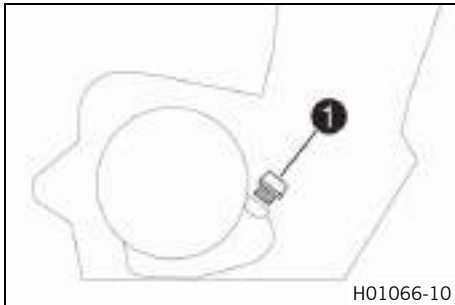

Main work

- Remove filler plug **1** and the O-ring from the clutch cover, and fill up with engine oil.

| |
|--|
| Engine oil (SAE 10W/60) (00062010035) (📖 p. 189) |
| Engine oil (SAE 10W/50) (📖 p. 189) |



Info

In order to achieve optimal engine performance, it is not advisable to mix different engine oils.

We recommended changing the engine oil when necessary.

- Mount and tighten oil filler plug **1** with the O-ring.

**Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

-
- Start the engine and check that it is oil-tight.

Finishing work

- Check the engine oil level. (📖 p. 149)

18.1 Cleaning the motorcycle

Note

Material damage Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component.

Minimum clearance 60 cm (23.6 in)



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.
-



Info

If you clean the motorcycle regularly, its value and appearance will be maintained over a long period. Avoid direct sunshine on the motorcycle during cleaning.

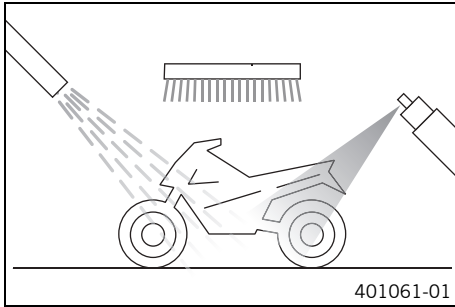

- Seal the exhaust system to keep water out.
- First remove coarse dirt particles with a gentle spray of water.
- Spray very dirty areas with a normal motorcycle cleaner and then clean with a brush.

Motorcycle cleaner (📖 p. 191)

i **Info**

Use warm water containing normal motorcycle cleaner and a soft sponge. Never apply motorcycle cleaner to the dry vehicle; always rinse with water first. If the vehicle was operated in road salt, clean it with cold water. Warm water enhances the corrosive effects of salt.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the plug from the exhaust system.

⚠ **Warning**

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- After cleaning, ride a short distance until the engine reaches operating temperature.

i **Info**

The heat produced causes water at inaccessible locations in the engine and brake system to evaporate.

- Push back the protection covers of the handlebar controls to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled off, lubricate all moving parts and bearings.
- Clean the chain. (📖 p. 79)

- Treat bare metal parts (except for brake discs and exhaust system) with anti-corrosion materials.

Preserving materials for paints, metal and rubber (📖 p. 192)

- Treat all painted parts with a mild paint polish.

Perfect Finish and high gloss polish for paints (📖 p. 192)



Info

Do not polish parts that were matte when delivered as this would strongly impair the material quality.

- Treat all plastic parts and powder-coated parts with a mild cleaning and care agent.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (📖 p. 192)

- Lubricate the ignition/steering lock.

Universal oil spray (📖 p. 192)


18.2 Checks and maintenance steps for winter operation



Info

If you use the motorcycle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.

If the vehicle was operated in road salt, clean it with cold water after riding. Warm water would enhance the corrosive effects of salt.

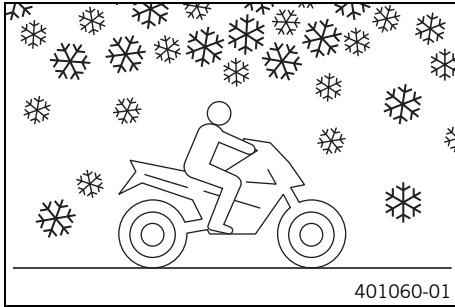

- Clean the motorcycle. (📖 p. 158)
 - Clean the brake system.
-

i **Info**

After **EVERY** trip on salted roads, thoroughly wash the brake calipers and brake linings with cold water and dry carefully. This should be done after the parts are cooled down and while they are installed.

After use on salted roads, clean the motorcycle thoroughly with cold water and dry it properly.

- Treat the engine, the swingarm, and all other bare or galvanized parts (except brake discs) with a wax-based anti-corrosion substance.
-

i **Info**

To prevent serious reduction of the braking efficiency, make sure no anti-corrosion substance gets on to the brake discs.

- Clean the chain. (📖 p. 79)

19.1 Storage



Warning

Danger of poisoning Fuel is poisonous and a health hazard.


- Avoid skin, eye and clothing contact with fuel.
 - Immediately consult a doctor if you swallow fuel.
 - Do not inhale fuel vapors.
 - In case of skin contact, rinse the affected area with plenty of water.
 - Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
 - Change your clothing in case of fuel spills on them.
 - Keep fuels correctly in a suitable canister, and out of the reach of children.
-



Info

If you want to garage the motorcycle for a longer period, take the following actions.

Before storing the motorcycle, check all parts for function and wear. If service, repairs or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

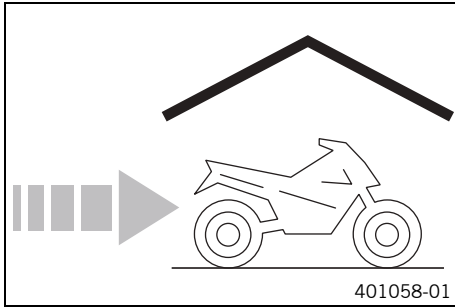

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (📖 p. 191)

- Refuel. (📖 p. 56)
- Clean the motorcycle. (📖 p. 158)
- Change the engine oil and filter, clean the oil screens. 🛠️ (📖 p. 150)
- Check the antifreeze and coolant level. (📖 p. 138)
- Check the tire air pressure. (📖 p. 113)
- Remove the battery. 🛠️ (📖 p. 116)
- Recharge the battery. 🛠️ (📖 p. 120)

Guideline

| | |
|--|--------------------------|
| Storage temperature of battery without direct sunshine | 0... 35 °C (32... 95 °F) |
|--|--------------------------|

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

i Info

KTМ recommends jacking up the motorcycle.

- Raise the motorcycle with the rear wheel stand. (📖 p. 71)
- Raise the motorcycle with the front wheel stand. (📖 p. 72)
- Cover the motorcycle with a tarp or cover that is permeable to air.




Info

Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.

Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and exhaust system to rust.

19.2 Preparing for use after storage

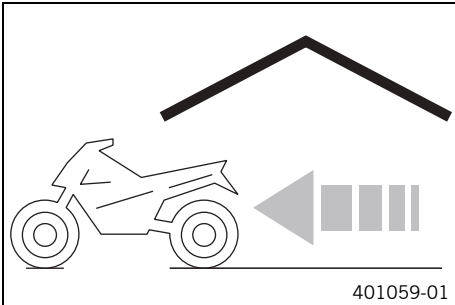






- Take the motorcycle from the front lifting gear. (📖 p. 73)
- Remove the rear of the motorcycle from the wheel stand. (📖 p. 72)
- Recharge the battery. 🔌 (📖 p. 120)
- Install the battery. 🔌 (📖 p. 118)
- Set the clock. (📖 p. 32)
- Perform checks and vehicle care when preparing for use. (📖 p. 46)
- Take a test ride.






| Faults | Possible cause | Action |
|---|---|--|
| The engine does not turn when the starter button is pressed | Operating error | – Carry out the start procedure. (📖 p. 47) |
| | The battery is discharged | – Recharge the battery. 🛠️ (📖 p. 120) – Check the open-circuit current. 🛠️ |
| | Fuse 1 or 2 blown | – Change the fuses of individual power consumers. (📖 p. 126) – Set the clock. (📖 p. 32) |
| | Main fuse burned out | – Change the main fuse. (📖 p. 123) |
| | No ground connection present | – Check the ground connection. |
| Engine turns only if the clutch lever is drawn | The vehicle is in gear | – Shift gear to neutral. |
| | The vehicle is in gear and the side stand is folded out | – Shift gear to neutral. |
| Engine turns but does not start. | Operating error | – Carry out the start procedure. (📖 p. 47) |
| | Fuse 3 blown | – Change the fuses of individual power consumers. (📖 p. 126) |
| | The plug-in connection of the fuel hose connection is not connected | – Connect the plug-in connection of the fuel line. |
| | Defect in fuel injection system | – Read out the fault memory using the KTM diagnostics tool. 🛠️ |
| Engine has too little power. | Air filter is very dirty | – Remove the air filter. 🛠️ (📖 p. 77) – Install the air filter. 🛠️ (📖 p. 78) |
| | Fuel screen is very dirty | – Change fuel screen. 🛠️ |
| | Fuel filter is very dirty | – Check the fuel pressure. 🛠️ |
| | Defect in fuel injection system | – Read out the fault memory using the KTM diagnostics tool. 🛠️ |

| Faults | Possible cause | Action |
|--|---|--|
| Engine overheats. | Too little coolant in cooling system | <ul style="list-style-type: none"> – Check the cooling system for leakage. – Check the coolant level. (🔧 p. 140) |
| | Radiator fins very dirty | – Clean radiator fins. |
| | Foam formation in cooling system | <ul style="list-style-type: none"> – Drain the coolant. 🛠️ (🔧 p. 142) – Fill/bleed the cooling system. 🛠️ (🔧 p. 143) |
| | Buckled or damaged radiator hose | – Change the radiator hose. 🛠️ |
| | Thermostat is faulty | – Check the thermostat. 🛠️ |
| | Fuse 5 blown | – Change the fuses of individual power consumers. (🔧 p. 126) |
| | Defect in radiator fan system | – Check the radiator fan system. 🛠️ |
| | Air in cooling system | – Fill/bleed the cooling system. 🛠️ (🔧 p. 143) |
| FI warning lamp (MIL) lights/flashes | Defect in fuel injection system | – Read out the fault memory using the KTM diagnostics tool. 🛠️ |
| Engine dies during the journey | Lack of fuel | – Refuel. (🔧 p. 56) |
| | Fuse 1 , 2 or 3 blown | – Change the fuses of individual power consumers. (🔧 p. 126) |
| The ABS warning lamp lights up | The ABS fuse is blown | – Change the ABS fuses. (🔧 p. 124) |
| | Large difference in wheel speeds of the front and rear wheels | – Stop the vehicle, switch off the ignition, and start it again. |
| | Malfunction in ABS | – Read out the ABS fault memory using the KTM diagnostics tool. 🛠️ |
| High oil consumption | Engine vent hose bent | – Route the vent hose without bends or change it if necessary. |
| | Engine oil level too high | – Check the engine oil level. (🔧 p. 149) |






| Faults | Possible cause | Action |
|---|---|--|
| High oil consumption | Engine oil too thin (low viscosity) | <ul style="list-style-type: none"> – Change the engine oil and filter, clean the oil screens. 🛠️ (📖 p. 150) |
| Headlight and parking light are not functioning | Fuse 6 blown | <ul style="list-style-type: none"> – Change the fuses of individual power consumers. (📖 p. 126) |
| Turn signal, brake light and horn not functioning | Fuse 5 blown | <ul style="list-style-type: none"> – Change the fuses of individual power consumers. (📖 p. 126) |
| Time is not (correctly) displayed | Fuse 1 blown | <ul style="list-style-type: none"> – Change the fuses of individual power consumers. (📖 p. 126) – Set the clock. (📖 p. 32) |
| Battery discharged | Ignition not switched off when vehicle was parked | <ul style="list-style-type: none"> – Recharge the battery. 🛠️ (📖 p. 120) |
| | Battery is not charged by alternator | <ul style="list-style-type: none"> – Check the charging voltage. 🛠️ – Check the open-circuit current. 🛠️ |
| Combination instrument shows nothing in the display | Fuse 1 or 2 blown | <ul style="list-style-type: none"> – Change the fuses of individual power consumers. (📖 p. 126) – Set the clock. (📖 p. 32) |
| Speedometer in combination instrument not functioning | Speedometer wiring harness is damaged or plug-in connection is oxidized | <ul style="list-style-type: none"> – Check the wiring harness and plug-in connection. |

21 BLINK CODE






| | |
|--|--|
| Blink code FI of warning lamp (MIL) |  02 FI warning lamp (MIL) flashes briefly 2x |
| Error level condition | Crankshaft position sensor - circuit fault |
| Blink code FI of warning lamp (MIL) |  09 FI warning lamp (MIL) flashes briefly 9x |
| Error level condition | Manifold absolute pressure sensor cylinder 1 - input signal too low |
| | Manifold absolute pressure sensor cylinder 1 - input signal too high |
| Blink code FI of warning lamp (MIL) |  12 FI warning lamp (MIL) flashes 1x long, 2x short |
| Error level condition | Engine coolant temperature sensor - input signal too low |
| | Engine coolant temperature sensor - input signal too high |
| Blink code FI of warning lamp (MIL) |  13 FI warning lamp (MIL) flashes 1x long, 3x short |
| Error level condition | Intake air temperature sensor - input signal too low |
| | Intake air temperature sensor - input signal too high |
| Blink code FI of warning lamp (MIL) |  14 FI warning lamp (MIL) flashes 1x long, 4x short |
| Error level condition | Ambient air pressure sensor - input signal too low |
| | Ambient air pressure sensor - input signal too high |






| | |
|--|---|
| Blink code FI of warning lamp (MIL) |  15 FI warning lamp (MIL) flashes 1x long, 5x short |
| Error level condition | Rollover sensor - input signal too low Rollover sensor - input signal too high |
| Blink code FI of warning lamp (MIL) |  17 FI warning lamp (MIL) flashes 1x long, 7x short |
| Error level condition | Lambda sensor cylinder 1, sensor 1 - circuit fault |
| Blink code FI of warning lamp (MIL) |  22 FI warning lamp (MIL) flashes 2x long, 2x short |
| Error level condition | Gear position sensor - circuit fault |
| Blink code FI of warning lamp (MIL) |  24 FI warning lamp (MIL) flashes 2x long, 4x short |
| Error level condition | System voltage - circuit fault |
| Blink code FI of warning lamp (MIL) |  25 FI warning lamp (MIL) flashes 2x long, 5x short |
| Error level condition | Side stand switch - circuit fault |

21 BLINK CODE

| | |
|--|---|
| Blink code FI of warning lamp (MIL) |  27 FI warning lamp (MIL) flashes 2x long, 7x short |
| Error level condition | Accelerator position sensor circuit fault - accelerator position sensor voltage |
| Blink code FI of warning lamp (MIL) |  33 FI warning lamp (MIL) flashes 3x long, 3x short |
| Error level condition | Injector cylinder 1 - circuit fault |
| Blink code FI of warning lamp (MIL) |  37 FI warning lamp (MIL) flashes 3x long, 7x short |
| Error level condition | Ignition coil 1, cylinder 1 - circuit fault |
| Blink code FI of warning lamp (MIL) |  39 FI warning lamp (MIL) flashes 3x long, 9x short |
| Error level condition | Ignition coil 2, cylinder 1 - circuit fault |
| Blink code FI of warning lamp (MIL) |  41 FI warning lamp (MIL) flashes 4x long, 1x short |
| Error level condition | Fuel pump controller - short circuit to ground or open circuit |
| | Fuel pump controller - input signal too high |

| | |
|--|--|
| Blink code FI of warning lamp (MIL) | <div style="text-align: center;">FI</div> 45 FI warning lamp (MIL) flashes 4x long, 5x short |
| Error level condition | Lambda sensor heater cylinder 1, sensor 1 - short circuit to ground or open circuit Lambda sensor heater cylinder 1, sensor 1 - input signal too high |
| Blink code FI of warning lamp (MIL) | <div style="text-align: center;">FI</div> 65 FI warning lamp (MIL) flashes 6x long, 5x short |
| Error level condition | E²PROM Error |
| Blink code FI of warning lamp (MIL) | <div style="text-align: center;">FI</div> 82 FI warning lamp (MIL) flashes 8x long, 2x short |
| Error level condition | Throttle position sensor circuit A - input signal too high Throttle position sensor circuit A - input signal too low |
| Blink code FI of warning lamp (MIL) | <div style="text-align: center;">FI</div> 83 FI warning lamp (MIL) flashes 8x long, 3x short |
| Error level condition | Accelerator position sensor - input signal too low Accelerator position sensor - input signal too high |
| Blink code FI of warning lamp (MIL) | <div style="text-align: center;">FI</div> 84 FI warning lamp (MIL) flashes 8x long, 4x short |
| Error level condition | Throttle position sensor circuit A and B - plausibility fault |

| | |
|--|--|
| Blink code FI of warning lamp (MIL) |  85 FI warning lamp (MIL) flashes 8x long, 5x short |
| Error level condition | Accelerator position sensor circuit A - input signal too low |
| | Accelerator position sensor circuit A - input signal too high |
| Blink code FI of warning lamp (MIL) |  86 FI warning lamp (MIL) flashes 8x long, 6x short |
| Error level condition | Accelerator position sensor circuit B - input signal too high |
| Blink code FI of warning lamp (MIL) |  87 FI warning lamp (MIL) flashes 8x long, 7x short |
| Error level condition | Accelerator position sensor circuit A and B - plausibility fault |
| Blink code FI of warning lamp (MIL) |  90 FI warning lamp (MIL) flashes 9x long |
| Error level condition | Throttle position - circuit fault |
| | DBW internal power relay - inactive |
| | DBW internal power relay - active |
| Blink code FI of warning lamp (MIL) |  89 FI warning lamp (MIL) flashes 8x long, 9x short |
| Error level condition | DBW return spring - stuck open |

| | |
|--|---|
| Blink code FI of warning lamp (MIL) |  92 FI warning lamp (MIL) flashes 9x long, 2x short |
| Error level condition | DBW throttle actuator control IC - stuck open |
| Blink code FI of warning lamp (MIL) |  93 FI warning lamp (MIL) flashes 9x long, 3x short |
| Error level condition | CPU mutual - surveillance error |
| Blink code FI of warning lamp (MIL) |  94 FI warning lamp (MIL) flashes 9x long, 4x short |
| Error level condition | DBW stop function system error - stop function A system error |
| Blink code FI of warning lamp (MIL) |  95 FI warning lamp (MIL) flashes 9x long, 5x short |
| Error level condition | DBW stop function system error - stop function B system error |
| Blink code FI of warning lamp (MIL) |  96 FI warning lamp (MIL) flashes 9x long, 6x short |
| Error level condition | System voltage - input voltage too low |
| | System voltage - input signal too high |

22.1 Engine

| | |
|---|--|
| Design | 1-cylinder 4-stroke engine, water-cooled |
| Displacement | 690 cm ³ (42.11 cu in) |
| Stroke | 84.5 mm (3.327 in) |
| Bore | 102 mm (4.02 in) |
| Compression ratio | 12.6:1 |
| Idle speed | |
| Coolant temperature: ≥ 70 °C (≥ 158 °F) | 1,550... 1,650 rpm |
| Control | OHC, 4 valves controlled via rocker arm, chain drive |
| Valve diameter, intake | 40 mm (1.57 in) |
| Valve diameter, exhaust | 34 mm (1.34 in) |
| Valve play, cold | 0.07... 0.13 mm (0.0028... 0.0051 in) |
| Crankshaft bearing | 2 roller bearings |
| Conrod bearing | Needle bearing |
| Piston pin bearing | Piston pin with DLC coating |
| Pistons | Forged light alloy |
| Piston rings | 1 L-ring, 1 tapered compression piston ring, 1 oil scraper ring |
| Engine lubrication | Semi-dry sump lubrication system with two rotor pumps |
| Primary transmission | 36:79 |
| Clutch | APTC™ antihopping clutch in oil bath/hydraulically operated |
| Transmission | 6-gear, claw shifted |
| Transmission ratio | |
| 1st gear | 14:35 |
| 2nd gear | 16:28 |

| | |
|--------------------------|---|
| 3rd gear | 21:28 |
| 4th gear | 21:23 |
| 5th gear | 23:22 |
| 6th gear | 23:20 |
| Mixture preparation | Electronic fuel injection |
| Ignition | Contactless controlled fully electronic ignition with digital ignition adjustment |
| Alternator | 12 V, 224 W |
| Spark plug | |
| Inside spark plug | NGK LKAR8BI-9 |
| Outside spark plug | NGK LMAR7A-9 |
| Spark plug electrode gap | 0.9 mm (0.035 in) |
| Cooling | Water cooling, permanent circulation of coolant by water pump |
| Starting aid | Electric starter, automatic decompressor |

22.2 Engine tightening torques

| | | | |
|---|----|----------------------|----------------------|
| Screw, membrane fixation | M3 | 2 Nm (1.5 lbf ft) | Loctite® 243™ |
| Hose clamp, intake flange | M4 | 2.5 Nm (1.84 lbf ft) | – |
| Oil nozzle for conrod bearing lubrication | M4 | 2 Nm (1.5 lbf ft) | Loctite® 243™ |
| Locking screw for bearing | M5 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Remaining screws, engine | M5 | 6 Nm (4.4 lbf ft) | – |
| Screw, breather cover on valve cover | M5 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Screw, clutch spring | M5 | 6 Nm (4.4 lbf ft) | – |
| Screw, cover plate for oil return line | M5 | 6 Nm (4.4 lbf ft) | – |

| | | | |
|--|-------|-----------------------------|---------------|
| Screw, gear sensor | M5 | 5 Nm (3.7 lbf ft) | Loctite® 243™ |
| Screw, oil filter cover | M5 | 6 Nm (4.4 lbf ft) | – |
| Screw, oil pump cover, top | M5 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Plug, vacuum connection | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Remaining screws, engine | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw in alternator cover | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, alternator cover (chain shaft through-hole) | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, autodecompression | M6 | 3... 4 Nm (2.2... 3 lbf ft) | Loctite® 243™ |
| Screw, axial lock of camshaft | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, clutch cover | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, clutch slave cylinder | M6x20 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, clutch slave cylinder | M6x35 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, cylinder | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, cylinder head | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, engine case | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, ignition coil | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, ignition pulse generator | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, locking lever | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, oil pump cover, bottom | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, rocker arm shaft | M6 | 12 Nm (8.9 lbf ft) | – |
| Screw, shift drum locating | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, shift lever | M6 | 14 Nm (10.3 lbf ft) | Loctite® 243™ |
| Screw, starter motor | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, stator | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |

| | | | |
|---|---------|--|----------------------------|
| Screw, thermostat housing | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, timing chain guide rail | M6 | 10 Nm (7.4 lbf ft) | Loctite® 2701™ |
| Screw, timing chain tensioning rail | M6 | 10 Nm (7.4 lbf ft) | Loctite® 2701™ |
| Screw, valve cover | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, water pump cover | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, water pump wheel | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Oil jet, piston cooling | M6x0.75 | 4 Nm (3 lbf ft) | Loctite® 243™ |
| Crankshaft clamp screw plug | M8 | 15 Nm (11.1 lbf ft) | – |
| Stud, exhaust flange | M8 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Cylinder head screw | M10 | Tightening sequence: Tighten diagonally, beginning with the rear screw on the timing chain shaft. Step 1 15 Nm (11.1 lbf ft) Step 2 30 Nm (22.1 lbf ft) Step 3 45 Nm (33.2 lbf ft) Step 4 60 Nm (44.3 lbf ft) | Lubricated with engine oil |
| Oil line for oil pressure sensor | M10x1 | 10 Nm (7.4 lbf ft) | – |
| Oil pressure sensor | M10x1 | 10 Nm (7.4 lbf ft) | – |
| Plug, drain hole of water pump | M10x1 | 15 Nm (11.1 lbf ft) | – |
| Screw plug, oil channel | M10x1 | 15 Nm (11.1 lbf ft) | Loctite® 243™ |
| Screw plug, oil channel, for oil radiator | M10x1 | 15 Nm (11.1 lbf ft) | – |

| | | | |
|---|-----------|----------------------|----------------------|
| Screw, unlocking of timing chain tensioner | M10x1 | 10 Nm (7.4 lbf ft) | – |
| Spark plug outside | M10x1 | 11 Nm (8.1 lbf ft) | – |
| Spark plug inside | M12x1.25 | 18 Nm (13.3 lbf ft) | – |
| Coolant temperature sensor on cylinder head | M12x1.5 | 12 Nm (8.9 lbf ft) | – |
| Oil drain plug with magnet | M12x1.5 | 20 Nm (14.8 lbf ft) | – |
| Oil pressure regulator valve plug | M12x1.5 | 20 Nm (14.8 lbf ft) | – |
| Screw plug, oil channel | M14x1.5 | 15 Nm (11.1 lbf ft) | Loctite® 243™ |
| Engine case stud | M16x1.5 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Rotor nut | M18x1.5 | 100 Nm (73.8 lbf ft) | – |
| Nut, engine sprocket | M20x1.5 | 80 Nm (59 lbf ft) | Loctite® 243™ |
| Nut, inner clutch hub | M20x1.5 | 100 Nm (73.8 lbf ft) | Loctite® 243™ |
| Nut, primary gear | M20LHx1.5 | 90 Nm (66.4 lbf ft) | Loctite® 243™ |
| Plug, oil screen | M20x1.5 | 15 Nm (11.1 lbf ft) | – |
| Plug, timing chain tensioner | M20x1.5 | 25 Nm (18.4 lbf ft) | – |
| Plug, oil thermostat | M24x1.5 | 15 Nm (11.1 lbf ft) | – |
| Screw in alternator cover | M24x1.5 | 8 Nm (5.9 lbf ft) | – |

22.3 Capacities

22.3.1 Engine oil

| | | | |
|------------|------------------|--|------------------------------------|
| Engine oil | 1.70 l (1.8 qt.) | Engine oil (SAE 10W/60) (00062010035) (📖 p. 189) | |
| | | Alternative engine oil | Engine oil (SAE 10W/50) (📖 p. 189) |

22.3.2 Coolant

| | | |
|---------|-------------------|--------------------|
| Coolant | 1.20 l (1.27 qt.) | Coolant (📖 p. 188) |
|---------|-------------------|--------------------|

22.3.3 Fuel

| | | |
|-----------------------------------|-------------------|--|
| Total fuel tank capacity, approx. | 12 l (3.2 US gal) | Super unleaded (ROZ 95/RON 95/PON 91) (📖 p. 190) |
|-----------------------------------|-------------------|--|

| | |
|-----------------------|-----------------|
| Fuel reserve, approx. | 2.5 l (2.6 qt.) |
|-----------------------|-----------------|

22.4 Chassis

| | | |
|--------------------------|---|--|
| Frame | Lattice frame made of chrome molybdenum steel tubing, powder-coated | |
| Fork | WP Performance Systems 4860 ROTA SPLIT | |
| Shock absorber | WP Performance Systems 4618 with Pro-Lever linkage | |
| Suspension travel | | |
| Front | 215 mm (8.46 in) | |
| Rear | 250 mm (9.84 in) | |
| Brake system | | |
| Front | Disc brake with radially screwed four-piston brake caliper, floating brake disc | |
| Rear | Disc brake with single-piston brake caliper, floating | |
| Brake discs - diameter | | |
| Front | 320 mm (12.6 in) | |
| Rear | 240 mm (9.45 in) | |
| Brake discs - wear limit | | |
| Front | 4.0 mm (0.157 in) | |

| | |
|---|-----------------------------|
| Rear | 4.5 mm (0.177 in) |
| Tire air pressure, solo | |
| Front | 2.0 bar (29 psi) |
| Rear | 2.0 bar (29 psi) |
| Tire air pressure with passenger / fully loaded | |
| Front | 2.0 bar (29 psi) |
| Rear | 2.2 bar (32 psi) |
| Secondary drive ratio | 16:42 |
| Chain | 5/8 x 1/4" X-ring |
| Steering head angle | 63° |
| Wheelbase | 1,480±15 mm (58.27±0.59 in) |
| Seat height unloaded | 890 mm (35.04 in) |
| Ground clearance unloaded | 270 mm (10.63 in) |
| Weight without fuel, approx. | 144 kg (317 lb.) |
| Maximum permissible front axle load | 150 kg (331 lb.) |
| Maximum permissible rear axle load | 200 kg (441 lb.) |
| Maximum permissible overall weight | 350 kg (772 lb.) |

22.5 Electrical system

| | | |
|---------|-------------|---|
| Battery | YTZ10S | Battery voltage: 12 V Nominal capacity: 8.6 Ah maintenance-free |
| Fuse | 58011109130 | 30 A |
| Fuse | 58011109125 | 25 A |
| Fuse | 75011088015 | 15 A |

| | | |
|---------------------------------------|------------------------|-----------------|
| Fuse | 75011088010 | 10 A |
| Headlight | H4 / socket P43t | 12 V 60/55 W |
| Parking light | W5W / socket W2.1x9.5d | 12 V 5 W |
| Instrument lights and indicator lamps | LED | |
| Turn signal | RY10W / socket BAU15s | 12 V 10 W |
| Brake/tail light | LED | |
| License plate lamp | W5W / socket W2.1x9.5d | 12 V 5 W |

22.6 Tires

| Front tires | Rear tires |
|---|--|
| 120/70 R 17 M/C 58H TL Continental Conti Attack SM | 160/60 R 17 M/C 69H TL Continental Conti Attack SM |
| The tires specified represent one of the possible series production tires. Additional information is available in the Service section under: http://www.ktm.com | |

22.7 Fork

| | |
|---------------------|---|
| Fork part number | 14.18.8N.12 |
| Fork | WP Performance Systems 4860 ROTA SPLIT |
| Compression damping | |
| Comfort | 20 clicks |
| Standard | 15 clicks |

| | |
|--------------------------------------|---|
| Sport | 10 clicks |
| Full payload | 10 clicks |
| Rebound damping | |
| Comfort | 20 clicks |
| Standard | 15 clicks |
| Sport | 10 clicks |
| Full payload | 10 clicks |
| Spring length with preload spacer(s) | 463 mm (18.23 in) |
| Spring rate | |
| Medium (standard) | 5.3 N/mm (30.3 lb/in) |
| Air chamber length | 110 ⁺²⁰ / ₃₀ mm (4.33 ^{+0.79} / _{-1.18} in) |
| Fork length | 895 mm (35.24 in) |
| Fork oil per fork leg | 625 ml (21.13 fl. oz.) |
| | Fork oil (SAE 4) (48601166S1) (📖 p. 190) |

22.8 Shock absorber

| | |
|---------------------------------|---|
| Shock absorber article number | 15.18.7L.12 |
| Shock absorber | WP Performance Systems 4618 with Pro-Lever linkage |
| Compression damping, high-speed | |
| Comfort | 2 turns |
| Standard | 1.5 turns |
| Sport | 1 turn |
| Full payload | 1 turn |
| Compression damping, low-speed | |
| Comfort | 25 clicks |

| | |
|---------------------------------|-------------------------------|
| Standard | 20 clicks |
| Sport | 15 clicks |
| Full load capacity | 15 clicks |
| Rebound damping | |
| Comfort | 20 clicks |
| Standard | 15 clicks |
| Sport | 10 clicks |
| Full payload | 10 clicks |
| Spring preload | 20 mm (0.79 in) |
| Spring rate | |
| Medium (standard) | 80 N/mm (457 lb/in) |
| Hard | 85 N/mm (485 lb/in) |
| Spring length | 220 mm (8.66 in) |
| Gas pressure | 10 bar (145 psi) |
| Static sag | 20... 25 mm (0.79... 0.98 in) |
| Riding sag | 70... 80 mm (2.76... 3.15 in) |
| Fitted length | 395 mm (15.55 in) |
| Shock absorber fluid (見 p. 190) | SAE 2.5 |

22.9 Chassis tightening torques

| | | | |
|-------------------------------------|------|-------------------|---|
| Screw, chain guard | EJOT | 2 Nm (1.5 lbf ft) | – |
| Screw, combination instrument | EJOT | 1 Nm (0.7 lbf ft) | – |
| Screw, license plate holder, bottom | EJOT | 3 Nm (2.2 lbf ft) | – |
| Screw, side cover on spoiler | EJOT | 1 Nm (0.7 lbf ft) | – |

| | | | |
|---------------------------------------|------|----------------------|----------------------|
| Screw, side stand switch | EJOT | 2 Nm (1.5 lbf ft) | – |
| Screw, SLS valve | EJOT | 2 Nm (1.5 lbf ft) | – |
| Fitting, side stand switch | M4 | 2 Nm (1.5 lbf ft) | – |
| Spoke nipple, front wheel | M4.5 | 4 Nm (3 lbf ft) | – |
| Spoke nipple, rear wheel | M4.5 | 4 Nm (3 lbf ft) | – |
| Bolt, foot brake lever stub | M5 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Remaining nuts, chassis | M5 | 4 Nm (3 lbf ft) | – |
| Remaining screws, chassis | M5 | 4 Nm (3 lbf ft) | – |
| Screw, brake line holder on swingarm | M5 | 4 Nm (3 lbf ft) | – |
| Screw, cable on starter motor | M5 | 3 Nm (2.2 lbf ft) | – |
| Screw, combination switch, left | M5 | 3.5 Nm (2.58 lbf ft) | – |
| Screw, electrical holder | M5 | 3 Nm (2.2 lbf ft) | – |
| Screw, exhaust heat shield | M5 | 8 Nm (5.9 lbf ft) | Loctite® 243™ |
| Screw, fuel hose clamp on fuel tank | M5 | 5 Nm (3.7 lbf ft) | – |
| Screw, fuel level sensor | M5 | 3 Nm (2.2 lbf ft) | – |
| Screw, fuel pump | M5 | 4 Nm (3 lbf ft) | – |
| Screw, fuel tank closure flange | M5 | 2.5 Nm (1.84 lbf ft) | – |
| Screw, headlight mask | M5 | 5 Nm (3.7 lbf ft) | – |
| Screw, pressure regulator | M5 | 4 Nm (3 lbf ft) | – |
| Screw, throttle grip | M5 | 3.5 Nm (2.58 lbf ft) | – |
| Remaining nuts, chassis | M6 | 10 Nm (7.4 lbf ft) | – |
| Remaining screws on fuel tank | M6 | 5 Nm (3.7 lbf ft) | – |
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw connection, foot brake cylinder | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, ABS control unit | M6 | 5 Nm (3.7 lbf ft) | – |

| | | | |
|--|----|---------------------|-----------------------|
| Screw, air filter box top | M6 | 2 Nm (1.5 lbf ft) | – |
| Screw, ball joint of push rod on foot brake cylinder | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, brake assembly | M6 | 5 Nm (3.7 lbf ft) | – |
| Screw, brake fluid reservoir of rear brake | M6 | 5 Nm (3.7 lbf ft) | – |
| Screw, chain guard | M6 | 2 Nm (1.5 lbf ft) | Loctite® 243™ |
| Screw, chain guide | M6 | 8 Nm (5.9 lbf ft) | – |
| Screw, chain sliding guard | M6 | 8 Nm (5.9 lbf ft) | Loctite® 243™ |
| Screw, clutch assembly | M6 | 5 Nm (3.7 lbf ft) | – |
| Screw, fan hood | M6 | 3 Nm (2.2 lbf ft) | – |
| Screw, front brake disc | M6 | 14 Nm (10.3 lbf ft) | Loctite® 243™ |
| Screw, ignition lock | M6 | 10 Nm (7.4 lbf ft) | Loctite® 243™ |
| Screw, lower radiator bracket | M6 | 8 Nm (5.9 lbf ft) | – |
| Screw, magnetic holder on side stand | M6 | 6 Nm (4.4 lbf ft) | Loctite® 243™ |
| Screw, radiator bleeding | M6 | 8 Nm (5.9 lbf ft) | – |
| Screw, radiator guard | M6 | 8 Nm (5.9 lbf ft) | – |
| Screw, rear brake disc | M6 | 14 Nm (10.3 lbf ft) | Loctite® 243™ |
| Screw, seat lock | M6 | 5 Nm (3.7 lbf ft) | – |
| Screw, side cover | M6 | 5 Nm (3.7 lbf ft) | – |
| Screw, upper radiator bracket | M6 | 10 Nm (7.4 lbf ft) | – |
| Screw, voltage regulator | M6 | 8 Nm (5.9 lbf ft) | – |
| Screw, wheel speed sensor | M6 | 6 Nm (4.4 lbf ft) | – |
| Nut, rear sprocket screw | M8 | 35 Nm (25.8 lbf ft) | Loctite® 2701™ |
| Remaining nuts, chassis | M8 | 25 Nm (18.4 lbf ft) | – |
| Remaining screws, chassis | M8 | 25 Nm (18.4 lbf ft) | – |

| | | | |
|--|-------|---------------------|----------------------|
| Screw, bottom triple clamp | M8 | 12 Nm (8.9 lbf ft) | – |
| Screw, chain sliding piece | M8 | 15 Nm (11.1 lbf ft) | – |
| Screw, connection lever on frame | M8 | 30 Nm (22.1 lbf ft) | Loctite® 243™ |
| Screw, foot brake lever | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, fork stub | M8 | 15 Nm (11.1 lbf ft) | – |
| Screw, front footrest bracket | M8 | 25 Nm (18.4 lbf ft) | – |
| Screw, fuel tank bracket | M8 | 15 Nm (11.1 lbf ft) | – |
| Screw, fuel tank, bottom | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, fuel tank, top | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, grab handle | M8 | 10 Nm (7.4 lbf ft) | – |
| Screw, handlebar clamp | M8 | 20 Nm (14.8 lbf ft) | – |
| Screw, heel protector | M8x12 | 5 Nm (3.7 lbf ft) | Loctite® 243™ |
| Screw, license plate holder, top | M8 | 20 Nm (14.8 lbf ft) | – |
| Screw, main silencer clamp | M8 | 12 Nm (8.9 lbf ft) | Copper paste |
| Screw, main silencer holder | M8 | 25 Nm (18.4 lbf ft) | – |
| Screw, main silencer holder on fuel tank | M8 | 25 Nm (18.4 lbf ft) | – |
| Screw, rear footrest bracket | M8x16 | 25 Nm (18.4 lbf ft) | – |
| Screw, side stand bracket | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, spring holder on side stand bracket | M8 | 25 Nm (18.4 lbf ft) | Loctite® 243™ |
| Screw, steering stem | M8 | 20 Nm (14.8 lbf ft) | – |
| Screw, top triple clamp | M8 | 17 Nm (12.5 lbf ft) | – |
| Engine carrying screw | M10 | 45 Nm (33.2 lbf ft) | Loctite® 243™ |
| Remaining nuts, chassis | M10 | 45 Nm (33.2 lbf ft) | – |
| Remaining screws, chassis | M10 | 45 Nm (33.2 lbf ft) | – |

22 TECHNICAL DATA

| | | | |
|------------------------------------|----------|----------------------|---------------|
| Screw, bottom shock absorber | M10 | 45 Nm (33.2 lbf ft) | Loctite® 243™ |
| Screw, engine bearer on frame | M10 | 45 Nm (33.2 lbf ft) | – |
| Screw, handlebar support | M10 | 40 Nm (29.5 lbf ft) | Loctite® 243™ |
| Screw, side stand | M10 | 35 Nm (25.8 lbf ft) | Loctite® 243™ |
| Screw, top shock absorber | M10 | 45 Nm (33.2 lbf ft) | Loctite® 243™ |
| Banjo bolt, brake line | M10x1 | 25 Nm (18.4 lbf ft) | – |
| Screw, front brake caliper | M10x1.25 | 45 Nm (33.2 lbf ft) | Loctite® 243™ |
| Screw, swingarm pivot | M12 | 80 Nm (59 lbf ft) | – |
| Lambda sensor | M12x1.25 | 25 Nm (18.4 lbf ft) | Copper paste |
| Nut, linkage lever on swingarm | M14x1.5 | 100 Nm (73.8 lbf ft) | – |
| Nut, linkage lever to rocker arm | M14x1.5 | 100 Nm (73.8 lbf ft) | – |
| Screw, radiator temperature sensor | M18 | 20 Nm (14.8 lbf ft) | – |
| Screw, bottom steering head | M20x1.5 | 60 Nm (44.3 lbf ft) | Loctite® 243™ |
| Screw, top steering head | M20x1.5 | 12 Nm (8.9 lbf ft) | – |
| Screw, front wheel spindle | M24x1.5 | 45 Nm (33.2 lbf ft) | – |
| Nut, rear wheel spindle | M25x1.5 | 90 Nm (66.4 lbf ft) | – |

Brake fluid DOT 4 / DOT 5.1

Standard/classification

- DOT

Guideline

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier

Castrol

- **RESPONSE BRAKE FLUID SUPER DOT 4**

Motorex®

- **Brake Fluid DOT 5.1**

Coolant

Guideline

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

| | |
|-----------------------------------|-----------------|
| Antifreeze protection to at least | -25 °C (-13 °F) |
|-----------------------------------|-----------------|

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

Recommended supplier

Motorex®

- COOLANT M3.0

Engine oil (SAE 10W/60) (00062010035)

Standard/classification

- JASO T903 MA (📖 p. 193)
- SAE (📖 p. 193) (SAE 10W/60)
- KTM LC4 2007+

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Synthetic engine oil

Recommended supplier

Motorex®

- Cross Power 4T

Engine oil (SAE 10W/50)

Standard/classification

- JASO T903 MA (📖 p. 193)
- SAE (📖 p. 193) (SAE 10W/50)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Fully synthetic engine oil

Recommended supplier

Motorex®

- Power Synt 4T

Fork oil (SAE 4) (48601166S1)

Standard/classification

- SAE (📖 p. 193) (SAE 4)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Shock absorber fluid (SAE 2.5) (50180751S1)

Standard/classification

- SAE (📖 p. 193) (SAE 2.5)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Super unleaded (ROZ 95/RON 95/PON 91)

Standard/classification

- DIN EN 228 (ROZ 95/RON 95/PON 91)

Guideline

- Only use unleaded super fuel that matches or is equivalent to the specified fuel grade.
- Fuel with an ethanol content of up to 10 % (E10 fuel) is safe to use.



Info

Do **not** use fuel containing methanol (e. g. M15, M85, M100) or more than 10 % ethanol (e. g. E15, E25, E85, E100).

Chain cleaner

Recommended supplier

Motorex®

- Chain Clean

Chain lube for road use

Guideline

Recommended supplier

Motorex®

- Chainlube Road

Fuel additive

Recommended supplier

Motorex®

- Fuel Stabilizer

Long-life grease

Recommended supplier

Motorex®

- Bike Grease 2000

Motorcycle cleaner

Recommended supplier

Motorex®

- Moto Clean

Perfect Finish and high gloss polish for paints

Recommended supplier

Motorex®

- Moto Polish & Shine

Preserving materials for paints, metal and rubber

Recommended supplier

Motorex®

- Moto Protect

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier

Motorex®

- Quick Cleaner

Universal oil spray

Recommended supplier

Motorex®

- Joker 440 Synthetic

JASO T903 MA

Different technical development directions required a separate specification for 4-stroke motorcycles – the **JASO T903 MA** standard. Earlier, engine oils from the automobile industry were used for 4-stroke motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and the clutch are lubricated with the same oil.

The **JASO MA** standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

26 INDEX OF SPECIAL TERMS




| | | |
|-----|----------------------------|---|
| ABS | ABS | Safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces |
| MIL | Malfunction indicator lamp | Indicator lamp that supports vehicle diagnostics through flash codes |
| OBD | On-board diagnosis | Vehicle system that monitors emission- and safety-related values |

27 LIST OF ABBREVIATIONS

| | |
|----------|----------------|
| Art. no. | Article number |
| ca. | circa |
| cf. | compare |
| e.g. | for example |
| etc. | et cetera |
| i.a. | inter alia |
| no. | number |
| poss. | possibly |




28.1 Red symbols

Red symbols indicate an error condition that requires immediate intervention.

| | |
|--|--|
|  | The temperature warning lamp lights up red – The coolant temperature has reached a critical value. |
|  | The oil pressure warning lamp lights up red – The oil pressure is too low. |
|  | The battery warning lamp lights up red – The voltage in the vehicle system is too low. |


28.2 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.



| | |
|--|---|
|  | The low fuel warning lamp lights up yellow – The fuel level has reached the reserve mark. The display switches to TRIP F . |
|  | FI warning lamp (MIL) lights up/flashes yellow – The OBD has detected an emission- or safety-critical fault. |
|  | ABS warning lamp lights up/flashes yellow – Status or error messages relating to ABS. |

28.3 Green and blue symbols

Green and blue symbols reflect information.

| | |
|---|--|
|  | The turn signal indicator lamp flashes green simultaneously with the turn signal – The turn signal is switched on. |
|---|--|

28 LIST OF SYMBOLS

| | |
|--|--|
|  | The idling speed indicator lamp lights up green – The transmission is shifted to idle. |
|  | The high beam indicator lamp lights up blue – The high beam is switched on. |

A

| | |
|--------------------------------------|----|
| ABS | 90 |
| Accessories | 14 |
| Air filter | |
| installing | 78 |
| removing | 77 |
| Antilock braking system | 90 |
| Applying the brakes | 52 |
| Auxiliary substances | 14 |

B

| | |
|-----------------------------|---------|
| Battery | |
| installing | 118 |
| recharging | 120 |
| removing | 116 |
| Blink code | 168-173 |
| Brake discs | |
| checking | 92 |
| Brake fluid | |
| front brake, adding | 94 |
| rear brake, adding | 99 |
| Brake fluid level | |
| front brake, checking | 93 |
| rear brake, checking | 98 |
| Brake linings | |
| front brake, checking | 95 |

| | |
|----------------------------|-----|
| rear brake, checking | 101 |
| Brakes | 52 |

C

| | |
|---|-----------|
| Capacity | |
| Coolant | 179 |
| engine oil | 155, 178 |
| fuel | 58, 179 |
| Chain | |
| checking | 83 |
| cleaning | 79 |
| dirt, checking for | 79 |
| Chain guide | |
| checking | 83 |
| Chain tension | |
| adjusting | 82 |
| checking | 80 |
| Changing the turn signal bulb | 134 |
| Chassis number | 20 |
| Checking the headlight setting | 135 |
| Clutch | |
| fluid level, checking/correcting | 88 |
| Clutch lever | 23 |
| basic position, adjusting | 87 |
| Combination instrument | |
| clock, setting | 32 |
| coolant temperature indicator | 36 |

| | | | |
|---|-----|--------------------------------|-----|
| display | 30 | Engine number | 21 |
| function buttons | 28 | Engine oil | |
| GEAR display | 35 | adding | 156 |
| indicator lamps | 29 | changing | 150 |
| ODO display | 33 | draining | 150 |
| Overview | 27 | refilling | 155 |
| setting the kilometers or miles | 31 | Engine oil level | |
| speed display | 31 | checking | 149 |
| tachometer | 28 | Engine sprocket | |
| time | 32 | checking | 83 |
| TRIP 1 display, setting/resetting | 33 | Environment | 12 |
| TRIP 2 display, setting/resetting | 34 | F | |
| TRIP F display | 35 | Figures | 15 |
| Coolant | | Filler cap | |
| checking the antifreeze and coolant level | 138 | closing | 38 |
| checking the level | 140 | opening | 36 |
| draining | 142 | Filling up | |
| Cooling system | 137 | fuel | 56 |
| filling/bleeding | 143 | Foot brake lever | 41 |
| Customer service | 15 | basic position, adjusting | 97 |
| E | | free travel, checking | 96 |
| Electric starter button | 26 | Fork | 63 |
| Emergency OFF switch | 26 | compression damping, adjusting | 63 |
| Engine | | dust boots, cleaning | 74 |
| running in | 43 | rebound, adjusting | 64 |
| Engine characteristic | | Fork part number | 22 |
| adjusting | 146 | | |

INDEX

200

| | |
|--------------------------------------|-----------|
| Fork protector | |
| installing | 75 |
| removing | 75 |
| Front wheel | |
| installing | 104 |
| removing | 103 |
| Fuse | |
| individual power consumers, changing | 126 |
| Fuses, ABS | |
| changing | 124 |
| H | |
| Hand brake lever | 23 |
| basic position, adjusting | 91 |
| Handlebar position | 68 |
| adjusting | 69 |
| Handrails | 39 |
| Headlight | |
| light range, adjusting | 135 |
| Headlight bulb, changing | 131 |
| Headlight mask with headlight | |
| installing | 129 |
| removing | 128 |
| Horn button | 24 |
| I | |
| Ignition lock | 27 |

| | |
|--|-----|
| Implied warranty | 14 |
| Intended use | 9 |
| K | |
| Key number | 21 |
| L | |
| Light switch | 25 |
| Loading the vehicle | 44 |
| Luggage | 44 |
| M | |
| Main fuse | |
| changing | 123 |
| Misuse | 9 |
| Motorcycle | |
| cleaning | 158 |
| lift stand, raising with | 70 |
| lift stand, removing from | 70 |
| raising with the front wheel stand | 72 |
| raising with the rear wheel stand | 71 |
| removing the rear from the wheel stand | 72 |
| taking from the front lifting gear | 73 |
| O | |
| Oil filter | |
| changing | 150 |
| installing | 155 |
| removing | 151 |

| | |
|--|----------|
| Oil screens | |
| cleaning | 150, 153 |
| Operating substances | 14 |
| Owner's Manual | 13 |
| P | |
| Parking | 54 |
| Parking light bulb | |
| changing | 132 |
| Passenger footrest | 39 |
| Preparing for use | |
| advice on first use | 42 |
| after storage | 164 |
| checks and vehicle care when preparing for use | 46 |
| Protective clothing | 12 |
| R | |
| Rear hub rubber dampers | |
| checking | 109 |
| Rear sprocket | |
| checking | 83 |
| Rear wheel | |
| installing | 107 |
| removing | 106 |
| Riding | 49 |
| starting off | 49 |

| | |
|---|-------|
| S | |
| Safe operation | 11 |
| Seat | |
| mounting | 76 |
| removing | 76 |
| unlocking | 38 |
| Service | 15 |
| Service schedule | 59-62 |
| Shift lever | 40 |
| basic position, adjusting | 148 |
| basic position, checking | 147 |
| Shifting | 49 |
| Shock absorber | 63 |
| compression damping, general | 65 |
| high-speed compression damping, adjusting | 66 |
| low-speed compression damping, adjusting | 65 |
| rebound damping, adjusting | 67 |
| Shock absorber article number | 22 |
| Side stand | 41 |
| Spare parts | 14 |
| Spoke tension | |
| checking | 114 |
| Starting | 47 |
| Steering lock | 27 |
| Stopping | 54 |
| Storage | 162 |

T

Technical data

| | |
|-----------------------------|---------|
| capacities | 178 |
| chassis | 179 |
| chassis tightening torques | 183 |
| electrical system | 180 |
| engine | 174 |
| engine tightening torques | 175 |
| fork | 181 |
| shock absorber | 182 |
| tires | 181 |
| Throttle grip | 24 |
| Tire air pressure | |
| checking | 113 |
| Tire condition | |
| checking | 111 |
| Transport | 55 |
| Troubleshooting | 165-167 |
| Tubeless tire system | 113 |
| Turn signal switch | 25 |
| Type label | 20 |
| U | |
| Use definition | 9 |
| V | |
| View of vehicle | |
| front left | 16 |

| | |
|------------|----|
| rear right | 18 |
|------------|----|

W

| | |
|------------------------------|-----|
| Warranty | 14 |
| Winter operation | |
| checks and maintenance steps | 160 |
| Work rules | 12 |

READY TO RACE

>> www.ktm.com



3213548en

09/2016

The KTM logo, consisting of the letters 'KTM' in a bold, italicized, sans-serif font, set against an orange square background.

KTM Sportmotorcycle GmbH
3230 Mattighofen/Austria
<http://www.ktm.com>



Photo: Mitterbauer/KTM