

## Introduction

This service manual describes the service procedures for the SK50M.

This Model Specific Manual includes every service procedure that is of a specific nature to this particular model. Basic service procedures that are common to other Honda Motorcycles/Motor Scooters/ATVs are covered in the Common Service Manual. This Model Specific Service Manual should be used together with the Common Service Manual in order to provide complete service information on all aspects of this scooter.

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition. Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 3 apply to the whole scooter. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections.

While Sections 4 through 17 describe parts of the scooter, grouped according to locations.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections describe the service procedure through system illustration. Refer to the next page for details on how to use this manual.

If you don't know the source of the trouble, go to section 1B TROUBLESHOOTING.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON HONDA MOTORCYCLES.

HONDA MOTOR CO., LTD.  
SERVICE PUBLICATIONS OFFICE

## Contents

General Information	1
Frame/Body Panels/Exhaust System	2
Maintenance	3
Lubrication System	4
Fuel System	5
Engine Removal/Installation	6
Cylinder Head/Cylinder/Piston	7
Kickstarter/Drive Pulley/Clutch/Driven Pulley	8
Final Reduction	9
Crankcase/Crankshaft	10
Front Wheel/Suspension/Steering/Brake	11
Rear Wheel/Suspension/Brake	12
Chassis	
Charging System/Alternator	13
Ignition System	14
Electric Starter	15
Lights/Meters/Switches	16
Wiring Diagram	17
Electrical	
Troubleshooting	18
Index	

## Important Safety Notice

**WARNING:** Indicates a strong possibility of severe personal injury or death if instructions are not followed.

**CAUTION:** Indicates a possibility of equipment damage if instructions are not followed.


**NOTE:** Gives helpful information.

Detailed descriptions of standard workshop procedures, safety principles and service operations are not included. It is important to note that this manual contains some warnings and cautions against some specific service methods which could cause PERSONAL INJURY to service personnel or could damage a vehicle or render it unsafe. Please understand that those warnings could not cover all conceivable ways in which service, whether or not recommended by Honda, might be done or all the possibly hazardous consequences of each conceivable way, nor could Honda investigate all such ways. Anyone using service procedures or tools, whether or not recommended by Honda, must satisfy himself thoroughly that neither personal safety nor vehicle safety will be jeopardized by the service methods or tools selected.

# How to Use This Manual


## Finding Information You Need

- This manual is divided into sections which cover each of the major components of the motorcycle.
- To quickly find the section you are interested in, the first page of each section is marked with a black tab that lines up with one of the thumb index tabs before this page. The first page of each section lists the table of contents within the section.
- Read the service information and troubleshooting related to the section before you begin working.
- An index of the entire book is provided in the last chapter to directly locate the information you need.

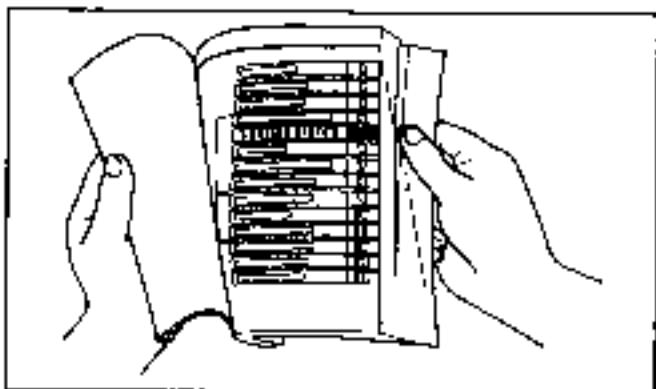

## Note on the Explanation Method of This Manual

- The removal and installation of parts are for the most part illustrated by large and clear illustrations that should provide the reader with visual aid in understanding the major point for servicing.
- The system illustrations are augmented by callouts whose numbers or letters indicate the order in which the parts should be removed or installed.
- The sequence of steps represented numerically are differentiated from the ones represented alphabetically to notify the reader that they must perform these steps separately.
- For example, if the steps prior and up to camshaft removal are performed with the engine installed, but the subsequent steps like cylinder head removal require engine removal, the callouts are grouped in numerical and alphabetical orders.
- The illustrations may contain symbol marks to indicate necessary service procedures and precautions that need to be taken. Refer to the next page for the meaning of each symbol mark.
- Also in the illustration is a chart that lists information such as the order in which the part is removed/installed, the name of the part, and some extra notes that may be needed.
- Step by step instructions are provided to supplement the illustrations when detailed explanation of the procedure is necessary or illustrations alone would not suffice.
- Service procedures required before or after the procedure described on that particular page, or inspection/adjustment procedures required following the installation of parts, are described under the title Requisite Service.
- Standard workshop procedures and knowledge covered in the Common Service Manual are abbreviated in this manual.

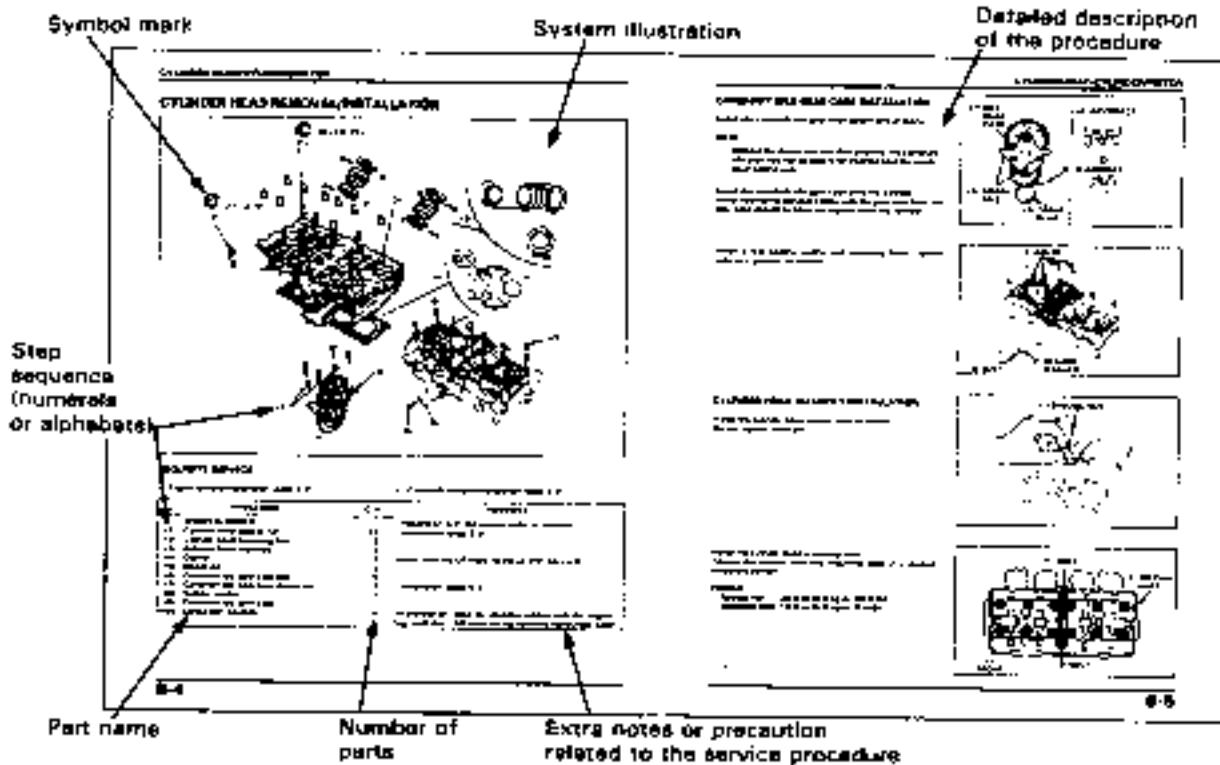

## Symbols

The symbols used throughout this manual show specific service procedures. If supplementary information is required pertaining to these symbols, it would be explained specifically in the text without the use of the symbols.

	Replace the part(s) with new one(s) before assembly.
	Use special tool
	Use optional tool. Use the same procedure you use to order parts.
10 (1.0, 7.2)	Torque specification. 10 N·m (1.0 kg·m, 7.2 ft·lb)
	Use recommended engine oil, unless otherwise specified.
	Use molybdenum oil solution (mixture of the engine oil and molybdenum grease with the ratio 1 : 1).
	Use multi-purpose grease (Lithium based multi-purpose grease NLGI #2 or equivalent)
	Use molybdenum disulfide grease (containing more than 3% molybdenum disulfide, NLGI #2 or equivalent) Example: Molykote® BA-2 plus manufactured by Dow Corning, U.S.A. Multi-purpose M-2 manufactured by Mitsubishi Oil Japan
	Use molybdenum disulfide paste (containing more than 40% molybdenum disulfide, NLGI #2 or equivalent) Example: Molykote® G-n Paste manufactured by Dow Corning, U.S.A. Honda Moly BO (U.S.A. only) Rocol ASP manufactured by Rocol Limited, U.K. Rocol Paste manufactured by Sumico Lubricant, Japan
	Use silicone grease
	Apply a locking agent. Use the agent of the middle strength, unless otherwise specified.
	Apply sealant
	Use brake fluid, DOT 3 or DOT 4. Use the recommended brake fluid, unless otherwise specified.
	Use Fork or Suspension Fluid.

# 1. General Information

General Safety	1-1	Tools	1-11
Model Identification	1-2	Lubrication & Seal Points	1-12
Specifications	1-3	Cable & Harness Routing	1-14
Torque Values	1-9		

## General Safety

### Carbon Monoxide

If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in an enclosed area.

**WARNING**  
The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and may lead to death.

Run the engine in an open area or with an exhaust evacuation system in an enclosed area.

### Gasoline

Work in a well ventilated area. Keep cigarettes, flames or sparks away from the work area or where gasoline is stored.

**WARNING**  
Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.

### Hot Components

**WARNING**  
Engine and exhaust system parts become very hot and remain hot for some time after the engine is run. Wear insulated gloves or wait until the engine and exhaust system have cooled before handling these parts.

### Brake Dust

Never use an air hose or dry brush to clean brake assemblies. Use a vacuum cleaner or alternate method designed to minimize the hazard caused by airborne asbestos fibers.



**WARNING**  
Inhaled asbestos fibers have been found to cause respiratory disease and cancer.

### Battery Hydrogen Gas & Electrolyte

**WARNING**  


- The battery gives off explosive gases; keep sparks, flames and cigarettes away. Provide adequate ventilation when charging.
- The battery contains sulfuric acid (electrolyte). Contact with skin or eyes may cause severe burns. Wear protective clothing and a face shield.
  - If electrolyte gets on your skin, flush with water.
  - If electrolyte gets in your eyes, flush with water for at least 15 minutes and call a physician.
- Electrolyte is poisonous.
  - If swallowed, drink large quantities of water or milk and follow with milk of magnesia or vegetable oil and call a physician. KEEP OUT OF REACH OF CHILDREN.

## Model Identification

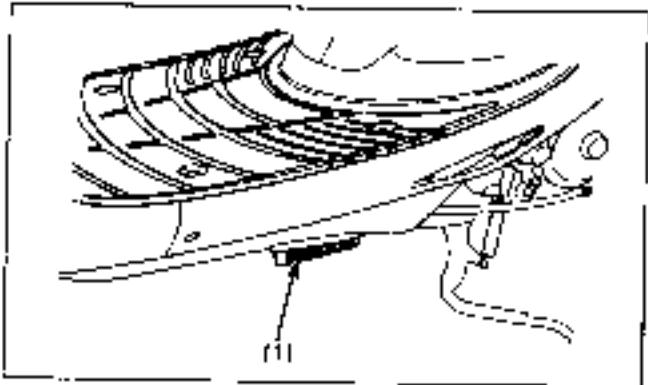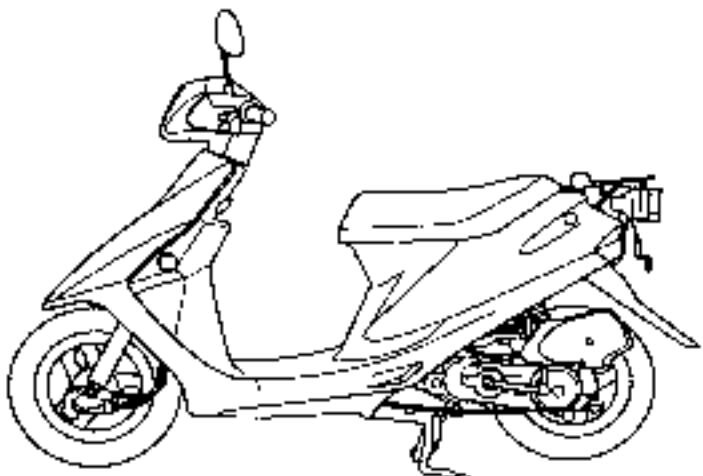


(1) FRAME SERIAL NUMBER

The frame serial number is stamped on the left side of the frame.

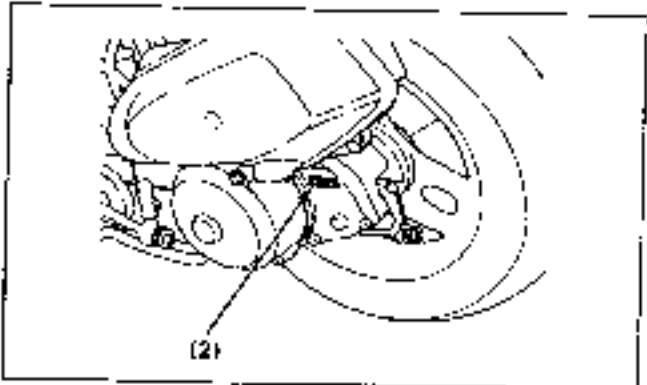


(2) ENGINE SERIAL NUMBER

The engine serial number is stamped on the left side of the transmission cover.

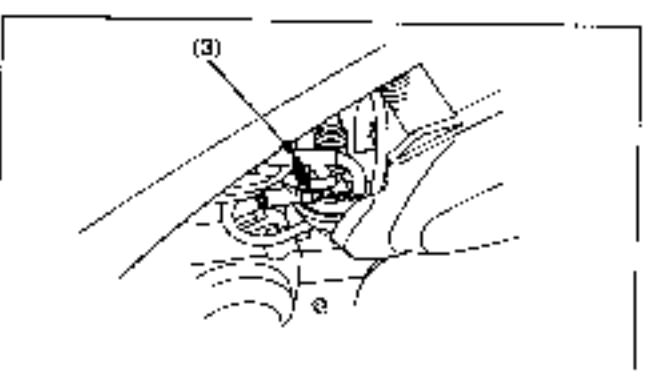


(3) CARBURETOR IDENTIFICATION NUMBER

The carburetor identification number is stamped on the left side of the carburetor body.

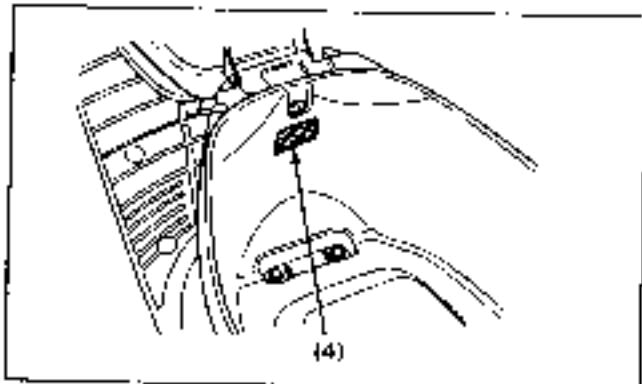

(4) COLOR CODE LABEL

The color code label is attached to the luggage box under the seat. When ordering a color coded parts, always specify its designated color.

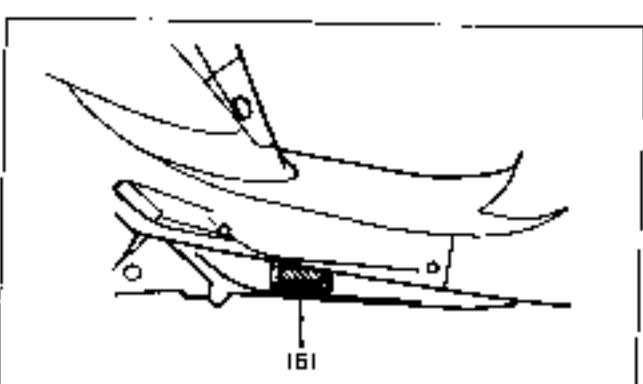

(5) SAFETY CERTIFICATION LABEL (CM type only)



The safety certification label is attached to the right side of the frame.

## Specifications

General		Item	Specifications	Unit: mm (in)
Dimensions	Overall length	1,850 (72.8)		
	Overall width	845 (33.2)		
	Overall height	980 (39.0)		
	Wheelbase	1,145 (45.1)		
	Seat height	715 (28.1)		
	Footpeg height	380 (14.2)		
	Ground clearance	100 (3.9)		
	Dry weight	66 kg (146.6 lbs)		
	Curb weight	71 kg (157.7 lbs)		
	Maximum weight capacity	91 kg (200 lbs)		
Frame	Frame type	Under bone		
	Front suspension	Telescopic		
	Front wheel travel	53.7 (2.11)		
	Rear suspension	Final drive unit/swingarm		
	Rear wheel travel	60.7 (2.39)		
	Front damper			
	Rear damper			
	Front tire size	3.00-10 42J		
	Rear tire size	3.00-10 42J		
	Tire brand (Bridgestone) Front/Rear	ML31/ML32		
	Tire brand (Dunlop) Front/Rear	K3/8F/K378		
	Tire brand (IRC) Front/Rear	MB48/MB47		
	Front brake	Internal expanding shoe		
	Rear brake	Internal expanding shoe		
	Caster angle	26° 30'		
	Trail length	73 (2.9)		
	Fuel tank capacity	9.0 liters (1.32 US gal, 1.10 Imp gall)		
	Fuel tank reserve capacity	--		
	Fork leg oil capacity	--		
Engine	Bore and stroke	39.0 x 41.4 (1.54 x 1.63)		
	Displacement	49.4 cm <sup>3</sup> (3.01 cu in)		
	Compression ratio	7.1		
	Port timing Intake open	Reed valve controlled		
	Port timing Intake close	Reed valve controlled		
	Port timing Exhaust open	84° BBDC		
	Port timing Exhaust close	84° ABDC		
	Port timing Scavenge open	62° BBDC		
	Port timing Scavenge close	62° ABDC		
	Firing order			
	Lubrication system	Oil automatically mixed with gasoline		
	Oil pump type	Plunger type		
	Cooling system	Forced air cooled		
	Air filtration	Urethane foam		
	Crankshaft type	Assembly type		
	Engine weight (dry)	18.1 kg (39.5 lbs)		


## General Information

General (cont'd)		Item	Specifications	Unit: mm (in)
Carburetor	Carburetor type Venturi dia.	Piston valve 14.0 (0.55)		
Drive train	Clutch system Primary reduction Final reduction Gear ratio	Dry, automatic centrifugal clutch - 12.115 2,450 - 0.860		
Electrical	Ignition system Starting system Charging system Regulator/rectifier type	CDI Electric starter motor/kickstarter Single phase alternator, 12 V - 133 W SCR switching regulator, AC regulator built in type/ single phase, half-wave rectifier		

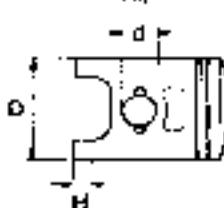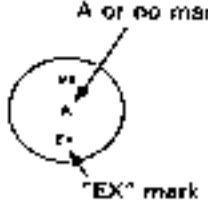Lubrication		Item	Standard	Service limit	Unit: mm (in)
Engine oil tank capacity			1.2 liters (1.27 US qt, 1.08 Imp qt)		
Recommended engine oil			Use Honda 2-stroke oil or equivalent		
<b>Fuel System</b>					
Carburetor identification number		PB80P			
Main jet		475A			
Slow jet		435			
Jet needle clip position		3rd groove			
Air screw initial opening		1-1/4 turns out			
Air screw high altitude adjustment		—			
Float level		8.0 (0.31)			
Idle speed		1,800 ± 100 min⁻¹ (rpm)			
Throttle grip free play		2-6 (0.08-0.24 in)			
<b>Cylinder Head/Cylinder/Piston</b>					
Cylinder compression		BB1 kPa (10.0 kg/cm², 142 psi)/600 min⁻¹ (rpm)			
Cylinder head warpage		—	0.01 (0.0004)		
Cylinder warpage		—	0.01 (0.0004)		
Cylinder identification mark location		Lower surface of the cylinder	—		
					
Cylinder I.D. A mark		39.000-39.006 (1.5354-1.5356)	39.06 (1.537)		
No mark		39.006-39.010 (1.5356-1.5358)	39.05 (1.537)		
out of round		—	0.10 (0.004)		
taper		—	0.10 (0.004)		
Piston mark direction		"EX" mark facing exhaust side	—		
Piston O.D. (D) A mark		38.956-38.960 (1.5337-1.5338)	38.90 (1.531)		
B mark		38.955-38.970 (1.5341-1.5342)	38.90 (1.531)		
No mark		38.960-38.965 (1.5339-1.5341)	38.90 (1.531)		
Piston O.D. measurement point (H)		6.5 (0.26) from the bottom	—		
Piston pin hole I.D. (d)		12.002-12.008 (0.4726-0.4728)	12.03 (0.474)		
 					
Cylinder-to-piston clearance		0.035-0.050 (0.0014-0.0020)	0.10 (0.004)		
Piston pin O.D.		11.994-12.000 (0.4722-0.2724)	11.98 (0.4717)		
Piston-to-piston pin clearance		0.002-0.014 (0.0001-0.0005)	0.03 (0.001)		
Top ring-to-ring groove clearance		—	—		
Second ring-to-ring groove clearance		—	—		
Top ring end gap		0.10-0.26 (0.004-0.010)	0.40 (0.016)		
Second ring end gap		0.10-0.26 (0.004-0.010)	0.40 (0.016)		
Top ring mark		"N" mark	—		
Second ring mark		"ZT" mark	—		

## General Information

Crankshaft		Unit: mm (in)	
Item		Standard	Service limit
Connecting rod small end I.D.		17.005 - 17.017 (0.6695 - 0.6700)	17.03 (0.6705)
Connecting rod big end side clearance radial clearance		0.15 - 0.65 (0.006 - 0.022)	0.80 (0.024)
Crankshaft runout at A at B		0.007 - 0.019 (0.0003 - 0.0007)	0.04 (0.002) 0.15 (0.008) 0.10 (0.004)

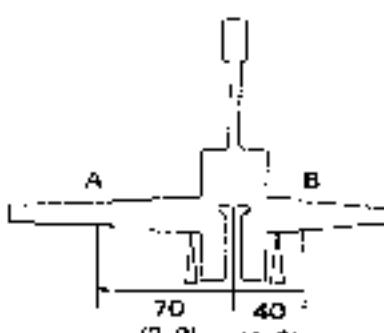

## Kickstarter/Balancer

Kickstarter spindle O.D. bushing I.D.		
Kickstarter idle gear I.D. bushing O.D.		
Kickstarter driven gear I.D. boss O.D.		

## Drive Train

Drive belt width	15.6 (0.61)	14.5 (0.57)
Movable drive face bushing I.D. boss O.D.	20.036 - 20.086 (0.7988 - 0.7907)	20.80 (0.8111)
Weight roller O.D.	20.010 - 20.025 (0.7878 - 0.7884)	19.87 (0.788)
Clutch lining thickness	15.92 - 16.08 (0.627 - 0.633)	15.40 (0.606)
Engine brake clutch lining thickness I.D.	4.5 (0.18)	2.0 (0.08)
Drive chain slack		
Driven face spring free length	98.1 (3.86)	92.8 (3.65)
Driven face O.D.	33.965 - 33.985 (1.3372 - 1.3380)	33.94 (1.336)
Movable driven face I.D.	34.000 - 34.025 (1.3386 - 1.3397)	34.08 (1.341)
Final reduction gear case oil capacity at disassembly at draining	90 cc (3.04 US oz, 3.16 Imp oz)	
Clutch outer I.D.	107.0 - 107.2 (4.21 - 4.22)	107.5 (4.23)

## Cooling System

Coolant capacity (Radiator and engine (Reserve tank))		
Radiator cap relief pressure		
Thermostat begin to open		
Thermostat fully open		
Thermostat valve lift		

## General Information

Wheels/Tires		Unit: mm (in)
Item	Standard	Service limit
Cold tire pressure (Front) (Rear)	125 kPa (1.25 kg/cm <sup>2</sup> , 18 psi) 200 kPa (2.00 kg/cm <sup>2</sup> , 29 psi)	—
Front end rear axle runout	—	0.2 (0.008)
Front and rear wheel rim runout (Radial) (Axial)	—	2.0 (0.08) 2.0 (0.08)
Drive chain slack	—	—
Drive chain size/link (DID) (RK)	—	—

### Front Suspension

Fork spring free length	133.5 (5.26)	129.5 (5.10)
Fork spring free length A @	—	—
Fork spring direction	Tightly wound coil facing up	—
Fork tube runout	—	—
Recommended fork oil	—	—
Fork oil level	—	—
Fork oil level (Right) (Left)	—	—
Fork oil capacity	—	—
Fork oil capacity (Right) (Left)	—	—
Fork air pressure	—	—
Steering bearing preload	—	—

### Rear Suspension

Shock absorber spring free length	—	—
Shock absorber spring free length A @	—	—
Shock absorber spring direction	—	—
Damper drilling point	—	—

### Brakes

Front brake fluid	—	—
brake lever free play	10–20 (0.4–0.8)	—
brake disc thickness	—	—
brake disc runout	—	—
master cylinder I.D.	—	—
master piston O.D.	—	—
caliper cylinder I.D.	—	—
caliper piston O.D.	—	—
brake drum I.D.	95.0 (3.74)	95.5 (3.78)
brake lining thickness	3.0 (0.12)	1.0 (0.04)
Rear brake fluid	—	—
brake lever free play	10–20 (0.4–0.8)	—
brake pedal free play	—	—
brake disc thickness	—	—
brake disc runout	—	—
master cylinder I.D.	—	—
master piston O.D.	—	—
caliper cylinder I.D.	—	—
caliper piston O.D.	—	—
brake drum I.D.	95.0 (3.74)	95.5 (3.78)
brake lining thickness	3.0 (0.12)	1.0 (0.04)

## General Information

Battery/Charging System		Unit: mm (in)
Item	Standard	Service limit
Alternator charging coil resistance (at 20°C/68°F) lighting coil resistance (at 20°C/68°F)	0.4–1.0 Ω (between W and ground) 0.2–0.8 Ω (between Y and ground)	—
Regulator/rectifier regulated voltage (Charging) (Lighting)	14.0–15.0 V/5,000 min⁻¹ (rpm) 12.6–13.6 V/5,000 min⁻¹ (rpm)	—
Battery capacity	12 V 3 Ah	—
Battery specific gravity (Fully charged) (Needs charging)	—	—
Battery charging rate (Normal) (Quick)	0.4 A × 5 h 4 A × 0.6 h	—
Battery voltage (Fully charged, at 20°C/68°F) (Needs charging, at 20°C/68°F)	13.0–13.2 V 12.3 V	—
Auto bypass resistor resistance (8.7 Ω, 5 W)	4.7–5.3 Ω	—

Ignition System		Unit: mm (in)
Item	Standard	Service limit
Spark plug (Standard)	BR6HSA (NGK) W20FR-L (NIPPONDENSO)	—
(For cold climate/below 5°C/41°F)	BR4HSA (NGK) W14FR-L (NIPPONDENSO)	—
(For extended high speed riding)	BR8HSA (NGK) W24FR-L (NIPPONDENSO)	—
Spark plug gap	0.6–0.7 (0.024–0.028)	—
Ignition timing "F" mark	17° BTDC/1,800 min⁻¹ (rpm)	—
Peak voltage Ignition coil	100 V minimum	—
Exciter coil	100 V minimum	—
Pulse generator coil	0.7 V minimum	—
Alternator exciter coil resistance (at 20°C/68°F)	400–800 Ω	—
Ignition coil resistance (at 20°C/68°F)	—	—
Primary	0.1–0.4 Ω	—
Secondary with plug cap	6.5–9.7 kΩ	—
Secondary without plug cap	2.7–3.5 kΩ	—
Pulse generator resistance (at 20°C/68°F)	50–200Ω	—

Lights/Meters/Switches		Unit: mm (in)
Item	Standard	Service limit
Fuse	10 A	—
Headlight (high/low beam)	12 V 35/35 W	—
Brake/tailight	12 V 26/26 W	—
Front turn signal light	12 V 21/5 W	—
Front turn signal light	12 V 32/3 cp	—
Rear turn signal light	12 V 21 W × 2	—
Rear turn signal light	12 V 21 cp × 2	—
Instrument light	12 V 32 cp × 2	—
High beam indicator	12 V 1.7 W × 2	—
Turn signal indicator	12 V 1.7 W	—
Fuel level sensor resistance (at full position)	12 V 3.4 W	—
between G and Y/W	25–45 Ω	—
between G and Bu/W	400–700 Ω	—
between Y/W and Bu/W	450–750 Ω	—
(at empty position)	—	—
between G and Y/W	400–700 Ω	—
between G and Bu/W	25–45 Ω	—
between Y/W and Bu/W	450–750 Ω	—

## Torque Values

### Standard

Fastener Type	Torque N·m (kg·m, ft·lb)	Fastener Type	Torque N·m (kg·m, ft·lb)
5 mm bolt and nut	5 (0.5, 3.6)	5 mm screw	4 (0.4, 2.9)
8 mm bolt and nut	10 (1.0, 7)	5 mm screw	9 (0.9, 6.5)
8 mm bolt and nut	22 (2.2, 16)	8 mm flange bolt (8 mm head)	9 (0.9, 6.5)
10 mm bolt and nut	35 (3.5, 25)	8 mm flange bolt (10 mm head and nut)	12 (1.2, 9)
12 mm bolt and nut	56 (5.6, 40)	8 mm flange bolt and nut	27 (2.7, 20)
		10 mm flange bolt and nut	40 (4.0, 29)

• Torque specifications listed below are for important fasteners.  
 Others should be tightened to standard torque values listed above.

### Engine

Item	Q'ty	Thread dia. (mm)	Torque N·m (kg·m, ft·lb)	Remarks
Lubrication system:				
Oil pump mounting bolt	1	8	10 (1.0, 7)	
Fuel system:				
Carburetor mounting bolt	2	8	10 (1.0, 7)	
Left shroud mounting bolt	2	8	10 (1.0, 7)	
Intake manifold mounting bolt	4	8	10 (1.0, 7)	
Air cleaner case mounting bolt	2	6	12 (1.2, 9)	
Cylinder head/cylinder/piston:				
Cylinder head bolt	4	6	10 (1.0, 7)	
Spark plug	1	14	14 (1.4, 10)	Apply oil to the threads and flange surface.
Kickstarter/drive pulley/clutch/driven pulley:				
Left crankcase rear cover bolt	5	6	10 (1.0, 7)	
Left crankcase front cover bolt	5	6	10 (1.0, 7)	
Drive pulley nut	1	12	80 (6.0, 43)	
Clutch outer nut	1	10	40 (4.0, 29)	Apply oil to the threads and seating surface.
Movable drive face seal bolt	3	4	4.5 (0.45, 0.33)	
Clutch drive plate nut	1	28	55 (5.5, 40)	
Final reduction:				
Transmission cover bolt	6	6	10 (1.0, 7)	
Transmission oil level check bolt	1	8	13 (1.3, 9)	
Crankcase/crankshaft:				
Crankcase bolt	6	6	10 (1.0, 7)	
Charging system/alternator:				
Cooling fan cover bolt	2	6	10 (1.0, 7)	
Cooling fan bolt	4	6	8 (0.8, 5.8)	
Flywheel nut	1	10	40 (4.0, 29)	
Stator bolt	2	6	10 (1.0, 7)	
Pulse generator bolt	2	6	10 (1.0, 7)	
Electric starter:				
Starter motor mounting bolt	2	6	10 (1.0, 7)	

## General Information

---

### Frame

Item	Qty	Thread dia. (mm)	Torque N·m (kg·m, ft·lb)	Remarks
<b>Exhaust system:</b>				
Exhaust pipe joint nut	2	8	12 (1.2, 9)	
Muffler mounting bolt	2	8	27 (2.7, 20)	
Exhaust pipe protector bolt	2	8	12 (1.2, 9)	
<b>Engine mount:</b>				
Engine mounting bolt	1	10	50 (5.0, 36)	
Engine mounting bracket bolt	1	10	60 (6.0, 43)	
<b>Front wheel/suspension/steering/brake:</b>				
Speedometer cable set screw	1	4	2 (0.2, 1.4)	
Front axle nut	1	10	45 (4.5, 33)	
Front brake arm bolt	1	5	6 (0.6, 4.3)	
Fork pinch bolt	4	8	27 (2.7, 20)	
Handlebar pinch bolt	1	10	50 (5.0, 36)	
Steering stem lock nut	1	25.4	70 (7.0, 51)	
<b>Rear wheel/suspension/brake:</b>				
Rear axle nut	1	14	120 (12.0, 87)	Apply oil to the threads and seating surface.
Rear brake arm bolt	1	5	6 (0.6, 4.5)	
Shock absorber upper mounting bolt	1	10	40 (4.0, 29)	
Shock absorber lower mounting bolt	1	8	27 (2.7, 20)	

## Tools

- Refer to "Ball bearing replacement" in section 1 of the Common Service Manual.

Description	Tool Number	Application	Section
Float level gauge	07401-0010000	Carburetor float level inspection	5
Clutch center holder	07724-0050001	Drive pulley face removal/installation	
Universal holder	07725-0030000	Clutch outer removal/installation	
Clutch spring compressor	0796D-KM10000	Clutch/driven pulley disassembly/assembly	8
Lock nut wrench, 38 x 41 mm	07GMA-KS4D100		
Bearing driver	07845-GC80000	Driven face outer bearing installation	
Crankcase assembly collar	07965-GM00100	Driveshaft installation	
Crankcase assembly shaft	07965-GM00300		9
Shaft protector	07931-1870000	Driveshaft removal	
Case puller	07935-GK80000	Crankcase separation	
Case/driven gear puller	07935-KGBD0000	Crankshaft removal	
Universal bearing puller	07831-0010000	Crankshaft bearing removal	
Shaft protector	07931-1870000	Crankcase separation, crankshaft removal	10
Crankcase assembly collar	07965-GM00100	Crankshaft installation	
Crankcase assembly shaft	07965-1680200		
Crankcase assembly collar	07965-GM00100	Crankcase assembly	
Crankcase assembly shaft	07965-GM00300		
Lock nut wrench A	07915-KM10000	Steering stem lock nut removal/installation	
Lock nut wrench B	07918-1870100		
Ball race remover	07946-GA7D000	Steering head ball race removal	11
Driver	07749-0010000	Steering head ball race installation	
Attachment, 42 x 47 mm	07748-0010300		
Shop ring pliers	07914-3230001	Fork disassembly/Assembly	
Universal holder	07725-0030000	Flywheel removal/installation	
Flywheel puller	07733-0010000	Flywheel removal	13

## Tools

- Refer to "Ball bearing replacement" in section 1 of the Common Service Manual.

Description	Tool Number	Application	Section
Float level gauge	07401-0010000	Carburetor float level inspection	5
Clutch center holder	07724-0060001	Drive pulley face removal/installation	
Universal holder	07725-0030000	Clutch outer removal/installation	
Clutch spring compressor	07960-KM10000	Clutch/driven pulley disassembly/assembly	8
Lock nut wrench, 39 x 41 mm	07GMA-KS40100		
Bearing driver	07945-GCB0000	Driven face outer bearing installation	
Crankcase assembly collar	07965-GM00100	Driveshaft installation	
Crankcase assembly shaft	07986-GM00300		9
Shaft protector	07931-1870000	Driveshaft removal	
Case puller	07836-GK80000	Crankcase separation	
Case/driven gear puller	07836-KG80000	Crankshaft removal	
Universal bearing puller	07631-0010000	Crankshaft bearing removal	
Shaft protector	07931-1870000	Crankcase separation, crankshaft removal	10
Crankcase assembly collar	07965-GM00100	Crankshaft installation	
Crankcase assembly shaft	07965-1860200		
Crankcase assembly collar	07965-GM00100	Crankcase assembly	
Crankcase assembly shaft	07965-GM00300		
Lock nut wrench A	07916-KM10000	Steering stem lock nut removal/installation	
Lock nut wrench B	07916-1870100		
Ball race remover	07948-GA70000	Steering head ball race removal	11
Driver	07749-0010000	Steering head ball race installation	
Attachment, 42 x 47 mm	07748-0010300		
Snap ring pliers	07914-3230001	Fork disassembly/Assembly	
Universal holder	07725-0030000	Flywheel removal/installation	13
Flywheel puller	07733-0010000	Flywheel removal	

## General Information

# Lubrication & Seal Points


Engine	Location	Material	Remarks
Crankcase mating surfaces		Liquid sealant	
Oil pump O-ring		Honda 2-stroke engine oil	
Oil pump shaft bearing			
Cylinder			
Piston			
Piston pin			
Connecting rod small end bearing			
Crankshaft oil seals			
Crankshaft 12 mm threaded portion			
Crankshaft bearings		Multipurpose grease	
Oil pump gear		Molybdenum disulfide grease	
Driven face		Lithium based grease —MITSUBISHI: HD-3 —NIPPON SEKIYU LIPANOX DELUX 3 —IDEMITSU: AUTOLEX 8	Pack 5.0–5.5 g (0.18–0.19 oz) of grease to the inside.
Kickstarter driven gear			
Kickstarter spindle bearing			
Starter pinion bearing			
Transmission (final reduction) case		Hypoid gear oil #90	90 cc (3.04 US oz, 3.16 Imp oz)
Transmission (final reduction) oil seal		4-stroke engine oil	
Cylinder head bolts			


Frame	Location	Material	Remarks
Front wheel dust seal lip		Multipurpose grease	
Fork			
Fork dust seal lip			Pack 1.5–2 g (0.05–0.07 oz) of grease between the bottom case and fork tube (page 11-8).
Fork tube bushing sliding surface			
Rebound spring			
Fork spring tightly wound coils			
Front brake cam			
Front brake panel anchor pin			
Front brake panel oil seal lip			
Rear brake cam			
Rear brake anchor pin			
Steering stem bearings			
Steering stem bearing races			
Speedometer cable			
Seat lock pivot			
Center stand pivot			
Speedometer gear			
Speedometer pinion			
Inside of the front brake cable boot		Silicone grease	
Inside of the rear brake cable boot			


**Frame**

Location	Material	Remarks
Brake cam felt seals	Engine oil	
Brake cables		
Inside surface of handle grip	Honda Bond A or equivalent	
Air cleaner connecting tube-to-case joint	Sembedsin #540	
Air cleaner element	Honda 2-stroke engine oil	
Engine oil tank		

## Cable & Harness Routing

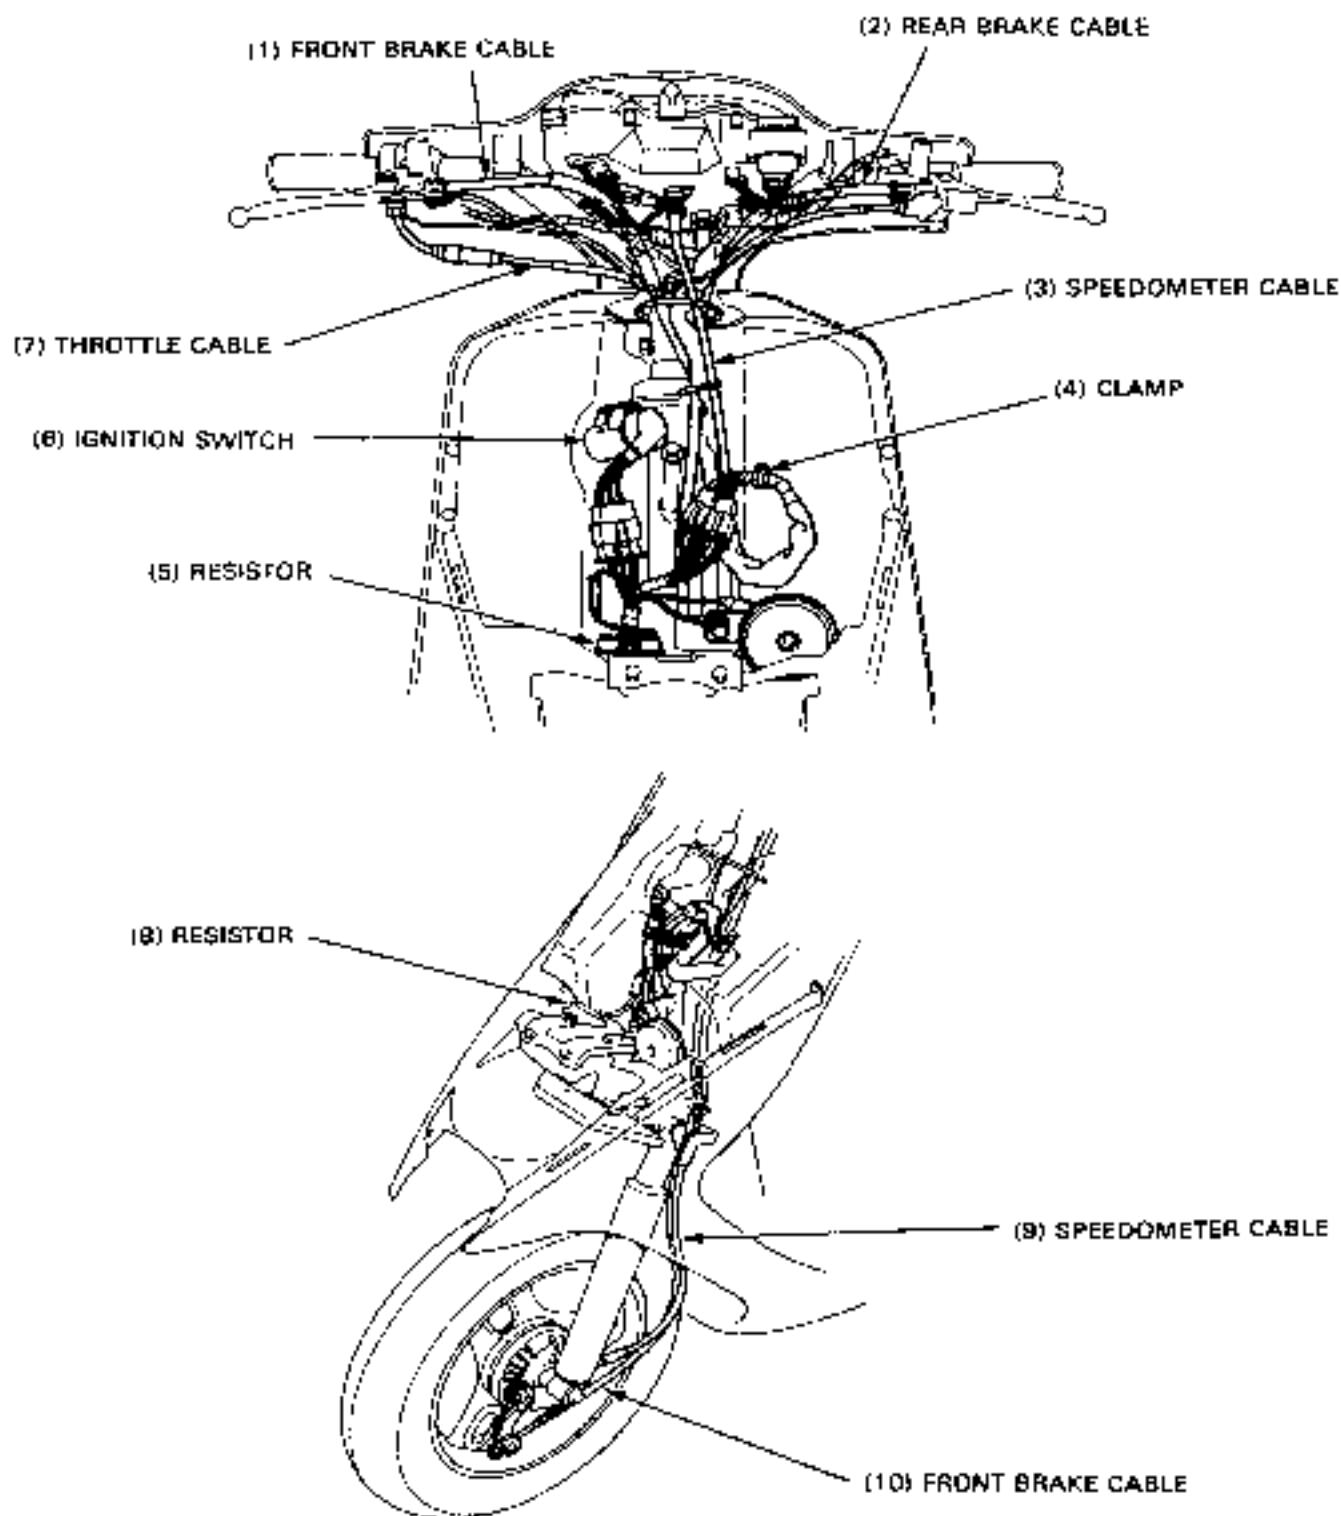

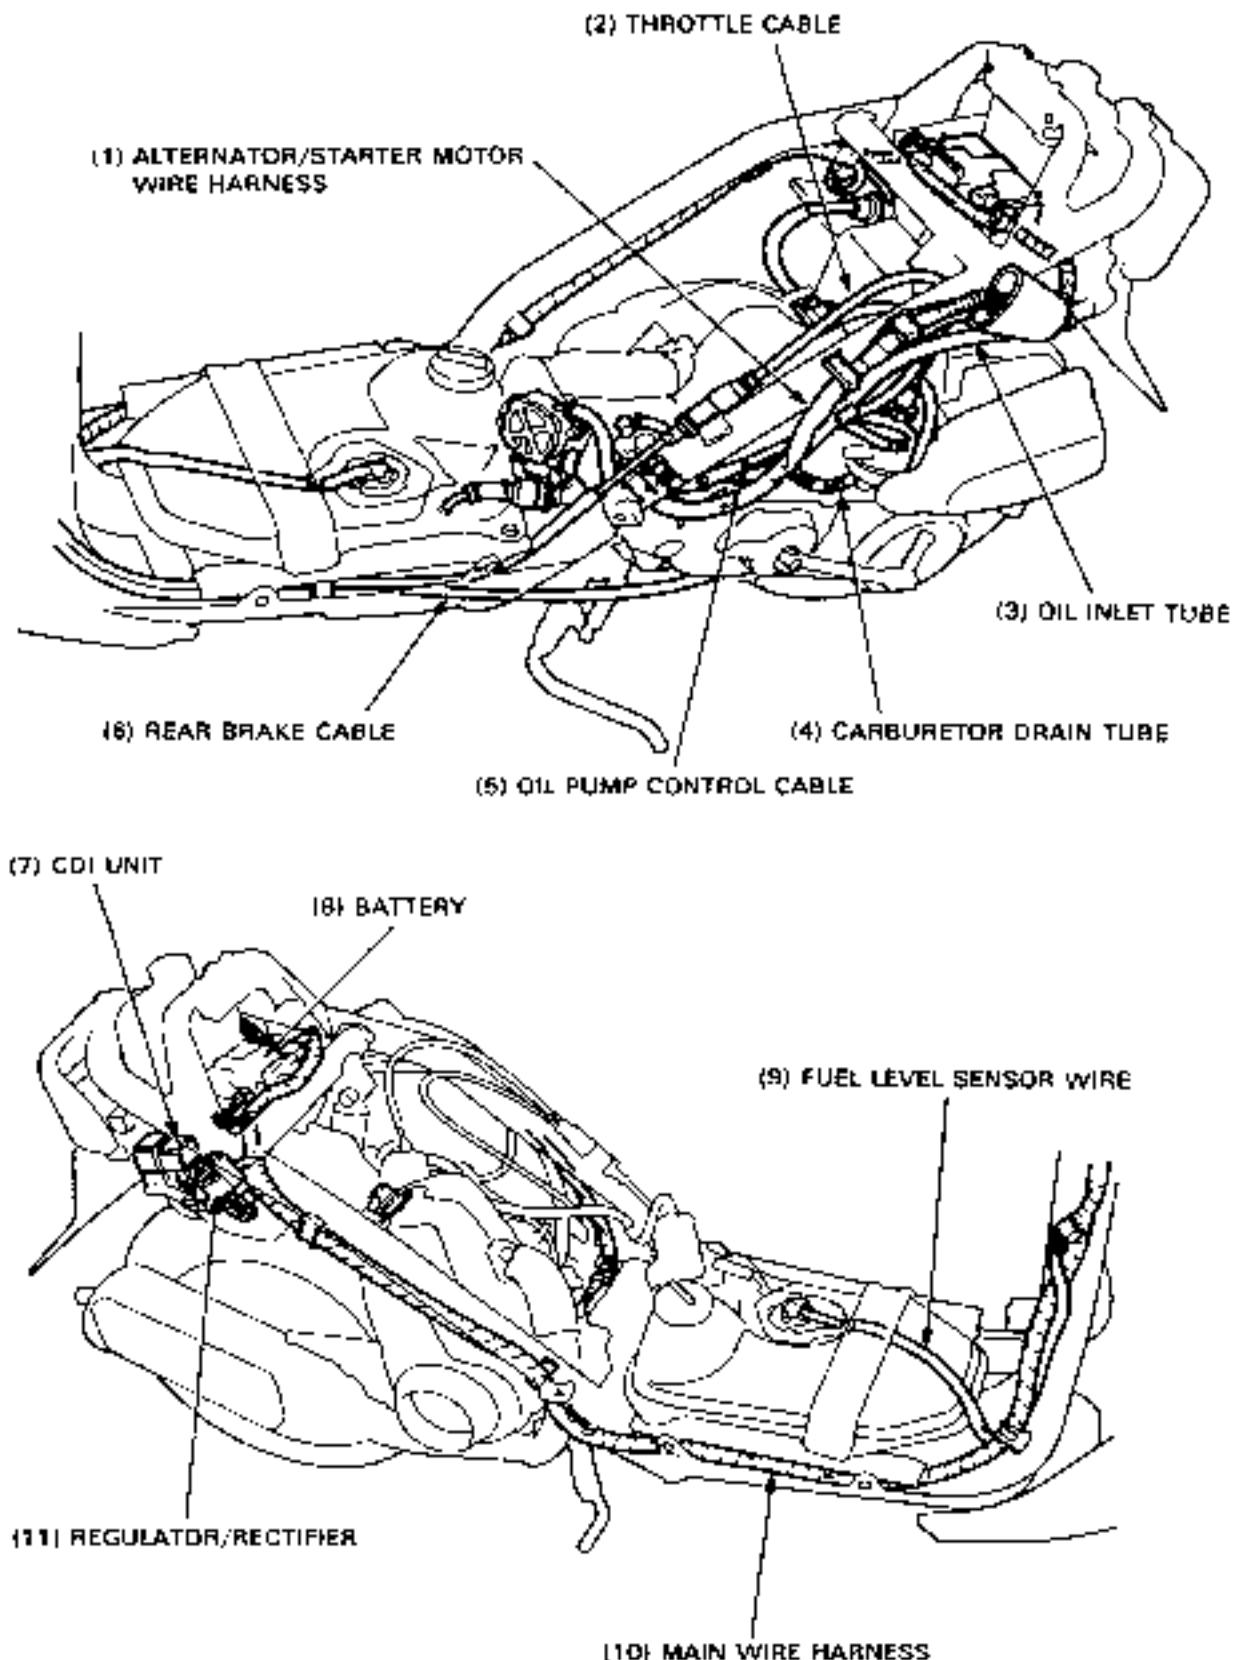

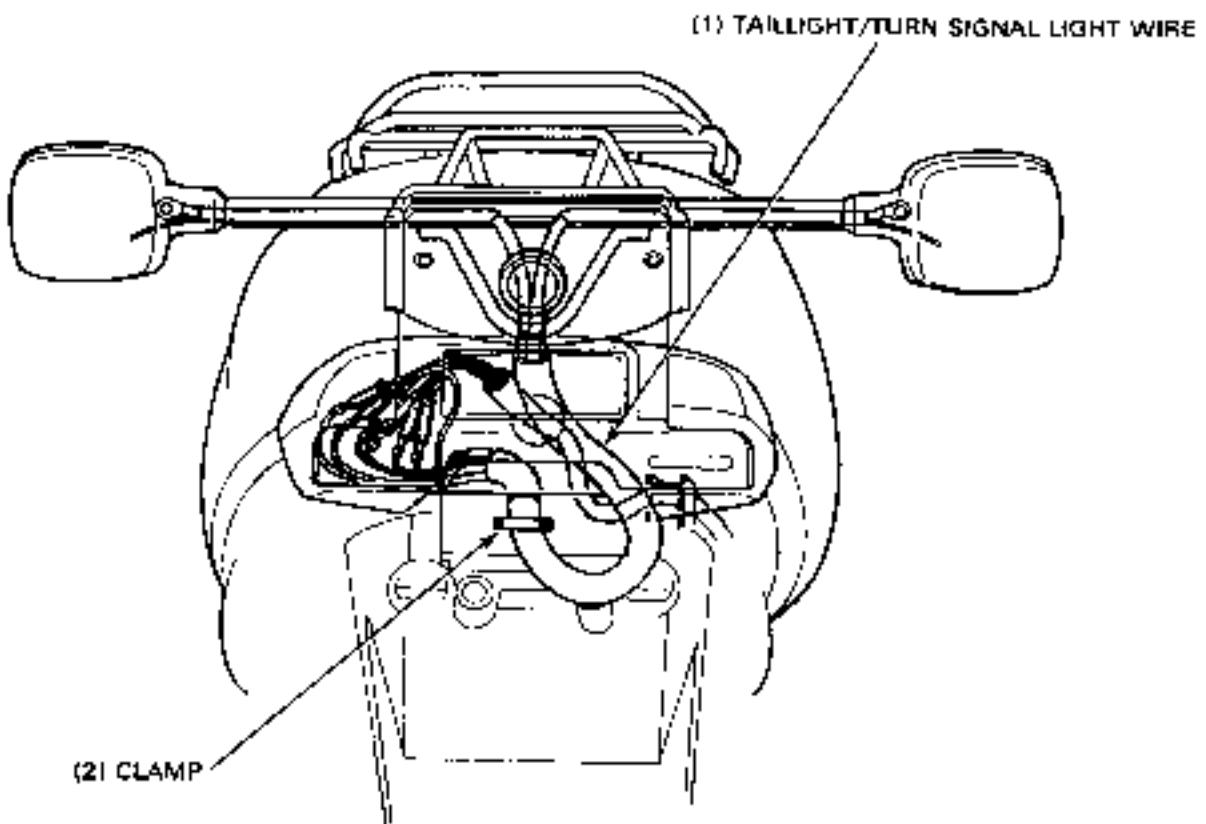

## 2. Frame/Body Panels/Exhaust System

<b>Service Information</b>	<b>2-1</b>	<b>Fuel Tank Removal/Installation</b>	<b>2-8</b>
<b>Troubleshooting</b>	<b>2-1</b>	<b>Muffler Removal/Installation</b>	<b>2-9</b>
<b>Frame Cover Removal/Installation</b>	<b>2-2</b>		

### Service Information

#### **Caution**

- Gasoline is extremely flammable and explosive under certain conditions.
- Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.

- Work in a well ventilated area. Smoking or allowing flames or sparks in the working area or where gasoline is stored can cause a fire or explosion.
- This section covers removal and installation of the frame covers, fuel tank and exhaust system. Frame cover installation is in the reverse order of removal, unless noted otherwise.
- When removing the cover, be careful not to damage any tab or groove of a cover.
- Always inspect the exhaust system for leaks after installation.

### Troubleshooting

#### **Excessive exhaust noise**

- Broken exhaust system
- Exhaust gas leak

#### **Poor performance**

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler


**Side Cover**

Remove the trim clip and two screws.

- ① Release the front tabs of the cover from the front fender while sliding the cover rearward.
- ② Push the cover rearward and release the four front tabs outward.
- ③ Push the cover rearward and release the three tabs from the frame body cover downward.
- ④ Release the two rear tabs while pulling down the rear of the cover.


**NOTE**

Attach the rear of the front fender with the side cover front screw.

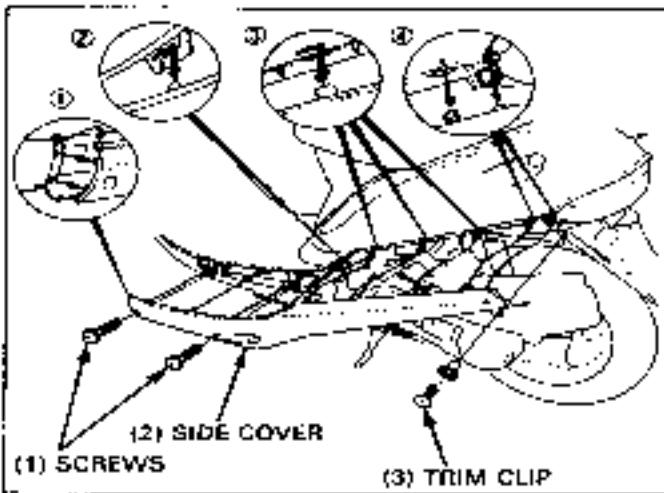**Frame Body Cover**

Remove the luggage box (page 2-4).

Disconnect the turn signal light and taillight wire connectors. Remove the three bolts and the rear carrier assembly.

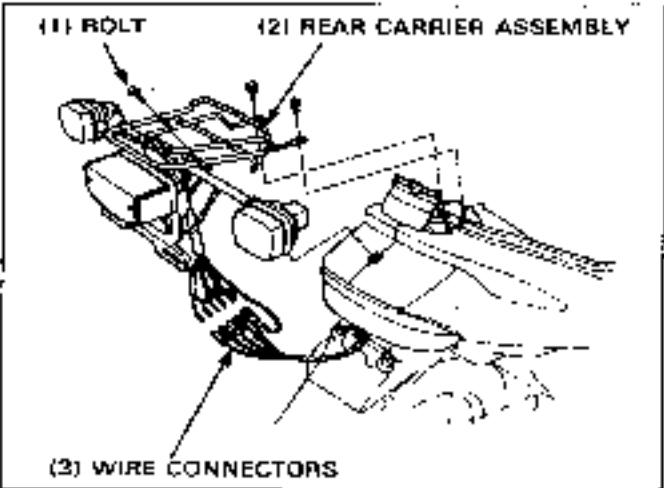


Remove the side covers.

Remove the center cover (page 2-4).

Remove the two tapping screws and two trim clips.

- ① Release the front tabs upward.
- ② Remove the frame body cover rearward.
- ③ Remove the two tapping screws and the body cover lid.
- ④ Pull the left frame body cover back to release the two tabs and separate the left and right frame body covers.

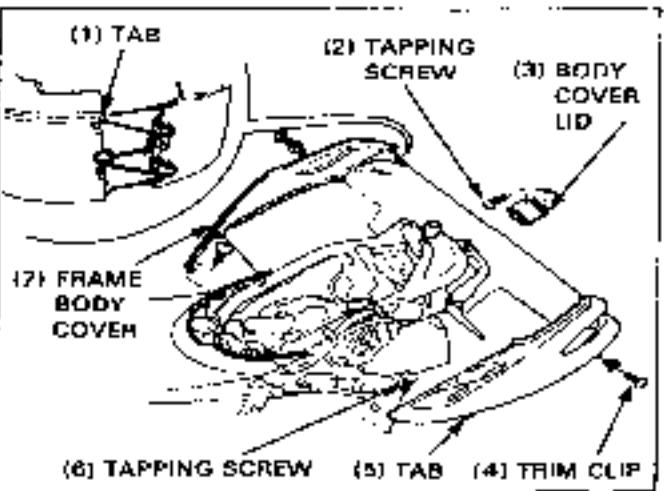


**Side Cover**

Remove the trim clip and two screws.

- ① Release the front tabs of the cover from the front fender while sliding the cover rearward.
- ② Push the cover rearward and release the four front tabs outward.
- ③ Push the cover rearward and release the three tabs from the frame body cover downward.
- ④ Release the two rear tabs while pulling down the rear of the cover.

**NOTE**


Attach the rear of the front fender with the side cover front screw.

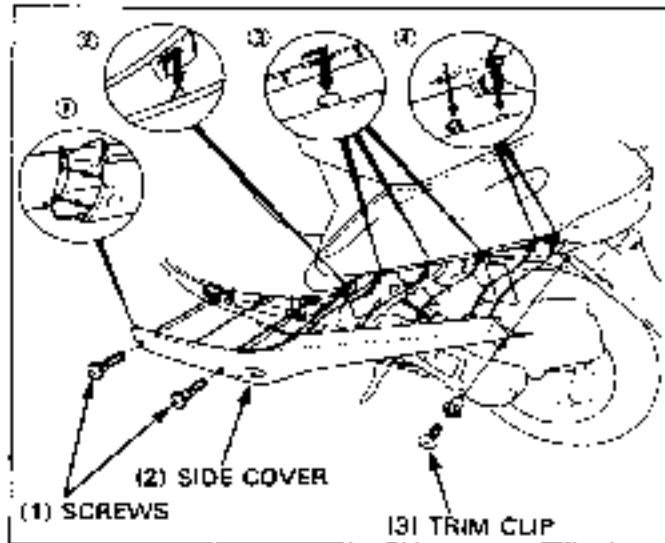**Frame Body Cover**

Remove the luggage box (page 2-4).

Disconnect the turn signal light and taillight wire connectors.

Remove the three bolts and the rear carrier assembly.

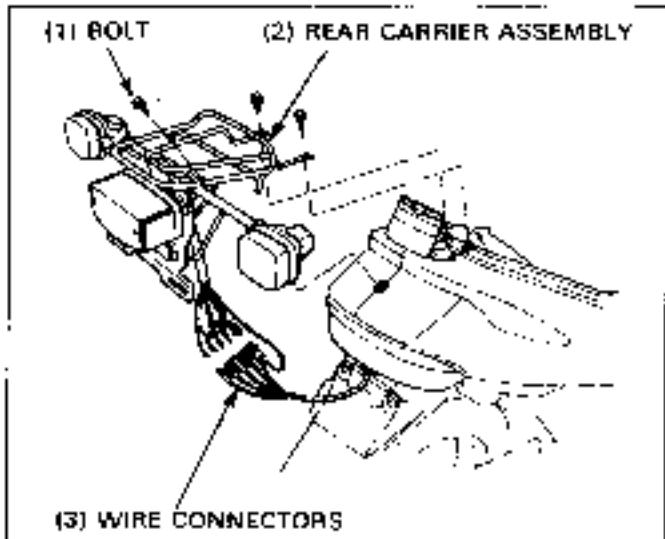


Remove the side covers.

Remove the center cover (page 2-4).

Remove the two tapping screws and two trim clips.

- ① Release the front tabs upward.
- ② Remove the frame body cover rearward.
- ③ Remove the two tapping screws and the body cover lid.
- ④ Pull the left frame body cover back to release the two tabs and separate the left and right frame body covers.

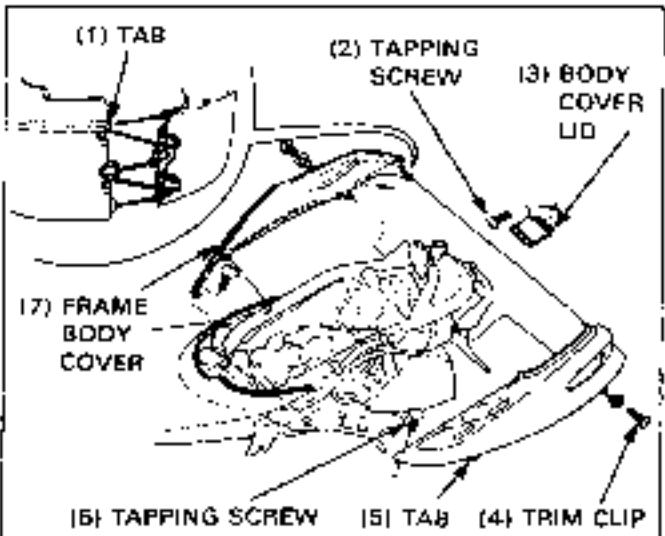

### Luggage Box

#### NOTE

- The luggage box can be removed together with the seat.

Open the seat.

Remove the two screws and the battery cover.


Open the body cover lid.

Remove the oil tank cap and seal rubber.

Remove the five bolt and the luggage box.

#### NOTE

- After removing the luggage box, install the seat rubber and oil tank cap to prevent dirt and dust from entering the oil tank.

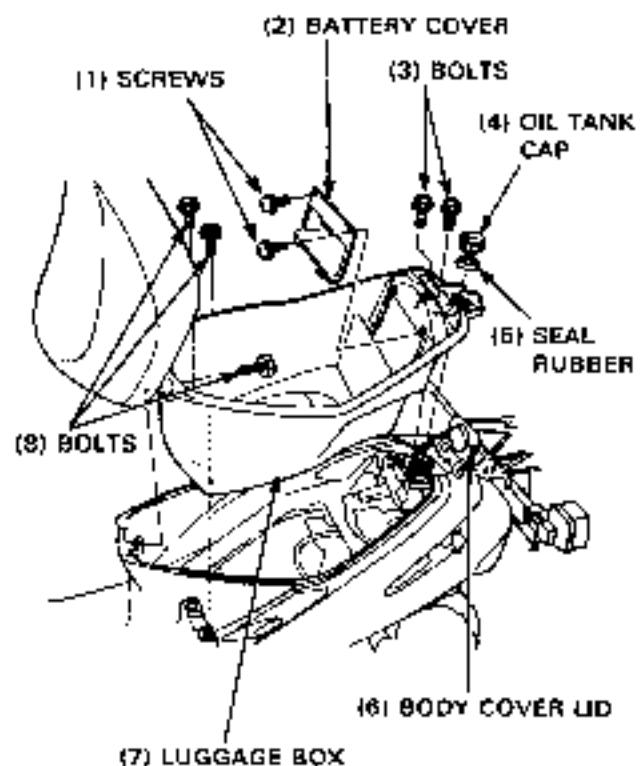


### Center Cover

Remove the luggage box.

Slide the center cover upward to release the two tabs from the frame body cover and remove the center cover.

Open the fuel tank lid.


Remove the two screws and the fuel tank lid.

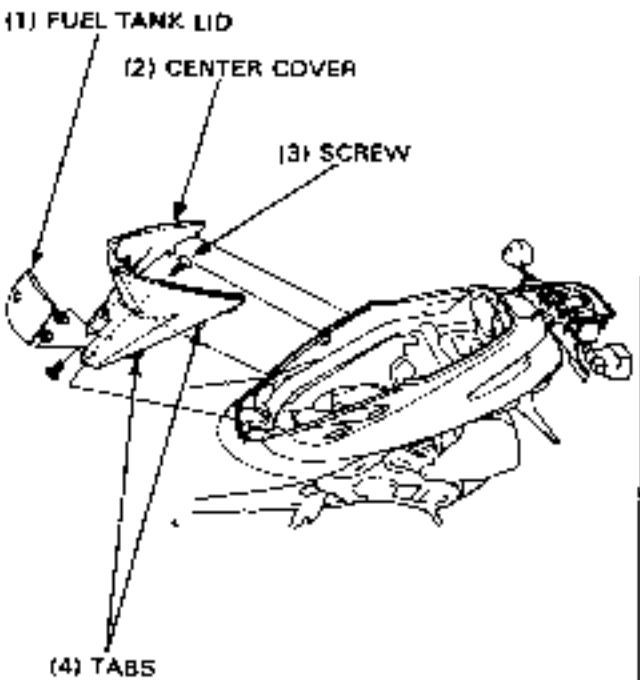

**Seat**

Open the seat.


Remove the two nuts and the seat.

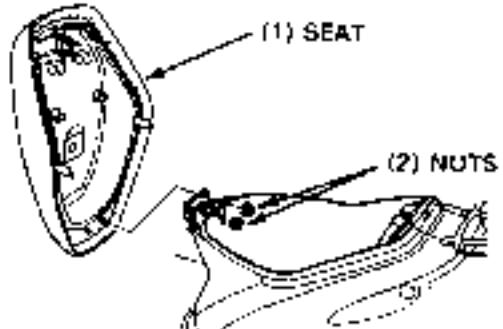**Floor Board**

Remove the frame body cover (page 2-3)

Remove the four bolts

Raise the rear of the floor board slightly, pull the floor board rearward to release the tabs and remove it.

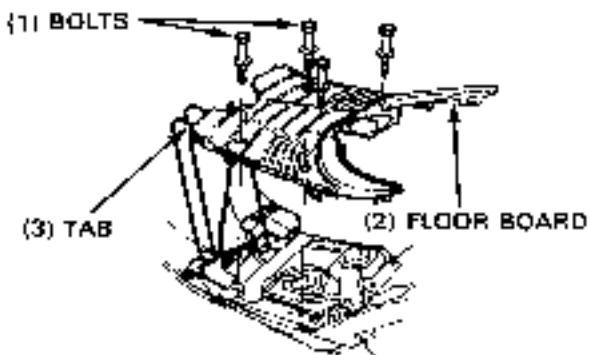**Front Cover**

Remove the four tapping screws.


Remove the two trim clips.

Remove the three screws

Release the tabs while pushing both sides of the cover inward and the remove cover.


**NOTE**

- When installing, make sure that the tabs are aligned with the slots properly before tightening the screws.

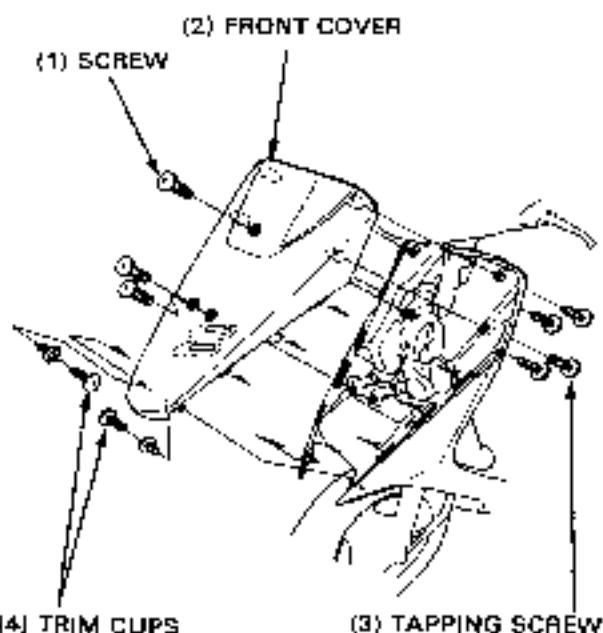

## Frame Cover Removal/Installation

### Frame Cover Locations

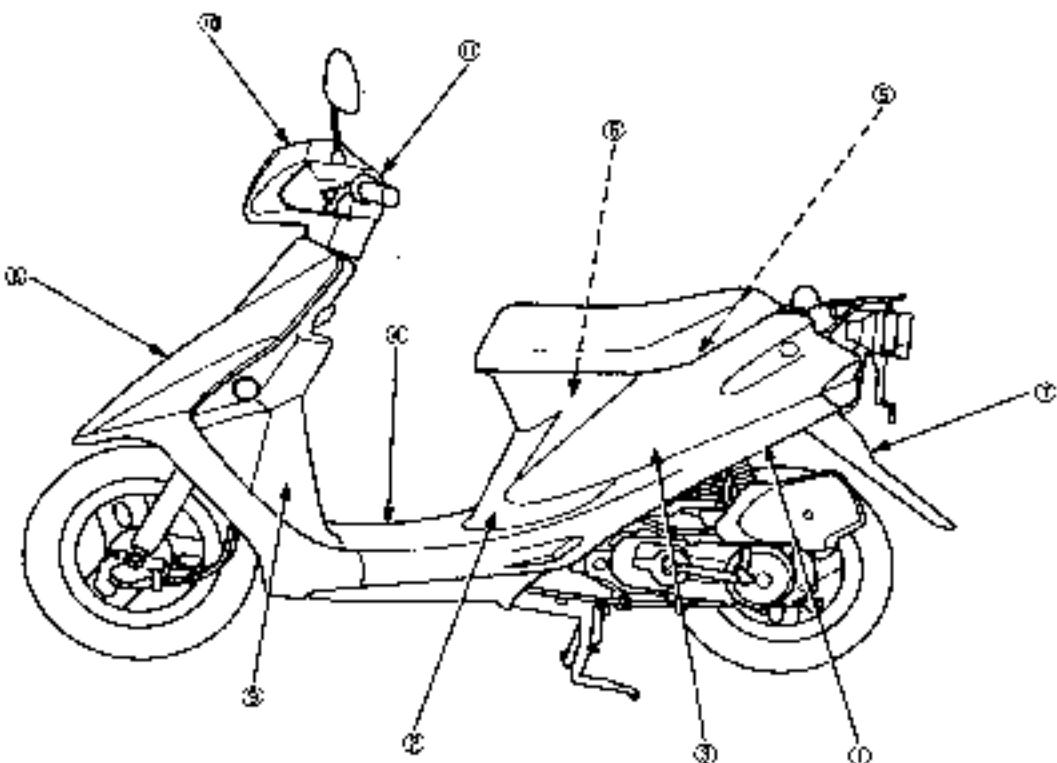


(1) Side cover  
 (2) Center cover  
 (3) Frame body cover  
 (4) Floor board  
 (5) Battery cover  
 (6) Luggage box

(7) Rear Fender  
 (8) Front cover  
 (9) Front inner cover  
 (10) Handle front cover  
 (11) Handle rear cover

### Frame Cover Removal Chart

- This chart shows removal order of frame covers by means of arrow.

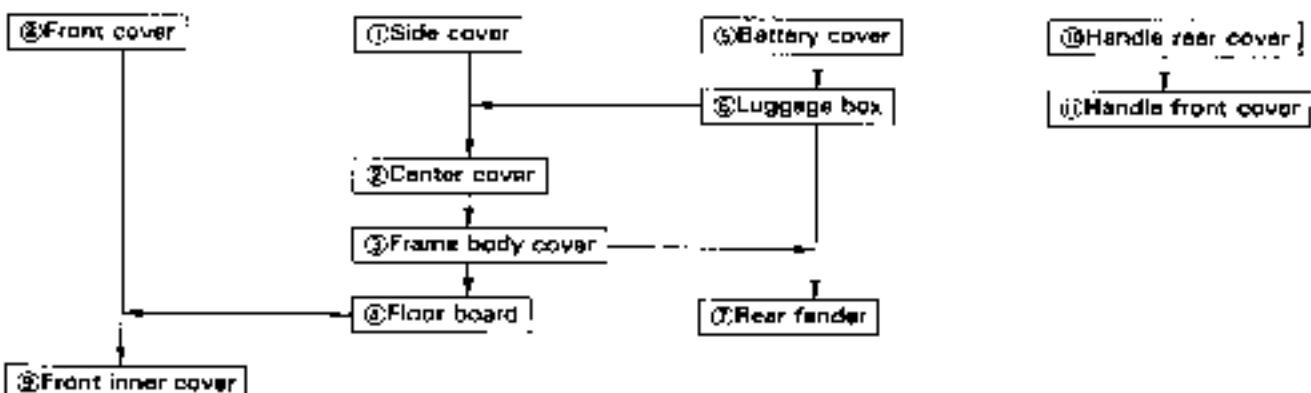

### Front Inner Cover

Remove the floor board (page 2-5).

Remove the front cover (page 2-5).


Remove the four tapping screws attaching the inner cover to the front fender.

Remove the screw attaching the inner cover to the frame. Pull the upper portion of the cover back out of the frame. Slide the cover upward along the frame and remove it.

Remove the six tapping screws and separate the upper and lower inner covers.

#### NOTE

- When installing, align the bosses of the inner cover with the holes in the frame properly.

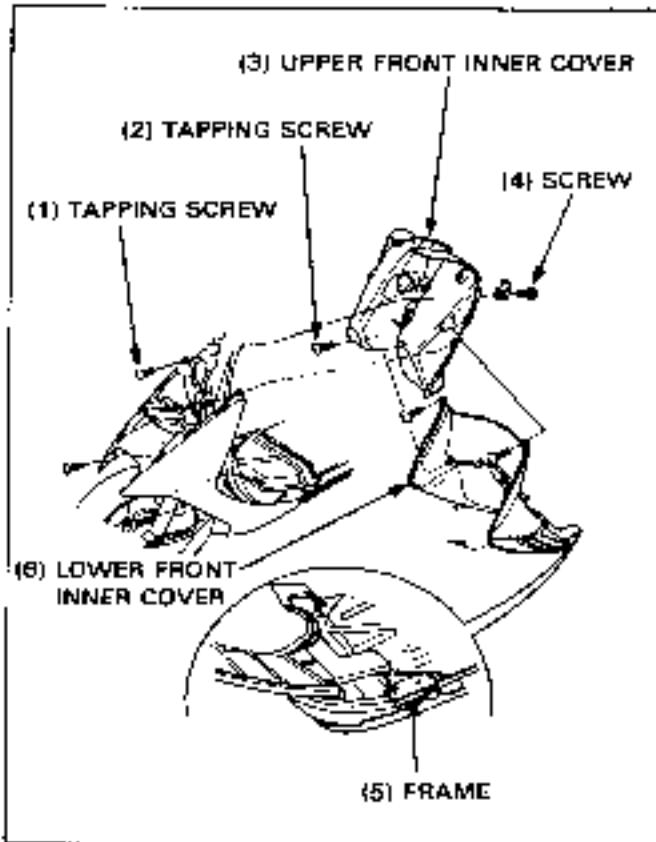


### Rear Fender

Remove the oil tank (page 4-4).

Remove the ignition coil (page 14-8).

Remove the CDI unit, starter relay switch and fuse holder from the rear fender.

Remove the rear fender from the frame.

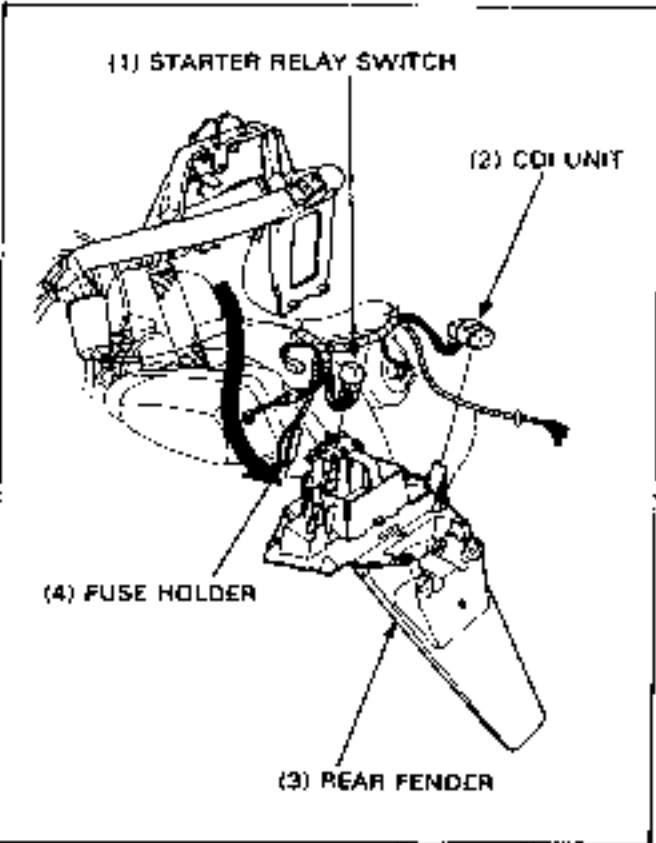

**Handle Rear Cover**

Remove the rearview mirrors.


Remove the two tapping screws and the screw.

Release the three hooks by pushing down the cover and sliding it rearward.

Remove the cover from the handlebar.

**NOTE**

- When installing, be careful not to pinch the wires.

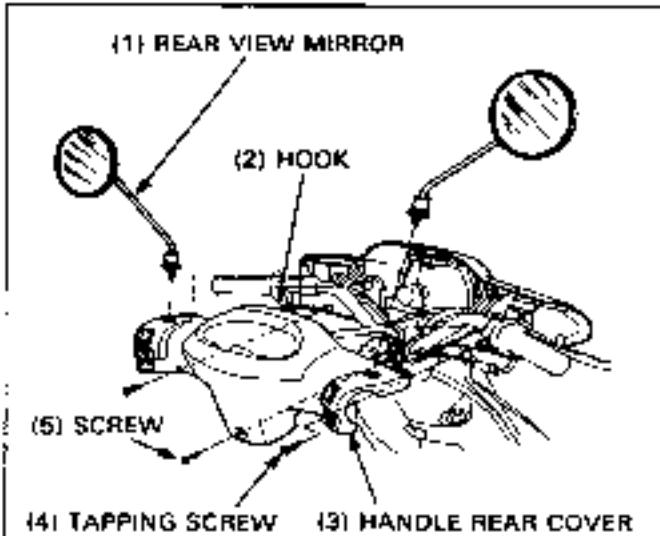


Disconnect the speedometer cable from the speedometer. Disconnect the five connectors from the handlebar switches.

Remove the three screws and the cover from the instrument case.

**NOTE**

- It is not necessary to remove the handle rear cover from the instrument case to remove the handle front cover.

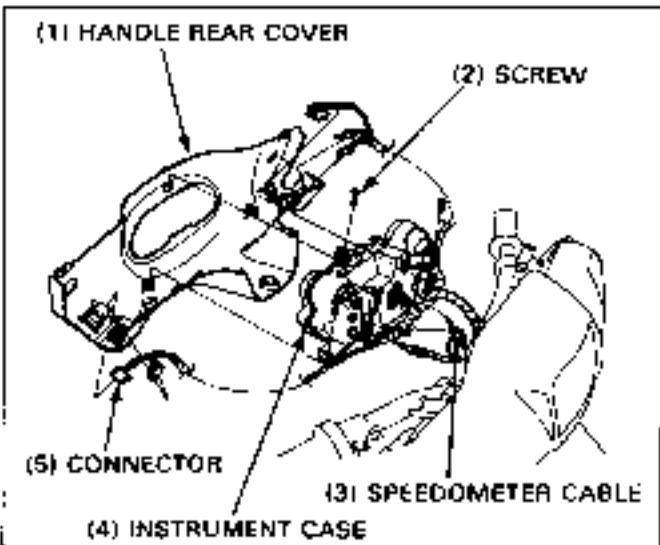
**Handle Front Cover**

Remove the handle rear cover from the handlebar.


Remove the two tapping screws and the screw.

Disconnect the headlight connector.

Disconnect the turn signal light wire connectors and remove the handle front cover.

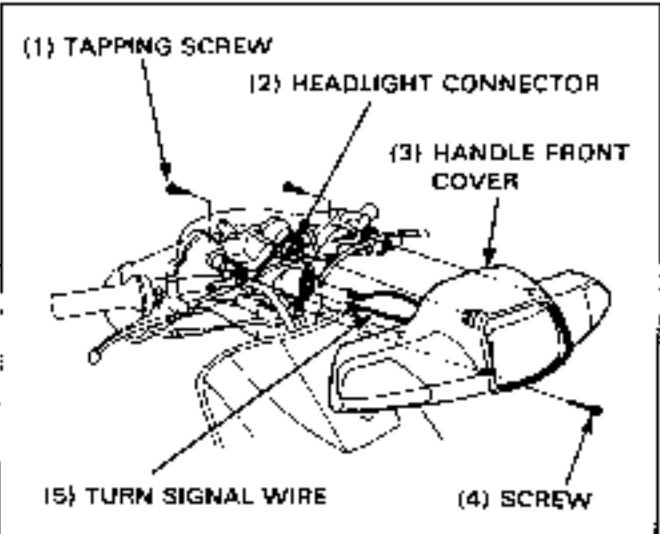

## Fuel Tank Removal/Installation

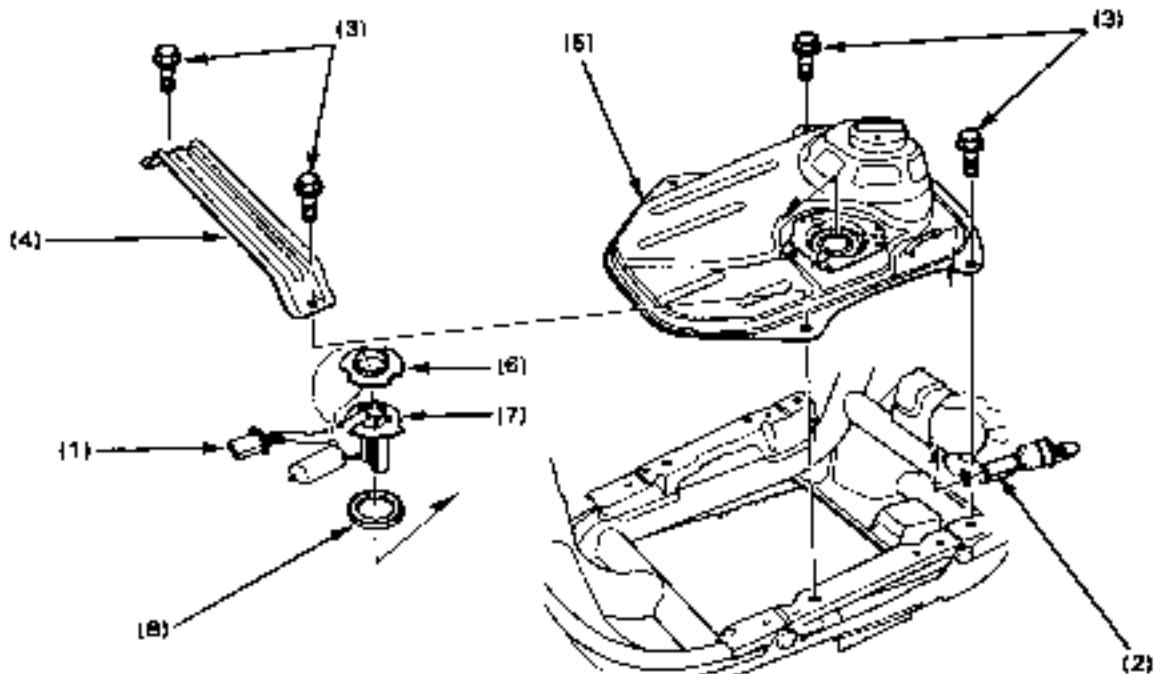

**WARNING**  
• Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.


• Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.

### Requisite Service

- Front inner cover removal/installation (page 2-8)

Procedure	Qty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
Fuel tank		
(1) Fuel unit wire connector	1	
(2) Fuel line	1	
		<b>NOTE</b>
(3) Fuel tank mounting bolt	4	• Plug or clamp the fuel line to prevent gasoline from flowing out.
(4) Floor plate	1	
(5) Fuel tank	1	
<b>Installation Order</b>		
Fuel level sensor		
(6) Rangefinder	1	
(7) Fuel level sensor	1	
(8) Seal rubber	1	

## Muffler Removal/Installation

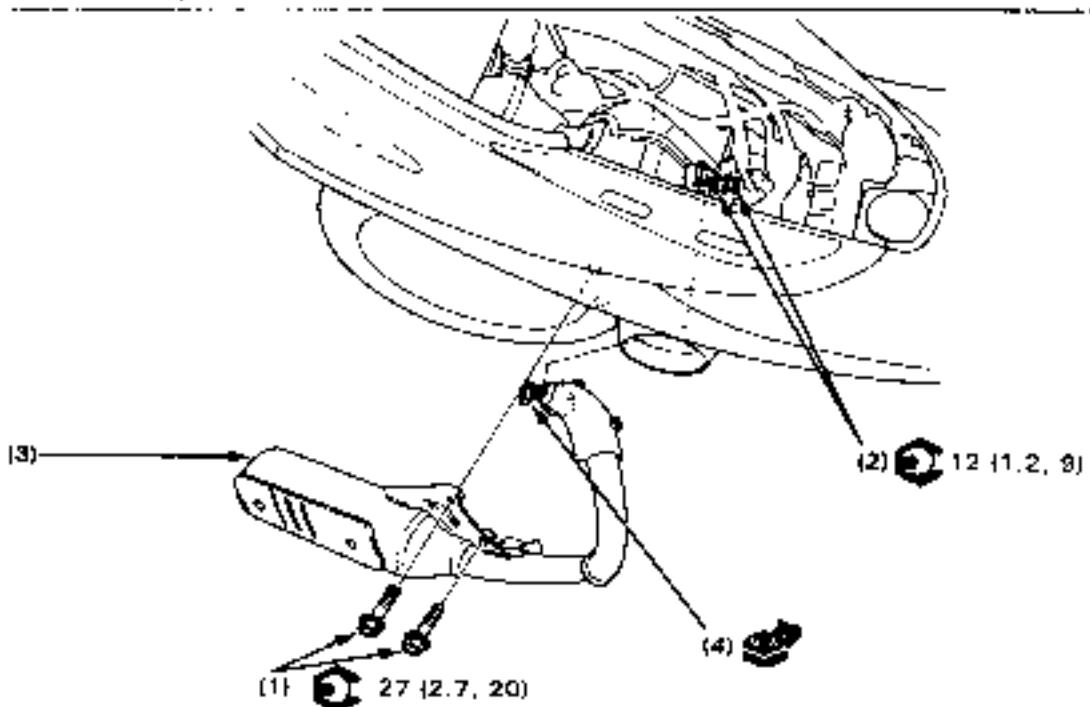

### AIR COOLED

- Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.

### Requisite Service

- Center cover removal/installation (page 2-4)

Procedure	Q'ty	Remarks
<b>Removal Order</b>		
(1) Muffler mounting bolt	2	Installation is in the reverse order of removal.
(2) Exhaust pipe joint nut	2	Loosen.
(3) Muffler	1	
(4) Exhaust pipe gasket	1	

## **3. Maintenance**


<b>Service Information</b>	<b>3-1</b>	<b>Oil Pump and Oil Line</b>	<b>3-6</b>
<b>Service Access Guide</b>	<b>3-2</b>	<b>Headlight Aim</b>	<b>3-6</b>
<b>Maintenance Schedule</b>	<b>3-4</b>		

### **Service Information**

- Refer to Common Service Manual for service procedures of items not included in this manual.
- Refer to Specifications (section 1) for maintenance service data.


## Service Access Guide

- The following shows the locations of the parts that must be removed for the maintenance items listed below. Refer to the Common Service Manual for items not included in this manual.
- Refer to section 2 (Frame/Body Panels/Exhaust System), for the parts that must be removed for service.  
For example: FUEL LINE (Damage, leakage) — Maintenance part
  - Floor board — The part that must be removed for service.

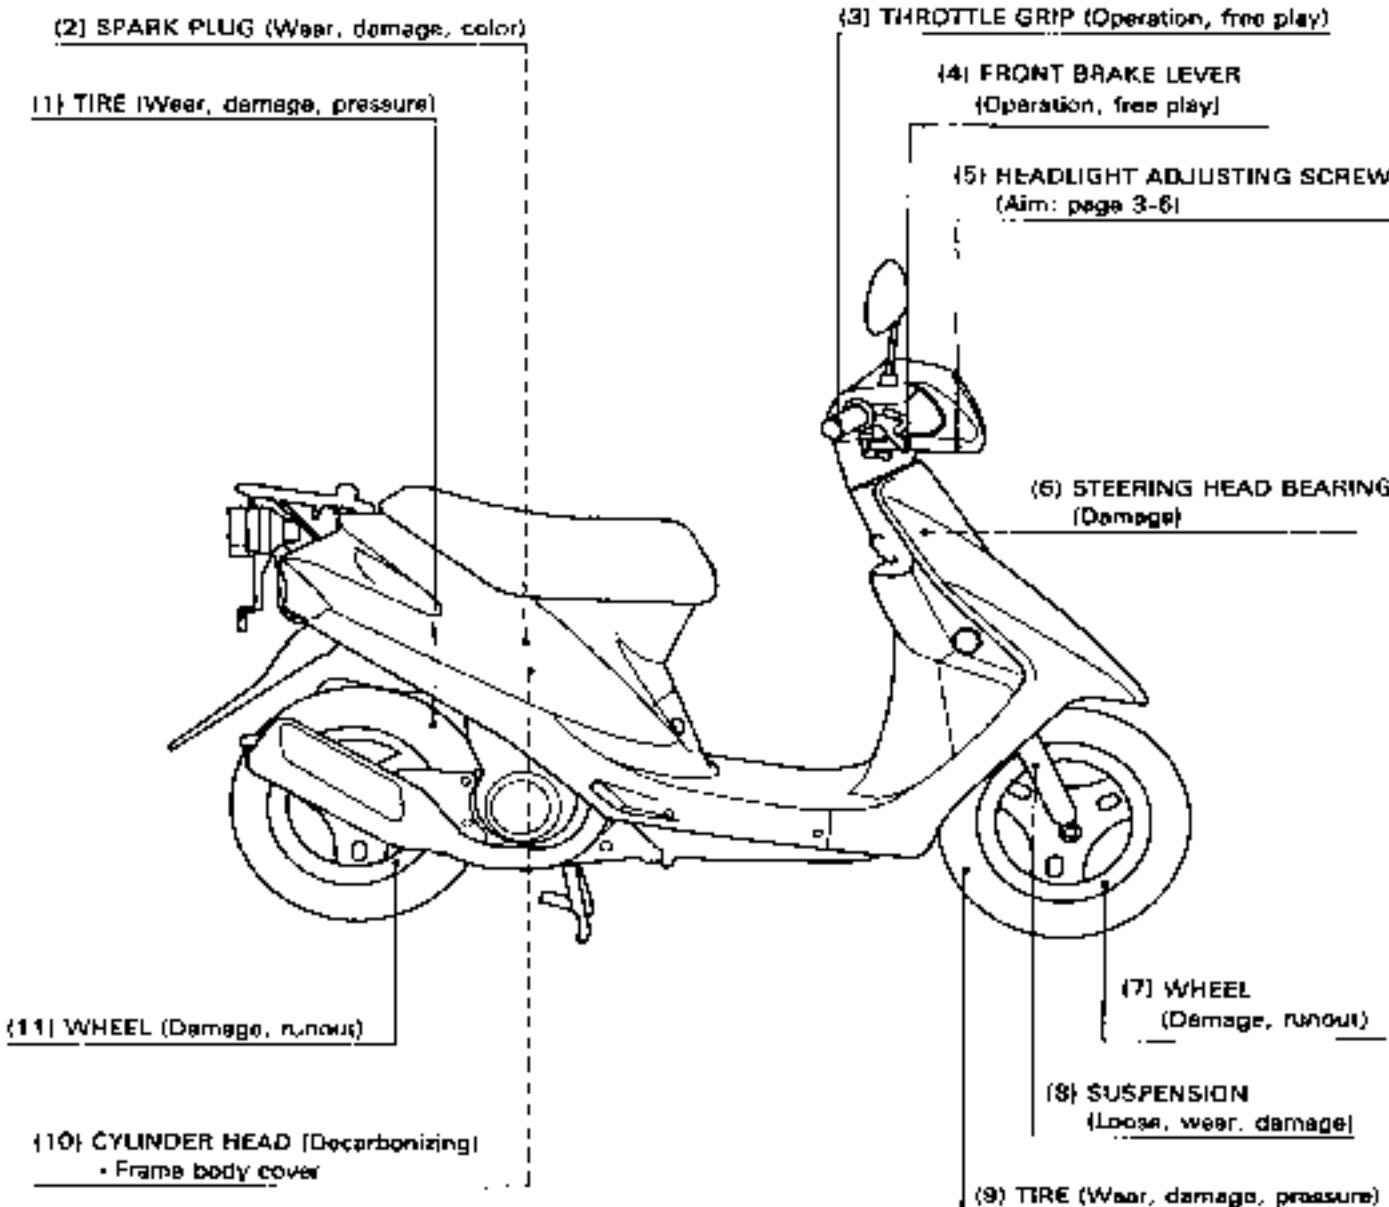

(2) FUEL LINE (Damage, leakage, deterioration)  
FUEL FILTER (Clogging)  
- Rear board

(1) REAR BRAKE LEVER  
(Operation, free play)

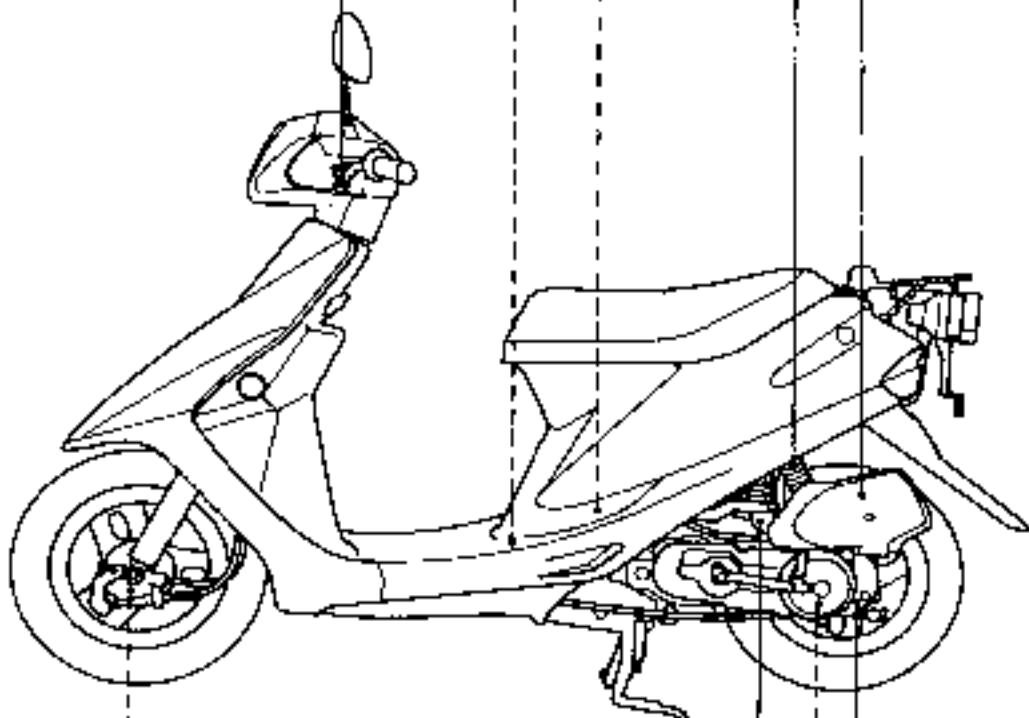

(8) FRONT BRAKE  
(Brake shoe wear)

(3) OIL PUMP AND OIL LINE  
(Adjustment: page 3-8)  
damage, leakage, deterioration  
- Frame body cover

(4) SUSPENSION  
(Loose, wear, damage)

(5) AIR CLEANER (Contamination,  
clogging, cleaning)

(6) REAR BRAKE  
(Brake shoe wear)

(7) CLUTCH (Clutch shoe wear)

(8) THROTTLE STOP SCREW  
[Idle speed adjustment]

## Maintenance

### Maintenance Schedule

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I : Inspect and clean, adjust, lubricate or replace if necessary.

C : Clean R : Replace A : Adjust L : Lubricate

The following items require some mechanical knowledge. Certain items (particularly those marked \* and \*\*) may require more technical information and tools. Consult your authorized Honda dealer.

#### U type

Items	Frequency	Whichever comes first Note	Odometer Reading (Note 1)				Refer to page
			x 1,000 km	1	4	8	
			x 1,000 mi	0.6	2.5	5	
Fuel Line			Months		6	12	18
Throttle Operation				I	I	I	Note 3
Oil Pump and Oil Line				I	I	I	3-6
Air Cleaner	Note 2			C	C	C	Note 3
Spark Plug				Every 1,600 km (1,000 mi) R			
Desarbonizing				Every 3,000 km (2,000 mi) C			
Carburetor Idle Speed				1	I	I	Note 3
Brake Shoe Wear				I	I	I	Note 3
Brake System				I	I	I	Note 3
Brake Light Switch				I	I	I	Note 3
Headlight Arm				I	I	I	3-6
Clutch Shoe Wear				I	I	I	Note 3
Suspension				I	I	I	Note 3
Nuts, Bolts, Fasteners				I	I	I	Note 3
Wheels/Tires				I	I	I	Note 3
Steering Head Bearings				I	I	I	Note 3

\* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

\*\* In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

Notes: 1. At higher odometer reading, repeat at the frequency interval established here.

2. Service more frequently when riding in unusually wet or dusty areas.

3. Refer to Common Service Manual.

## CM type

Items	Frequency	Whichever comes first ↓ Note	Odometer Reading (Note 1)					Refer to page
			x 1,000 mi	0.6	2.5	5	7.5	
			x 1,000 km	1	4	8	12	
Items	Frequency	Whichever comes first ↓ Note	Months	6	12	18		Refer to page
Fuel Line				I	I	I		Note 4
Throttle Operation				I	I	I		Note 4
Oil Pump and Oil Line				I	I	I		3-6
Air Cleaner	Note 2			C	C	C		Note 4
Spark Plug	Note 3			Every 1,000 mi (1,600 km) R				
Decarbonizing	Note 3			Every 2,000 mi (3,200 km) C				
Carburetor Idle Speed				I	I	I	I	Note 4
Brake Shoe Wear				I	I	I	I	Note 4
Brake System				I	I	I	I	Note 4
Brake Light Switch				I	I	I	I	Note 4
Headlight Aim				I	I	I	I	3-8
Clutch Shoe Wear					I			Note 4
Suspension				I	I	I	I	Note 4
Nuts, Bolts, Fasteners				I		I		Note 4
Wheels/Tires					I	I	I	Note 4
Steering Head Bearings				I			I	Note 4

\* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

\*\* In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

Notes: 1. At higher odometer reading, repeat at the frequency interval established here.

2. Service more frequently when riding in unusually wet or dusty areas.

3. HONDA 2 STROKE MOTORCYCLE OIL has been specifically tested in and is recommended for this engine. The use of other oils may cause excessive carbon build-up in the engine and exhaust system, resulting in loss of power and possible engine damage.

4. Refer to Common Service Manual.

# Oil Pump and Oil Line

## Oil Pump Control Cable Adjustment

### NOTE

- The oil pump control cable should be adjusted after the throttle grip free play adjustment.


Remove the center cover (page 2-4).

Open the throttle fully and check that the aligning mark on the oil pump control lever is aligned with the index mark on the oil pump body.

Adjust by loosening the oil pump control cable lock nut and turning the adjusting nut.

### CAUTION

- An adjustment within 1 mm (0.04 in) of the index mark on the open side is acceptable. However, the aligning mark must never be on the closed side of the index mark, otherwise engine damage will occur because of insufficient lubrication.

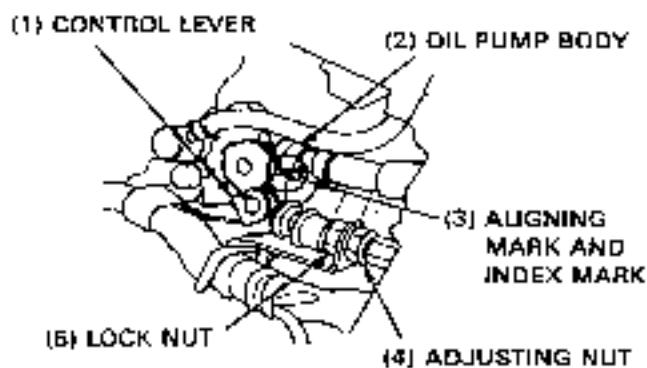

# Headlight Aim

### WARNING

- An improperly adjusted headlight may blind on-coming drivers, or it may fail to light the road for a safe distance.

Place the scooter on firm, level ground and support it with the center stand.

Start the engine and allow it to idle.


Make sure that the headlight and taillight are on.

Check the operation of the headlight dimmer (Lo-Hi) switch.

Adjust the headlight beam by turning the horizontal adjusting screws.

### CAUTION

- Adjust the headlight beam as specified by local laws and regulations.

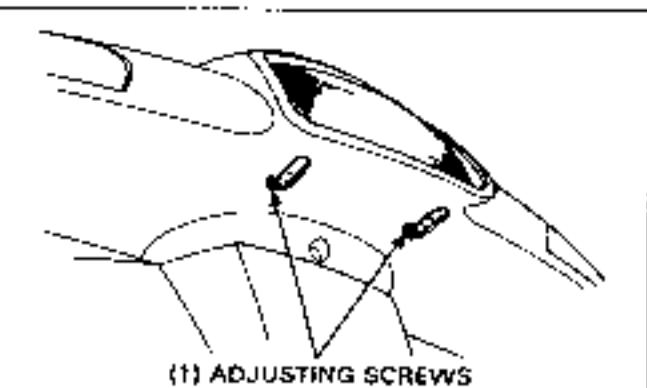

# 4. Lubrication System

Service Information	4-1	Oil Pump Removal/Installation	4-3
Troubleshooting	4-1	Oil Tank Removal/Installation	4-4
Lubrication System Diagram	4-2		

## Service Information

### CAUTION

- Air in oil system will block or restrict oil flow and may result in severe engine damage.
- Bleed air from the oil lines whenever the oil lines or pump have been removed or there is air in the oil lines.
- Bleed air from the oil inlet line first, then bleed air from the oil outlet line.

- The oil pump servicing can be performed with the engine installed.
- When removing and installing the oil pump, be careful not to let any foreign material enter the engine.
- Do not attempt to disassemble the oil pump.
- Fill the oil outlet line with oil whenever the oil outlet line is disconnected.
- Refer to section 2 of the Common Service Manual for oil strainer screen cleaning.
- When disconnecting the oil inlet tube, clamp or plug the tube to prevent oil from flowing out.

## Troubleshooting


### Excessive smoke and/or carbon on spark plug

- Faulty oil pump (too much oil flow)
- Low quality engine oil


### Overheating or seized piston

- No oil in tank or clogged oil line
- Air in oil lines or oil pump
- Faulty oil pump (too little oil flow)
- Clogged oil strainer
- Clogged oil tank cap breather hole

## Lubrication System Diagram

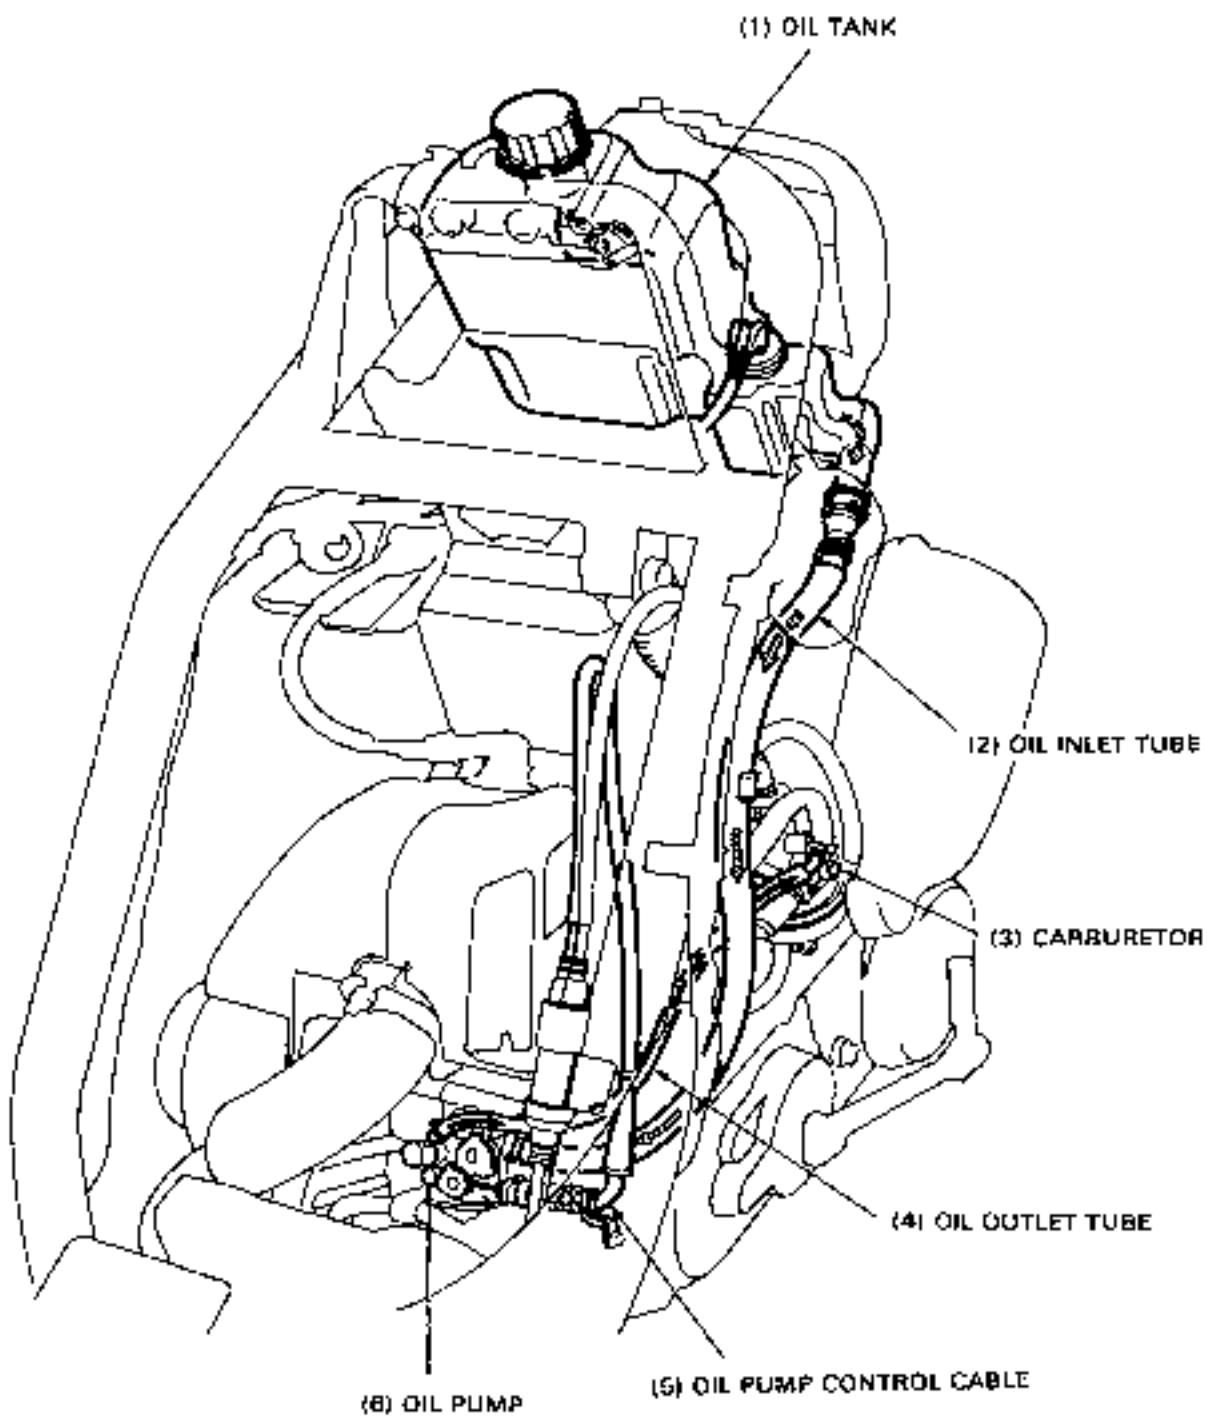

## Oil Pump Removal/Installation

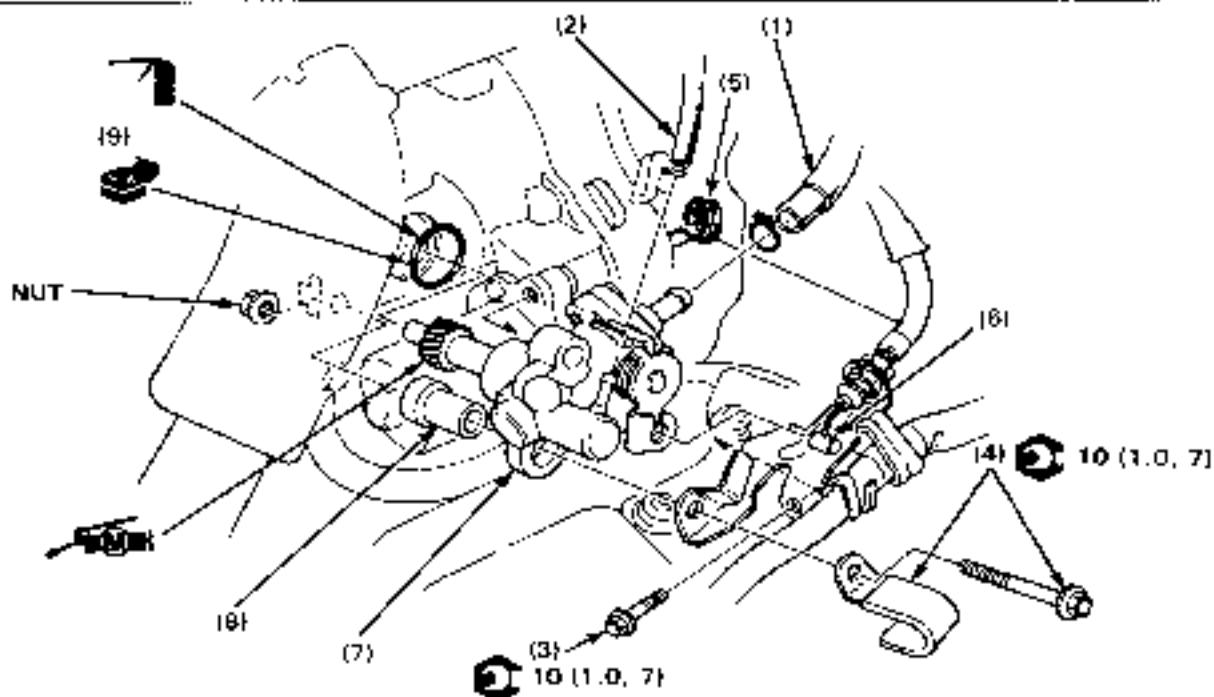

### NOTE


- It is not necessary to loosen the oil pump adjusting nut. If the nut is loosened, perform the oil pump control cable adjustment (page 3-6) after installing the oil pump.
- After installing the oil pump, perform the oil pump/oil line bleeding referring to page 4-11 of the Common Service Manual.

### Requisite Service

- Frame body cover removal/installation (page 2-3)

Procedure	Qty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
(1) Oil inlet tube	1	<b>NOTE</b> - Before disconnecting, clamp or plug the tube to prevent oil from flowing out.
(2) Oil outlet tube	1	
(3) Starter motor mounting bolt	1	
(4) Oil pump mounting bolt/harness clamp	1/1	<b>NOTE</b> - Be careful not to lose the nut at the oil pump side. Remove from oil pump control cable
(5) Clamp	1	
(6) Oil pump control cable	1	
(7) Oil pump	1	
(8) Oil pump mounting collar	1	
(9) O-ring	1	

## Oil Tank Removal/Installation

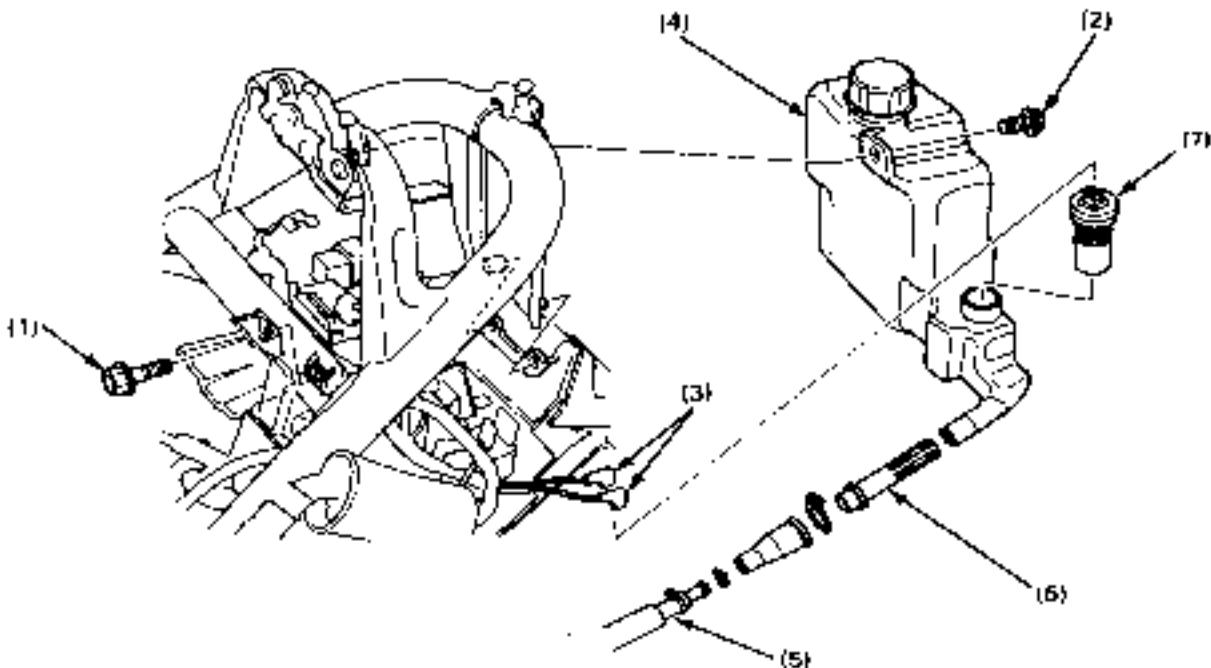

### NOTE

- After installing the oil tank, perform the oil pump/oil line bleeding referring to page 4-11 of the Common Service Manual.

### Requisite Service

- Battery removal/installation (page 13-4)
- Rear combination dummy removal/installation (page 16-4)
- Ignition coil removal/installation (page 14-6)

Procedure	Q'ty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal
(1) Rear fender mounting bolt	1	
(2) Oil tank mounting bolt	1	
(3) Oil level switch connector	2	
(4) Oil tank	1	Slide the rear fender down and remove the tank. NOTE
(5) Oil inlet tube	1	• Disconnect the tube at the oil pump and drain the oil into the clean container.
(6) Oil strainer		
(7) Oil level switch		

# 5. Fuel System

Service Information	5-1	Carburetor Disassembly/Assembly	5-5
Troubleshooting	5-2	Reed Valve Removal/Installation	5-6
Carburetor Removal/Installation	5-3	Air Cleaner Case Removal/Installation	5-7
Throttle Valve Disassembly/Assembly	5-4	Fuel Pump Removal/Installation	5-8

## Service Information

- Gasoline is extremely flammable and is explosive under certain conditions.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.
- Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting in loss of vehicle control.

- When disassembling fuel system parts, note the locations of the O-rings. Replace them with new ones on reassembly.
- Before disassembling the carburetor, place a suitable container under the carburetor drain screw, loosen the screw and drain the carburetor.
- After removing the carburetor, wrap the intake port of the engine with a shop towel or cover it with piece of tape to prevent any foreign material from dropping into the engine.

### NOTE

- If vehicle is to be stored for more than one month, drain the float chamber. Fuel left in the float chamber may cause clogged jets resulting in hard starting or poor driveability.

## Troubleshooting

### Engine won't start

- No fuel to carburetor
  - No fuel in fuel tank
  - Fuel filter clogged
  - Fuel line clogged
  - Float valve stuck
  - Float level misadjusted
  - Fuel tank breather hole clogged
  - Fuel pump malfunction
- Too much fuel getting to the engine
  - Air cleaner clogged
  - Flooded carburetor
- Intake air leak
- Fuel contaminated/deteriorated
- Bystarter circuit clogged

### Lean mixture

- Fuel jets clogged
- Float valve faulty
- Float level too low
- Fuel line restricted
- Carburetor air vent tube clogged
- Intake air leak
- Fuel pump malfunction
- Throttle valve operation faulty

### Rich mixture

- Bystarter valve in ON position
- Float valve faulty
- Float level too high
- Air jets clogged
- Air cleaner element contaminated
- Flooded carburetor

### Engine stalls, hard to start, rough idling

- Fuel line restricted
- Ignition malfunction
- Fuel mixture too lean/rich
- Fuel contaminated/deteriorated
- Intake air leak
- Idle speed misadjusted
- Fuel pump malfunction
- Air screw misadjusted
- Bystarter circuit clogged
- Float level misadjusted
- Fuel tank breather hole clogged

### Afterburn when engine braking is used

- Lean mixture in slow circuit


### Backfiring or misfiring during acceleration

- Ignition system faulty
- Fuel mixture too lean

### Poor performance (driveability) and poor fuel economy

- Fuel system clogged
- Ignition malfunction

## Carburetor Removal/Installation

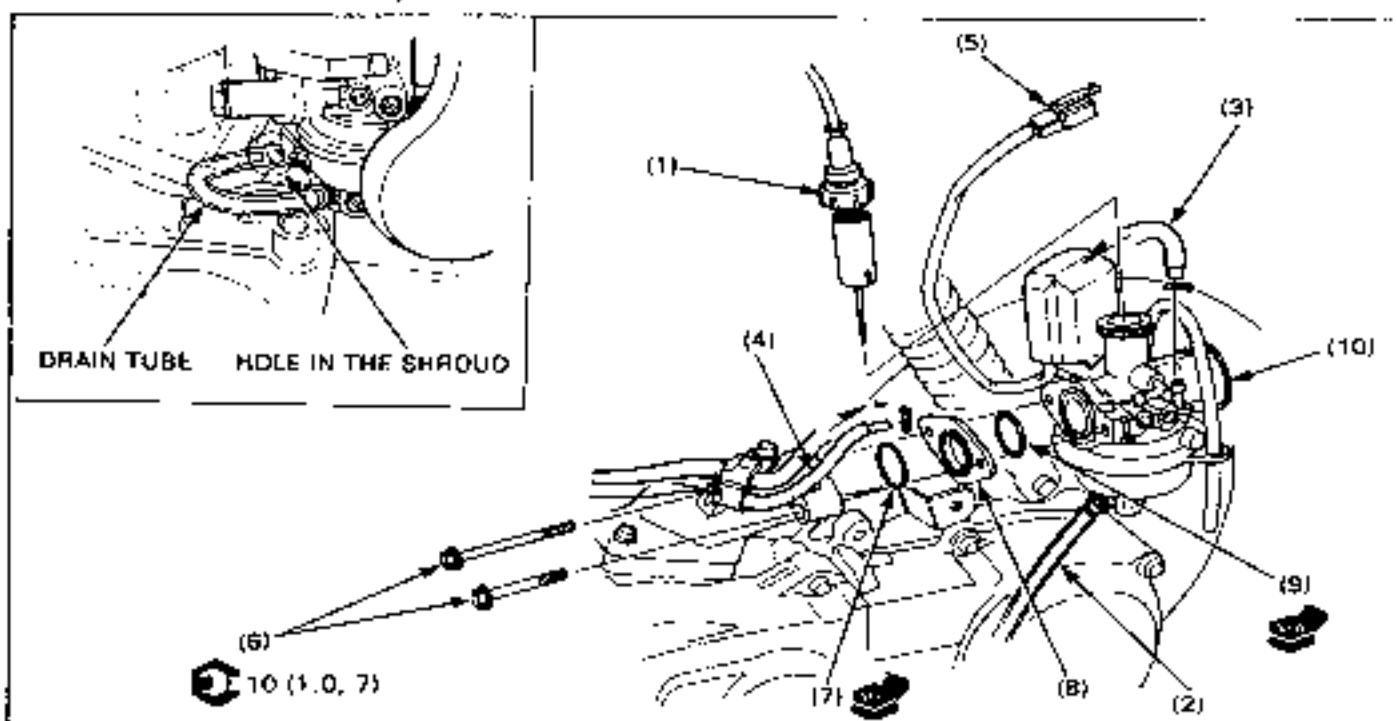


### Requisite Service

• Center cover removal/installation (page 2-4)

• Air cleaner case removal/installation (page 5-7)

Procedure	Q'ty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
(1) Carburetor top/throttle valve	1	Disassembly/assembly (page 5-4)
(2) Drain tube	1	Disconnect from the carburetor. NOTE - When installing, insert the other end of the tube into the hole in the shroud.
(3) Fuel line	1	
(4) Oil outlet tube	1	NOTE - Bleed air from the tube when installing.
(5) Auto bypass wire connector	1	
(6) Carburetor mounting bolt	2	
(7) O-ring	1	
(8) Insulator	1	
(9) O-ring	1	
(10) Carburetor	1	Disassembly/assembly (page 5-5)

## Throttle Valve Disassembly/Assembly

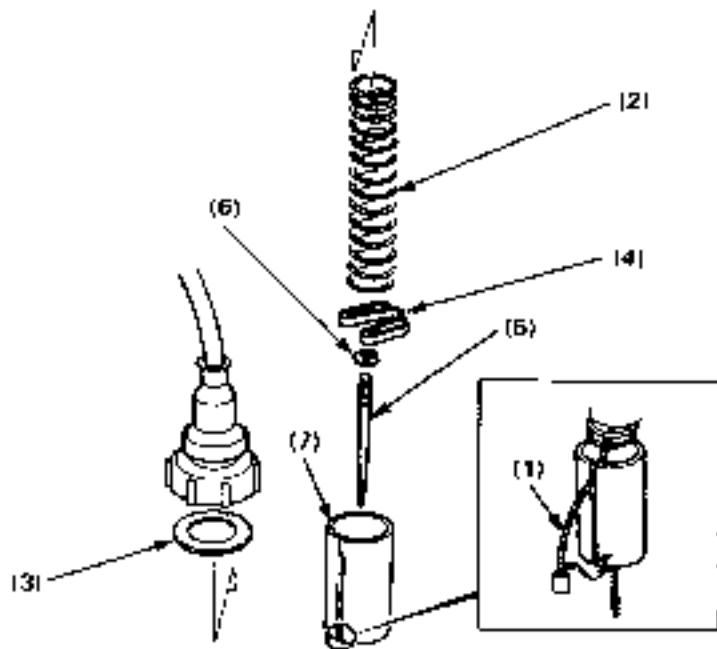

### CAUTION


- The carburetor top is an integral part of the throttle cable assembly. The top cannot be separated from the assembly without causing damage to the cable.

### Requisite Service

- Carburetor top/throttle valve removal/installation (page 6-3)

Procedure	Q'ty	Remarks
<b>Disassembly Order</b>		Assembly is in the reverse order of disassembly.
(1) Throttle cable	1	
(2) Throttle valve spring	1	
(3) Carburetor top gasket	1	
(4) Retainer	1	
(5) Jet needle	1	
(6) Needle clip	1	Remove from the jet needle. Standard position: 3rd groove
(7) Throttle valve	1	

## Carburetor Disassembly/Assembly

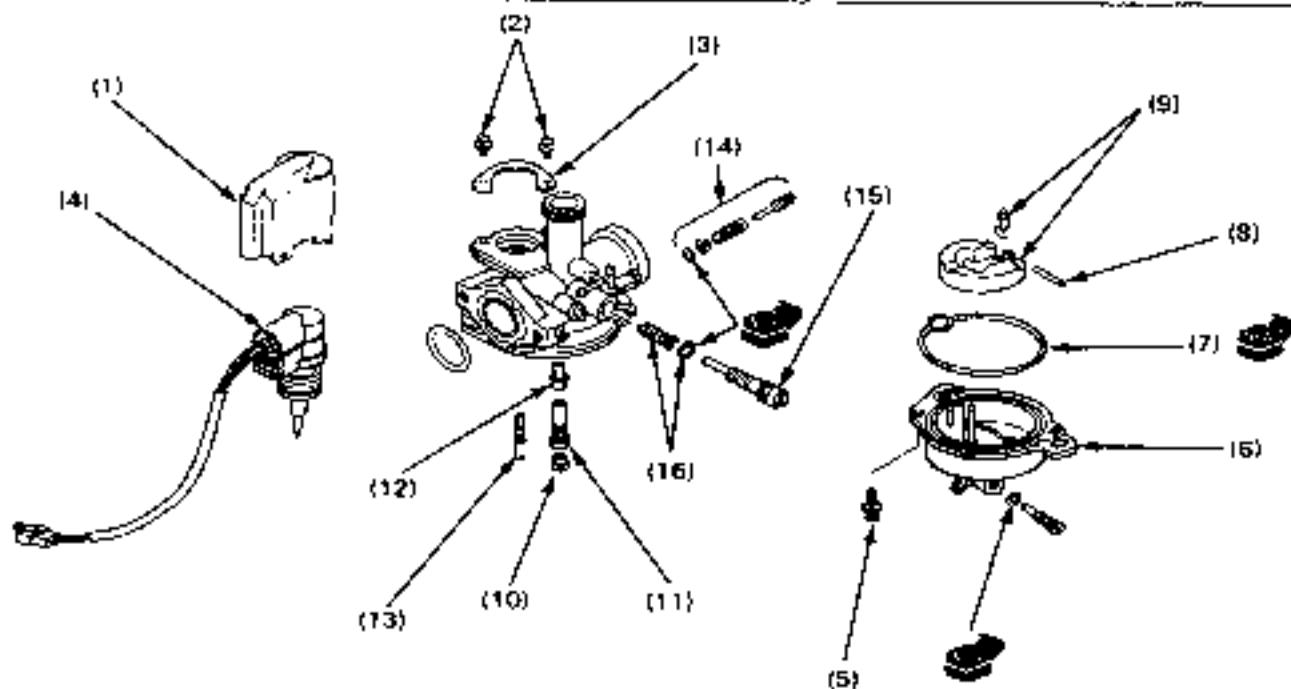


### Requisite Service

- Carburetor removal/installation (page 5-3)

Procedure	Qty	Remarks
<b>Disassembly Order</b>		Assembly is in the reverse order of disassembly
(1) Auto bypasser		
(2) Auto bypasser cover	1	
(3) Screw	2	
(4) Auto bypasser set plate	1	
(5) Auto bypasser	1	
<b>Fuel chamber</b>		
(5) Screw	2	
(6) Fuel chamber	1	
(7) O-ring	1	
(8) Fuel pipe	1	
(9) Fuel/float valve	1/1	
<b>Carburetor body</b>		
(10) Main jet	1	
(11) Main jet holder	1	
(12) Needle jet holder	1	
(13) Slow jet	1	
(14) Air screw	1	
(15) Throttle stop screw	1	
(16) Spring/O-ring	1/1	
NOTE		
• After installing the carburetor, adjust the idle speed.		

## Reed Valve Removal/Installation

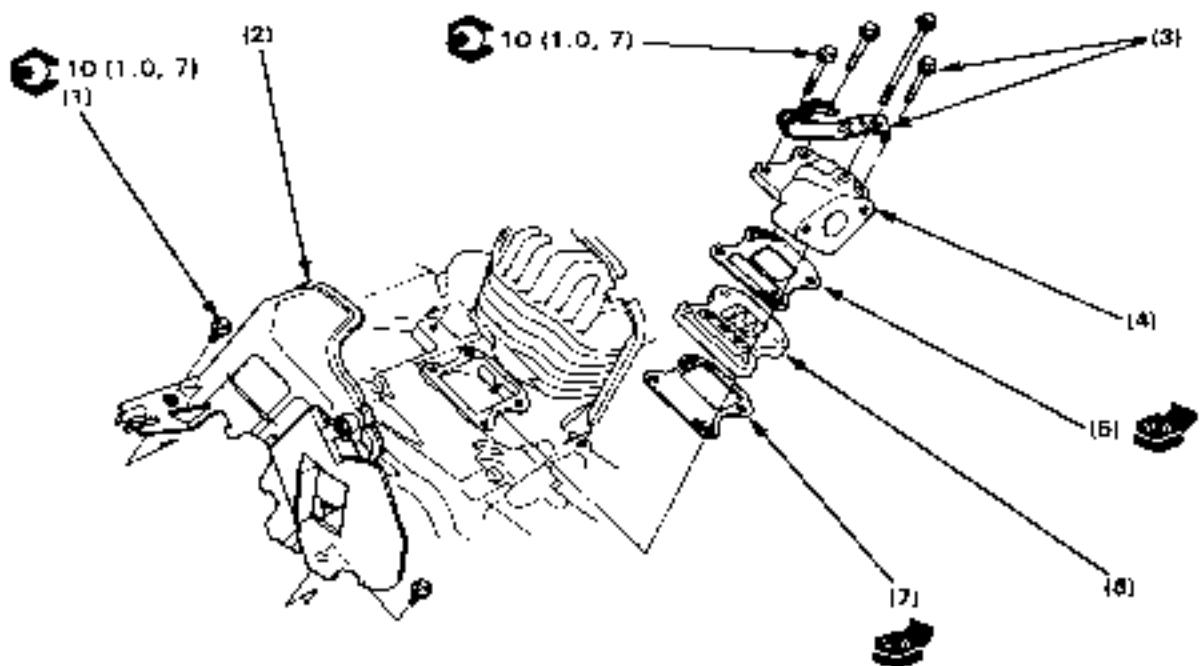**CAUTION**

- Do not disassemble or bend the reed stopper. To do so can cause loss of power and engine damage. If the stopper, reed or valve seat is faulty, replace them as a unit.


**Requisite Service**

- Luggage box removal/installation (page 2-4)

- Carburetor removal/installation (page 5-3)


Procedure	Q'ty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
(1) Left shroud mounting bolt	2	
(2) Left shroud	1	
(3) Intake manifold mounting bolt/clamp	4/1	
(4) Intake manifold	1	
(5) Gasket	1	
(6) Reed valve	1	
(7) Gasket	1	

## Air Cleaner Case Removal/Installation

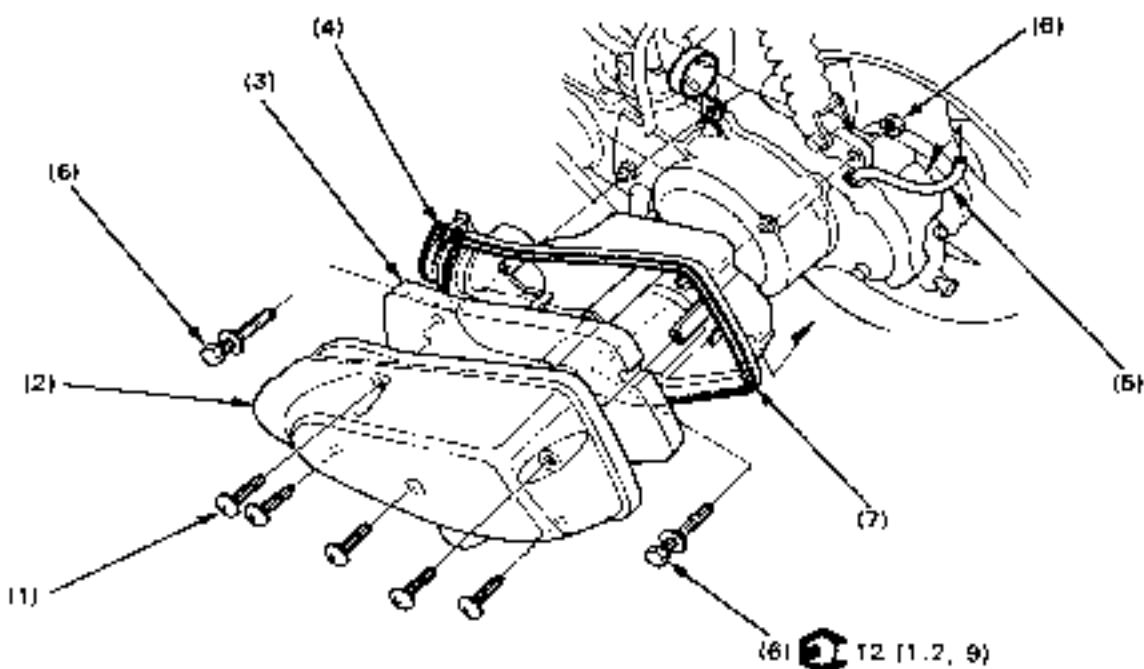

Procedure	Q'ty	Remarks
<b>Removal Order</b>		
(1) Tapping screw	5	Installation is in the reverse order of removal.
(2) Air cleaner case cover	1	
(3) Air cleaner element	1	
(4) Connecting tube band screw	1	Loosen.
(5) Breather tube	1	Disconnect from the air cleaner case.
(6) Air cleaner case mounting bolt/nut	2/1	NOTE - Do not lose the nut.
(7) Air cleaner case	1	

## Fuel Pump Removal/Installation

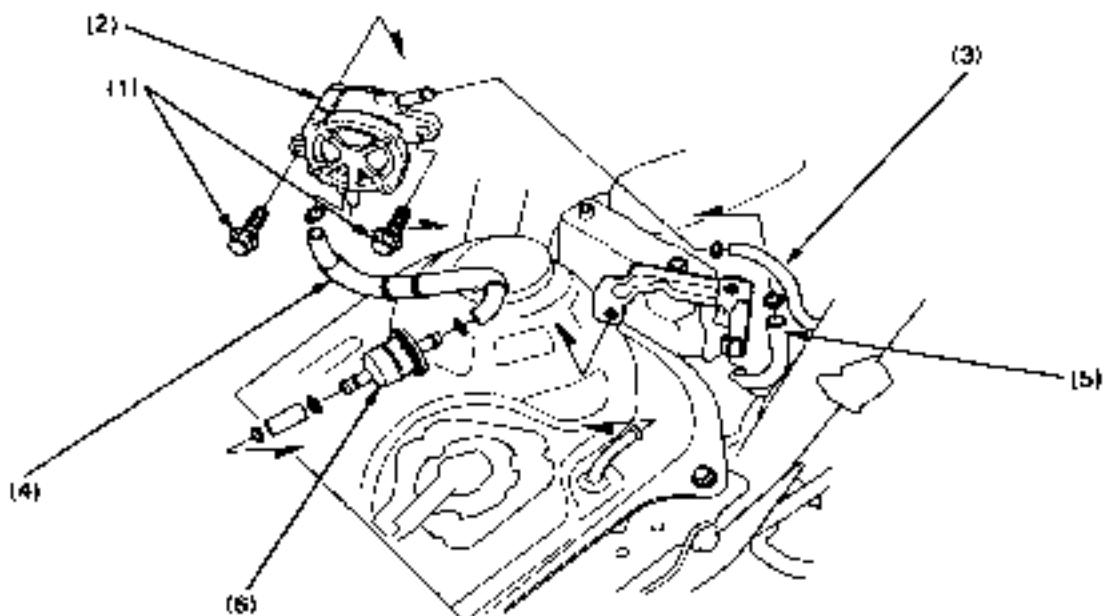**NOTE**

- Do not attempt to disassemble the fuel pump.
- After installing the fuel pump, bleed air from the fuel lines and pump.

**Requisite Service**

- Floor board removal/installation (page 2-5)

Procedure		Q'ty	Remarks
(1)	Remove Order		Installation is in the reverse order of removal.
(1)	Bolt	2	
(2)	Fuel pump	1	Inspection (page 5-8) Air bleeding (page 5-9)
(3)	Fuel line (discharge side)	1	
(4)	Fuel line (suction side)	1	
(5)	Vacuum tube	1	
(6)	Fuel filter	1	<b>NOTE</b> - When installing, do not connect the vacuum tube to the fuel suction pipe of the pump.

## Fuel Pump Inspection

### NOTE


- Before inspecting the pump discharge volume, warm up the engine and check that the idle speed is within the specification.

Start the engine and allow it to idle.

Disconnect the fuel line from the carburetor, allow the fuel to flow out of the fuel line for more than 5 seconds, then let the fuel flow into the graduated beaker for 10 seconds. Stop the engine and connect the fuel line.

There should be 20 cc (0.70 US oz, 0.67 Imp oz) in the beaker.

If the fuel pump discharge volume is less than specified volume, check the fuel lines, vacuum tube and fuel filter for clogging or damage. If they are OK, replace the fuel pump.

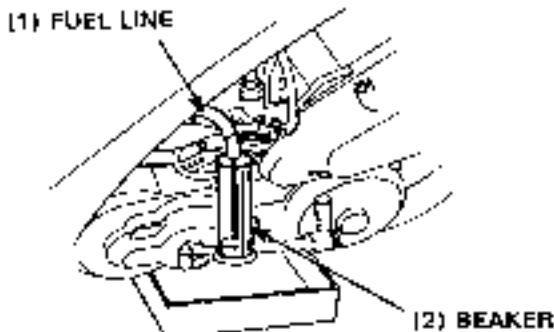


## Air Bleeding

After replacing the fuel pump, bleed the air from the pump and fuel lines as follows:

Disconnect the fuel line from the carburetor and feed the gasoline from the other container through the suitable fuel tube.

Start the engine and allow it to idle to operate the fuel pump until the fuel flows out of the fuel line.

Stop the engine and connect the fuel line to the carburetor.

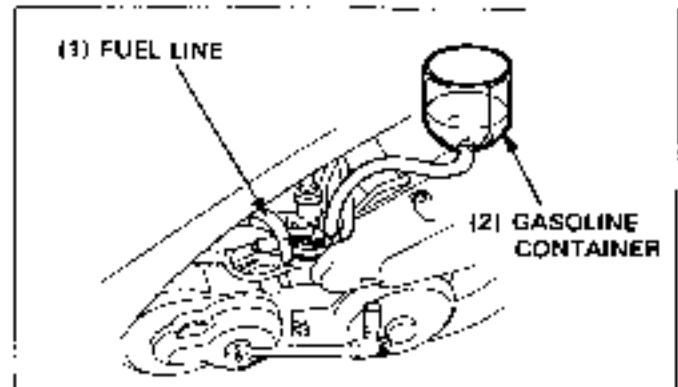

# 6. Engine Removal/Installation

Service Information


6-1 Engine Removal/Installation

6-2

## Service Information

- The following components require engine removal for service:
  - Driveshaft and final gear shaft bearings (section 9)
  - Crankcase (section 10)
  - Crankshaft (section 10)
- After installing the engine, perform the following adjustments:
  - Throttle cable
  - Oil pump control cable (page 3-8)
  - Rear brake cable

## **Engine Removal/Installation**

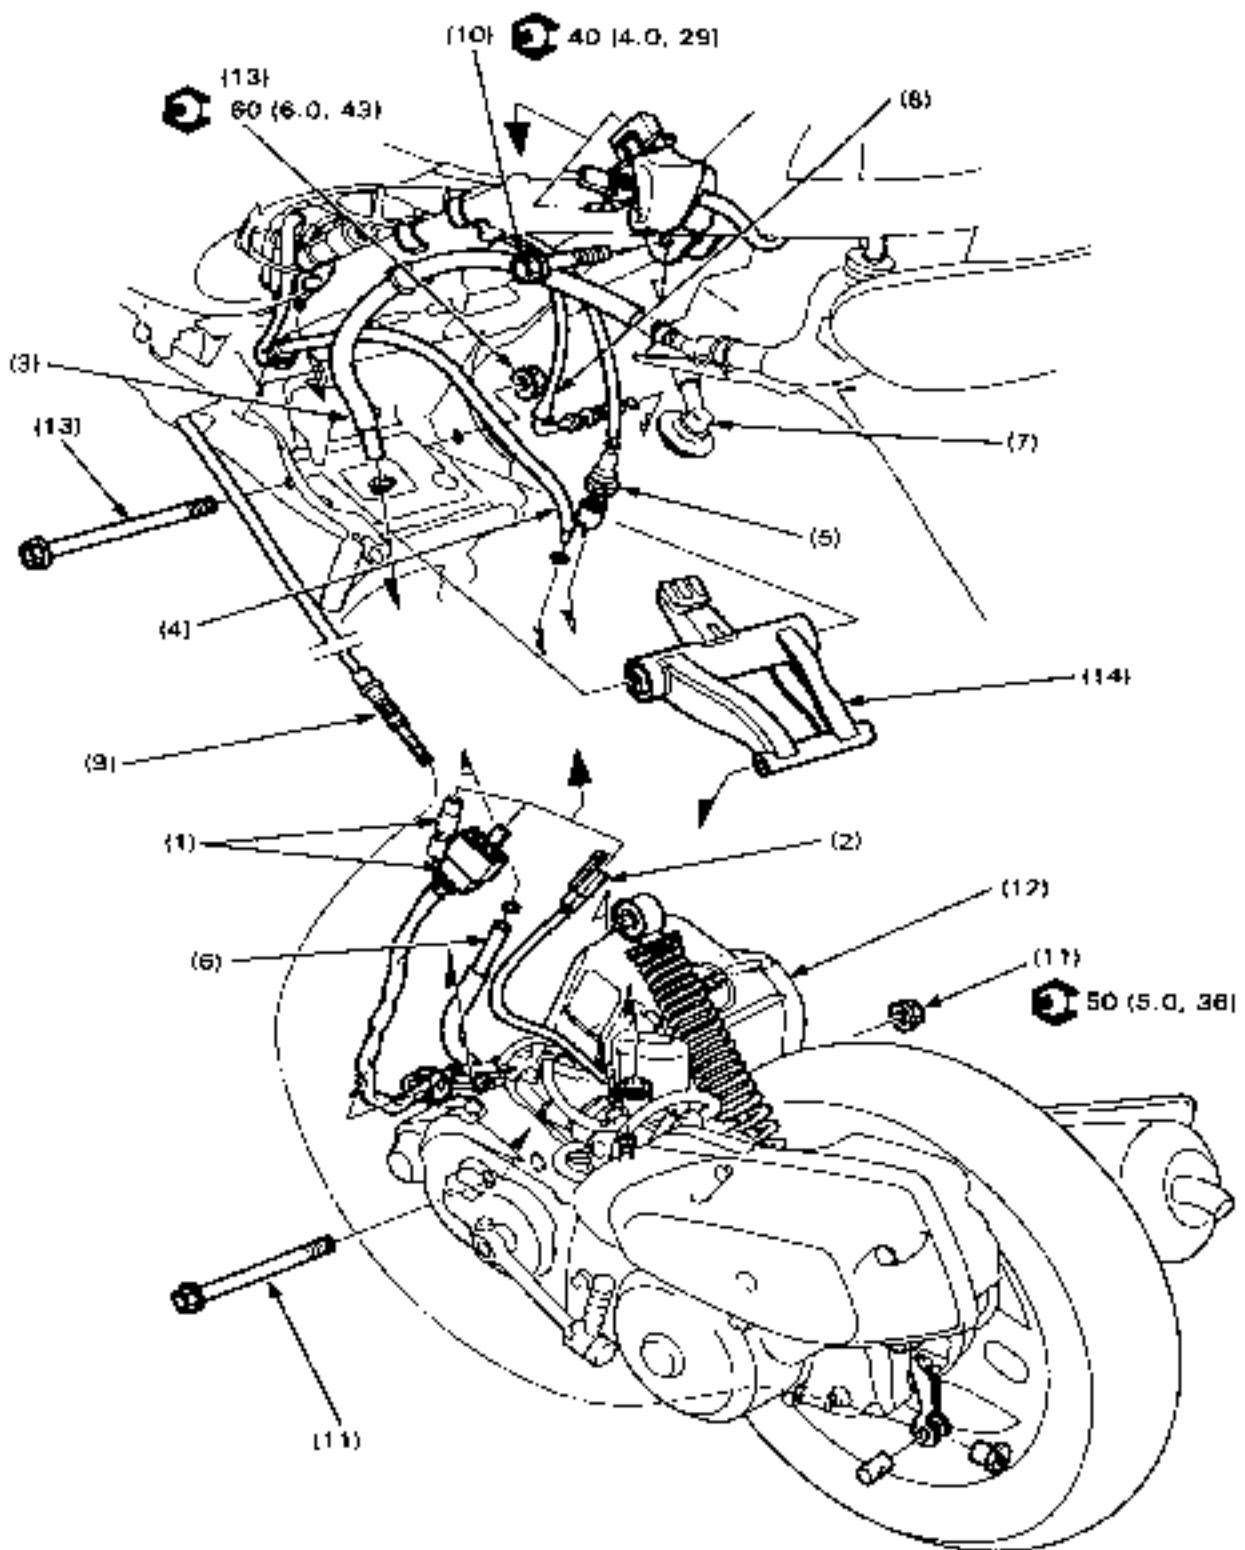

**Requisite Service**

- Frame body cover removal/installation (page 2-3)
- Carburetor top/throttle valve removal/installation (page 5-3)

Procedure	Q'ty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
(1) Alternator/starter motor wire connector	2	
(2) Auto bypasser wire connector	1	
(3) Oil inlet tube	1	<b>NOTE</b> • Before disconnecting, clamp or plug the tube to prevent oil from flowing out.
(4) Fuel line	1	
(5) Carburetor top	1	
(6) Fuel pump vacuum tube	1	
(7) Spark plug cap	1	
(8) Oil pump control cable	1	Disconnect from pump and remove from cable stay.
(9) Rear brake cable	1	Remove from the rear brake arm, crankcase and clamp.
(10) Rear shock absorber upper mounting bolt	1	
(11) Engine mounting bolt/nut	1/1	
(12) Engine	1	<b>NOTE</b> • Support the frame securely
(13) Engine mounting bracket bolt/nut	1/1	
(14) Engine mounting bracket	1	

# 7. Cylinder Head/Cylinder/Piston

Service Information	7-1
Troubleshooting	7-1

Cylinder Head, Cylinder and Piston
Removal/Installation

7-2

## Service Information

- Clean all disassembled parts with cleaning solvent and dry them off with compressed air before inspection.
- Be careful not to damage the mating surfaces by using a screwdriver when disassembling the cylinder. Do not strike the cylinder too hard during disassembly, even with a rubber or plastic mallet, to prevent the possibility of damage to the cylinder fins.
- Take care not to damage the cylinder wall and piston.

## Troubleshooting

### Compression too low, hard starting or poor performance at low speed

- Cylinder head
  - Leaking or damaged cylinder head gasket
  - Warped or cracked cylinder head
- Loose spark plug
- Worn, stuck or broken piston rings
- Worn or damaged cylinder and piston
- Leaking crankcase primary compression
  - Blown crankcase gasket
  - Damaged crankshaft oil seal


### Compression too high, overheating or knocking

- Excessive carbon build-up on piston or combustion chamber

### Abnormal noise

- Worn cylinder, piston, piston ring
- Worn piston pin or piston pin hole
- Worn connecting rod small end bearing

## Cylinder Head, Cylinder and Piston Removal/Installation

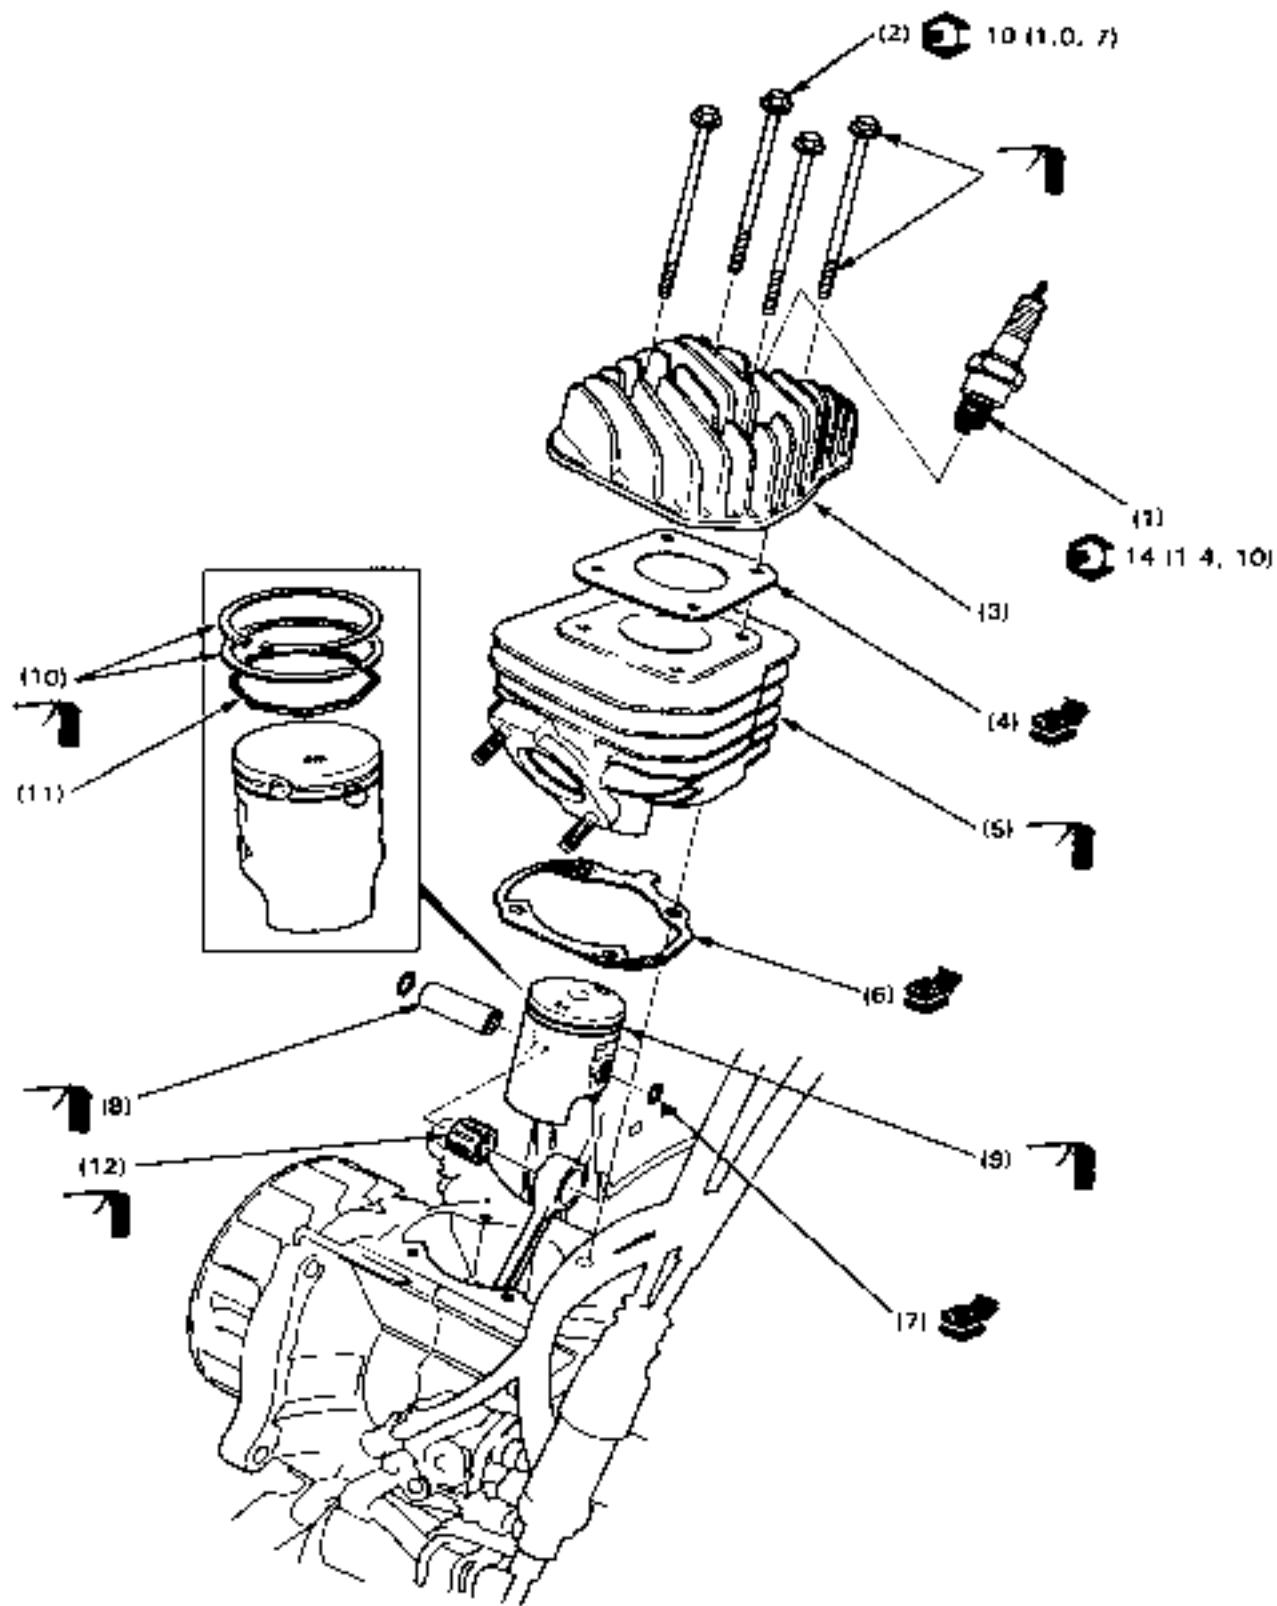

**Requisite Service**

- Muffler removal/installation (page 2-9)
- Fan cover removal/installation (page 13-8)
- Left shroud removal/installation (page 5-6)

Procedure	Q'ty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
<b>Cylinder head</b>		
(1) Spark plug	1	
(2) Cylinder head bolt	4	Loosen the bolts in a crisscross pattern in 2 or 3 steps.
(3) Cylinder head	1	
(4) Cylinder head gasket	1	
<b>Cylinder</b>		
(5) Cylinder	1	<b>CAUTION</b> - Do not pry between the cylinder and crankcase or strike the fins.
(6) Cylinder gasket	1	<b>NOTE</b> - Clean the gasket surfaces of the cylinder and crankcase being careful not to damage them.
<b>Piston</b>		
(7) Piston pin clip	2	
(8) Piston pin	1	
(9) Piston	1	
(10) Piston ring	2	
(11) Expander	1	
(12) Connecting rod small end bearing	1	Install the expander behind the second ring.

# 8. Kickstarter/Drive Pulley/Clutch/Driven Pulley

Service Information	8-1	Drive Pulley and Clutch/Driven Pulley Removal/Installation	8-5
Troubleshooting	8-1	Movable Drive Face Disassembly/Assembly	8-7
Left Crankcase Cover Removal/Installation	8-2	Clutch/Driven Pulley Disassembly/Assembly	8-8
Kickstarter Removal/Installation	8-3		

## Service Information

### NOTE

- Do not apply grease to the movable drive face and weight rollers.

- Avoid getting grease and oil on the V-belt and pulley drive faces in order to prevent belt slippage.
- Never operate the starter motor with the left crankcase front cover removed.

## Troubleshooting

### Engine starts but scooter won't move

- Worn drive belt
- Damaged ramp plate
- Worn or damaged clutch lining
- Broken driven face spring


### Engine stalls or scooter creeps

- Broken clutch shoe spring

### Poor performance at high speed or lack of power


- Worn drive belt
- Weak driven face spring
- Worn weight rollers
- Contaminated pulley faces

## Left Crankcase Cover Removal/Installation

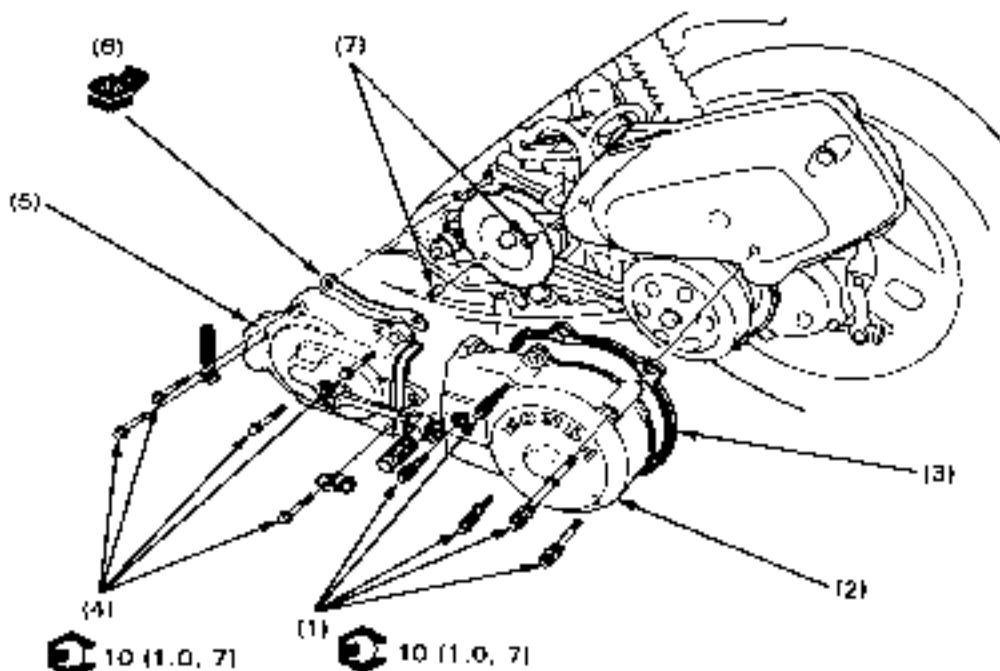

Procedure	Q'ty	Remarks
<b>Removal Order</b>		
(1) 6 mm special bolt	5	Installation is in the reverse order of removal.
(2) Left crankcase rear cover	1	
(3) Rubber gasket	1	Push down the kickstarter pedal and remove the cover. NOTE - Replace with a new one if damaged.
(4) 6 mm bolt	5	NOTE - When installing, do not forget to install the cable clamps in position.
(5) Left crankcase front cover	1	
(6) Gasket	1	
(7) Dowel pin	2	

## Kickstarter Removal/Installation

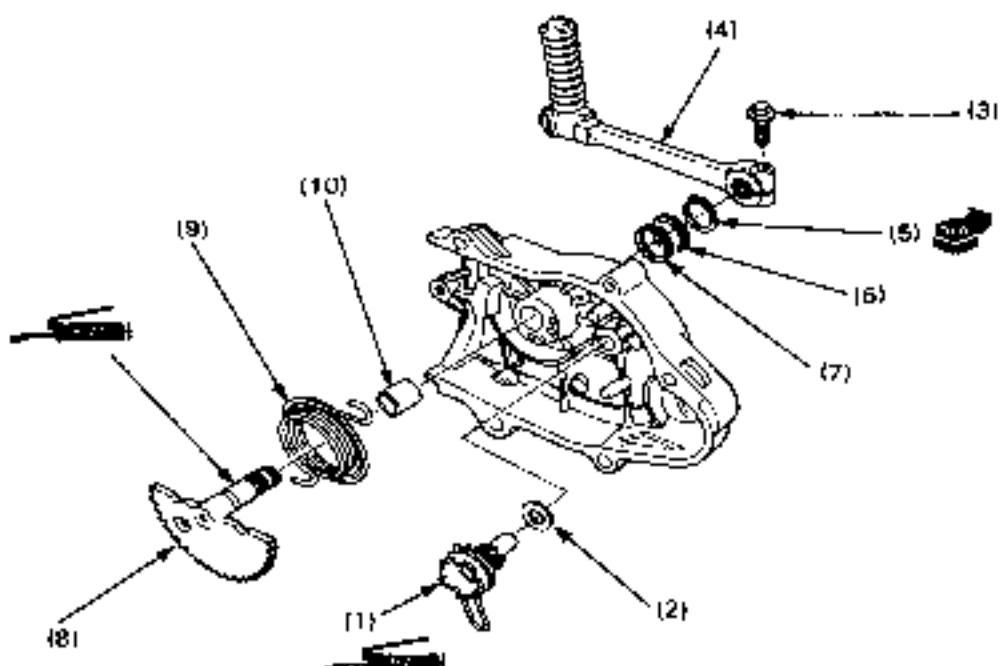

### Requisite Service


- Left crankcase cover removal/installation (page 8-2)

	Procedure	O'ty	Remarks
(1)	Removal Order Kickstarter driven gear	1	Installation is in the reverse order of removal. Remove while turning the kickstarter pedal. Installation (page 8-4)
(2)	Thrust washer	1	
(3)	Bolt	1	
(4)	Kickstarter pedal	1	
(5)	Snap ring	1	
(6)	Washer	1	
(7)	Copper washer	1	
(8)	Kickstarter spindle	1	Unhook the return spring and first and remove.
(9)	Kickstarter return spring	1	Inspect (page 8-4)
(10)	Spindle bushing	1	


## Kickstarter/Drive Pulley/Clutch/Driven Pulley

### **Kickstarter Inspection**


Check the kickstarter spindle for wear or damage.  
Check the kickstarter return spring for weakness or damage.  
Check the spindle bushing for wear, scratches or scoring.

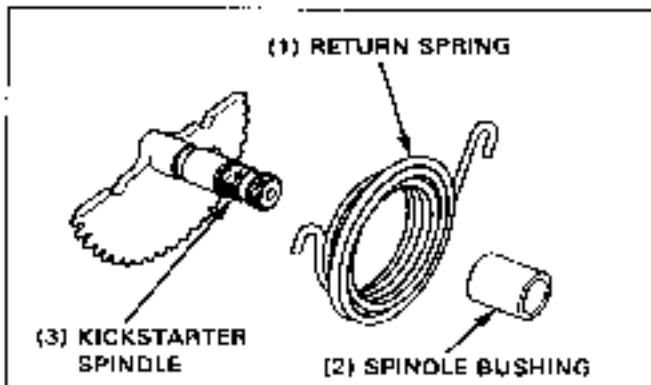

Check the kickstarter driven gear for wear or damage.  
Check the friction spring for weakness or damage.

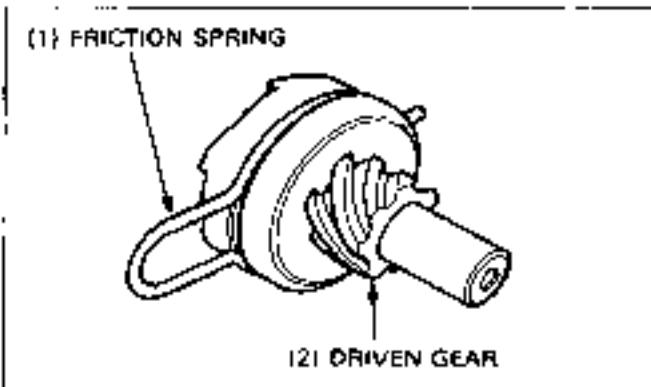


Check the spindle and driven gear bearings for wear or damage.

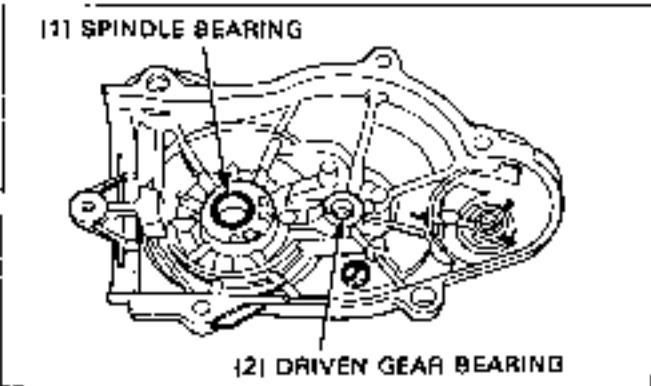


### **Kickstarter Driven Gear Installation**

Align the friction spring with the boss on the crankcase front cover and install the driven gear while turning the kickstarter pedal.  
Engage the spindle gear and driven gear while returning the kickstarter pedal.

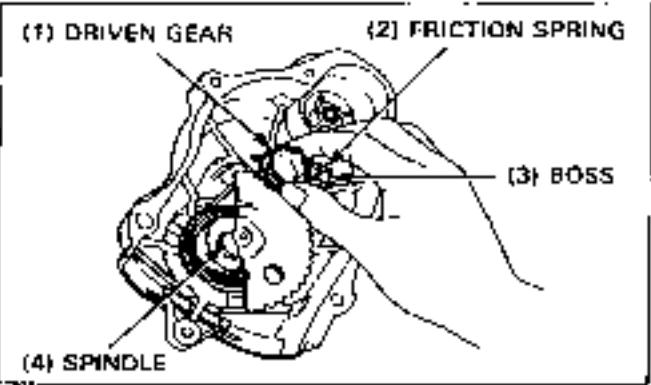

## Drive Pulley and Clutch/driven Pulley Removal/Installation

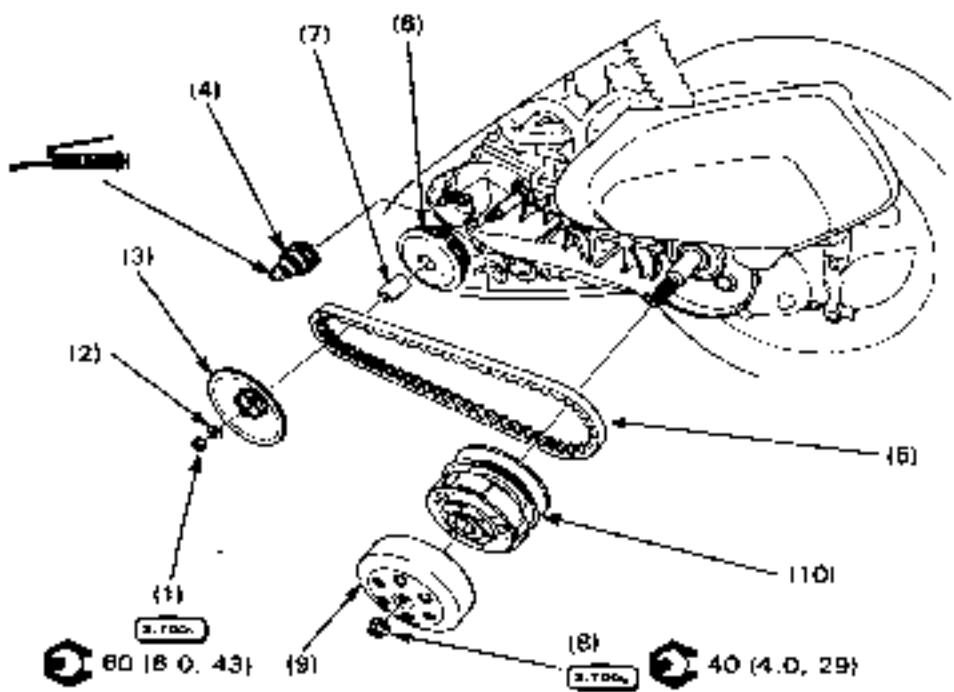

### Requisite Service

- Left crankcase cover removal/installation (page 8-2)

Procedure	Qty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
(1) Nut	1	
(2) Washer	1	
(3) Drive pulley face	1	Removal/installation (page 8-6)
(4) Starter pinion	1	
(5) Drive belt	1	
(6) Movable drive face	1	Disassembly/assembly (page 8-7)
(7) Movable drive face boss	1	
(8) Clutch outer nut	1	Removal/installation (page 8-6)
(9) Clutch outer	1	
(10) Clutch/driven pulley	1	Disassembly/assembly (page 8-8)

## Kickstarter/Drive Pulley/Clutch/Driven Pulley

### Drive Pulley Face Removal/Installation

Hold the drive pulley face with the clutch center holder and remove the nut.

Remove the washer and drive pulley face from the crankshaft.

**Screwdriver**


Clutch center holder

07724-0050001

Installation is in the reverse order of removal.

#### NOTE

- Align the splines of the drive pulley face and crankshaft properly.

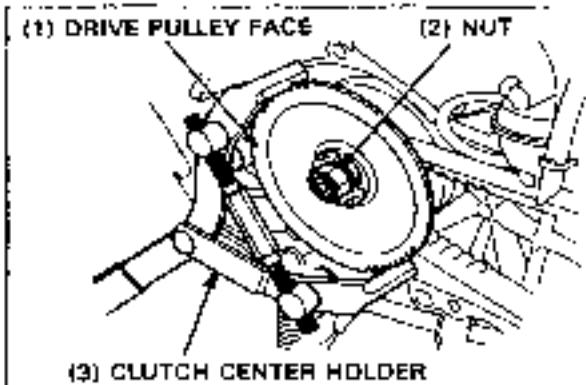

### Clutch Outer Nut Removal/Installation


Hold the clutch outer with the universal holder and remove the clutch outer nut.

**Screwdriver**


Universal holder

07726-0030000

Installation is in the reverse order of removal.

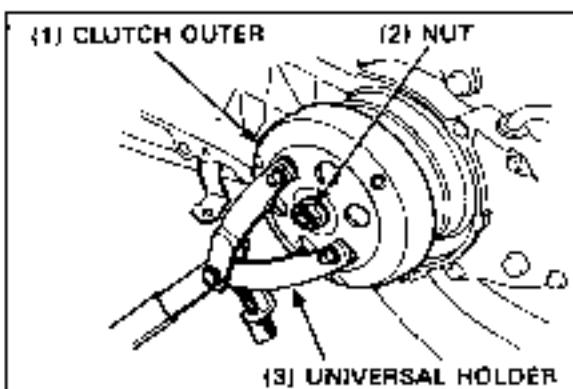

## Movable Drive Face Disassembly/Assembly

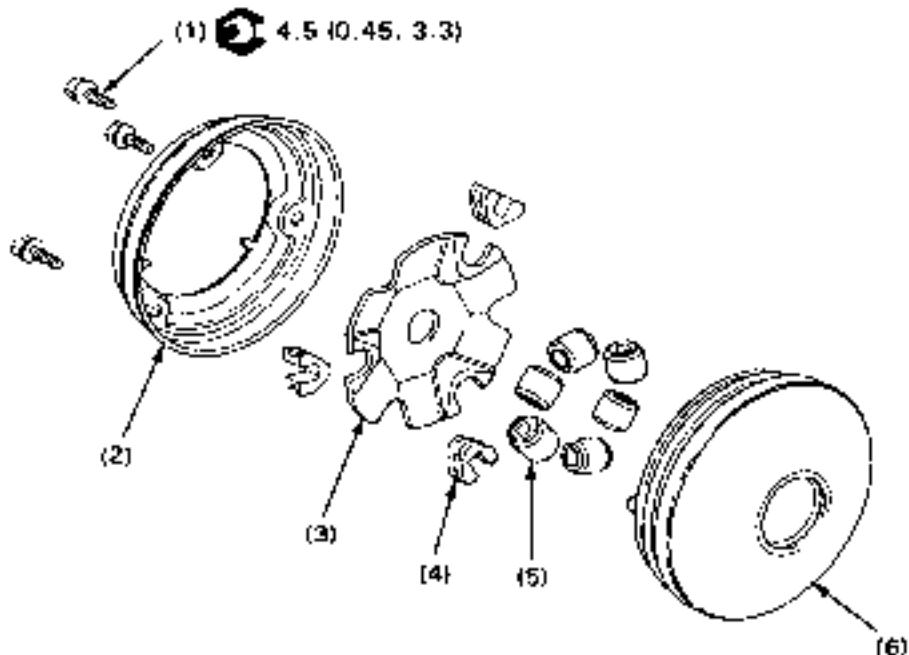


### Requisite Service

- Movable drive face removal/installation (page 8-6)

Procedure	Q'ty	Remarks
<b>Disassembly Order</b>		
(1) Bolt	3	
(2) Face seal	1	
(3) Ramp plate	1	
(4) Slide piece	3	
(5) Weight roller	6	<b>NOTE</b>
(6) Movable drive face	1	Do not apply grease to the movable drive face and weight rollers.

## Clutch/Driven Pulley Disassembly/Assembly

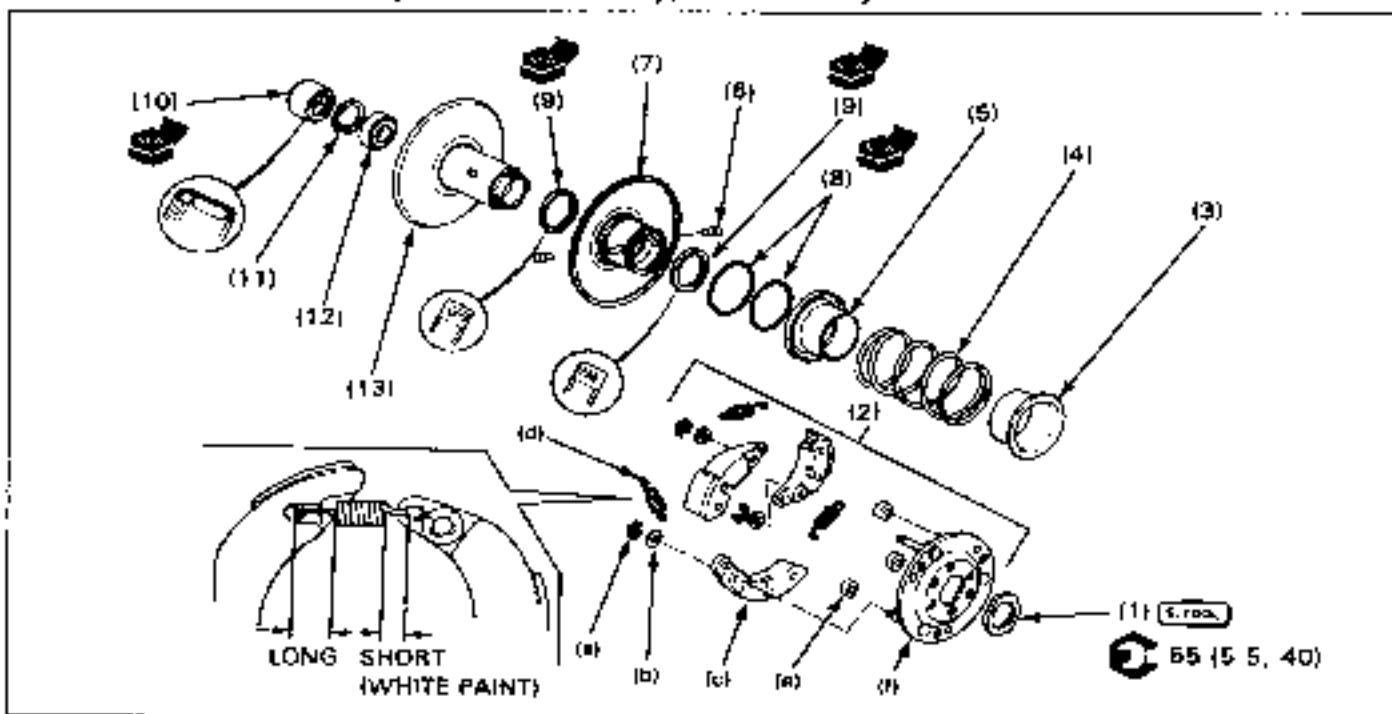

## Requisite Service

- Clutch/driven pulley removal/installation (page 8-5)

Procedure		Q'ty	Remarks
(11)	<b>Disassembly Order</b>		
(12)	28 mm special nut	1	
(12)	Clutch assembly	1	
(a)	Snap ring	3	
(b)	Washer	3	
(c)	Clutch shoe	3	
(d)	Clutch shoe spring	3	
(e)	Damper rubber	3	
(f)	Clutch drive plate	1	
(13)	Spring collar	1	
(4)	Driven face spring	1	
(5)	Seal collar	1	NOTE - When removing, be careful not to damage or deform.
(6)	Guide pin	2	
(7)	Movable driven face	1	
(8)	O-ring	2	
(9)	Oil seal	2	
(10)	Inner bearing	1	
(11)	Snap ring	1	
(12)	Outer bearing	1	
(13)	Driven face	1	


Procedure		Q'ty	Remarks
(13)	<b>Assembly Order</b>		
	Driven face	1	
(12)	Outer bearing	1	NOTE - Pack 5.0 - 5.6 g (0.18 - 0.19 oz) of specified grease to the inside when installing.
(11)	Snap ring	1	Drive in with the sealed side facing down.
(10)	Inner bearing	1	Press in with the sealed side facing up
(9)	Oil seal	2	
(8)	O-ring	2	
(7)	Movable driven face	1	
(6)	Guide pin	2	
(5)	Seal collar	1	
(4)	Driven face spring	1	
(3)	Spring collar	1	
(f)	Clutch drive plate	1	
(e)	Damper rubber	3	
(d)	Clutch shoe	3	
(b)	Washer	3	
(g)	Snap ring	3	
(d)	Clutch shoe spring	3	NOTE - Note the installation direction
(2)	Clutch assembly	1	
(1)	28 mm special nut	1	

**28 mm Special Nut Removal/Installation**

Align the holes in the clutch spring compressor with the bosses on the clutch drive plate and install the compressor on the clutch/driven pulley

**Tool:**  
Clutch spring compressor

07980 - KM10000

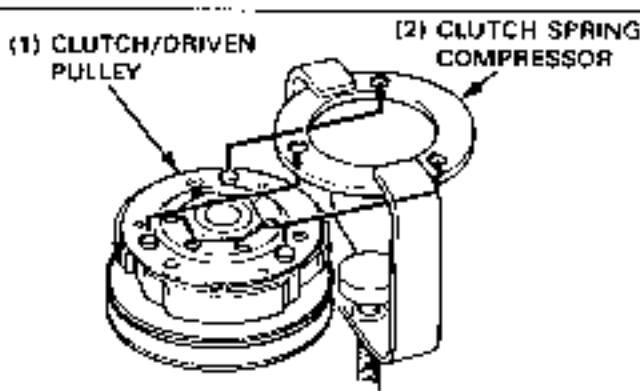


Hold the clutch spring compressor in a vise.  
Remove the 28 mm special nut with the socket wrench.

**Tool:**  
Socket wrench

07GMA - KS40100

Installation is in the reverse order of removal.

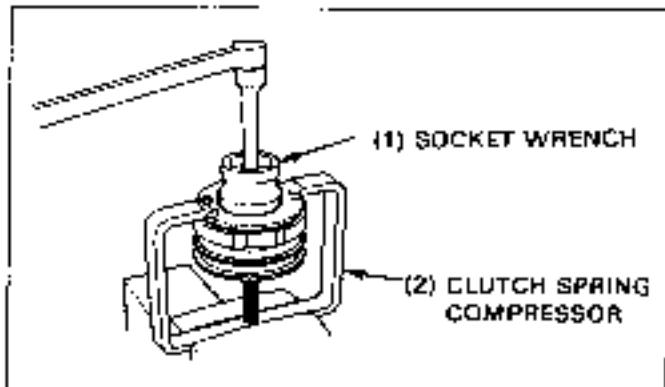

# 9. Final Reduction

<b>Service Information</b>	9-1	<b>Final Reduction Disassembly/Assembly</b>	9-2
<b>Troubleshooting</b>	9-1		

## Service Information

- The final reduction servicing can be performed with the engine installed in the frame. However, it is necessary to remove the engine from the frame and remove the rear brake from the left crankcase to prevent the crankcase from damage when the bearings in the left crankcase are to be replaced.
- When installing the driveshaft, be sure to use the special tool; position the special tool against the bearing inner race and pull the driveshaft into the bearing.

## Troubleshooting

### Engine starts but scooter won't move

- Damaged transmission
- Seized transmission


### Abnormal noise

- Worn, seized or chipped gears
- Worn or damaged bearings

### Oil leaks

- Oil level too high
- Worn or damaged oil seal
- Cracked crankcase

## Final Reduction Disassembly/Assembly

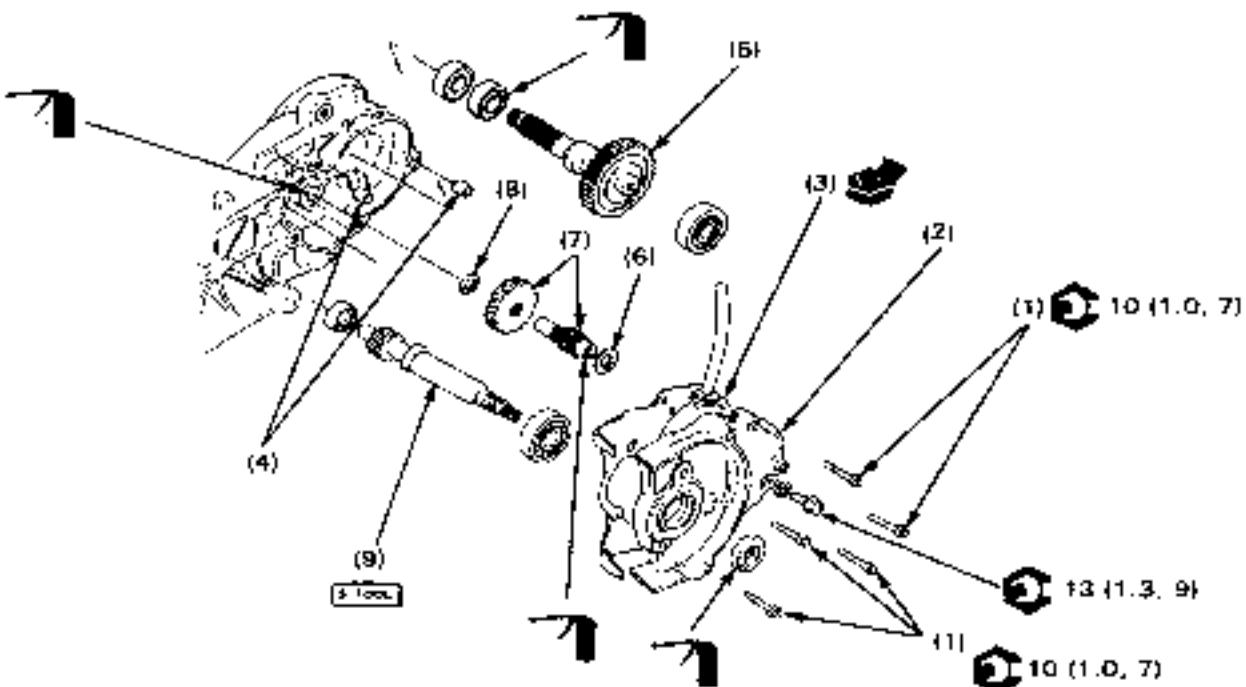

## Requisite Service

- Rear wheel removal/installation (page 12-2)
- Air cleaner case removal/installation (page 5-7)
- Clutch/driven pulley removal/installation (page B-6)

Procedure	Q'ty	Remarks
<b>Disassembly Order</b>		Assembly is in the reverse order of disassembly.
(1) 6 mm bolt	5	
(2) Transmission cover	1	
(3) Gearset	1	
(4) Dowel pin	2	
(5) Final gear shaft	1	
(6) Thrust washer	1	
(7) Countershaft/gear	1/1	
(8) Thrust washer	1	
(9) Drive shaft	1	Replacement (page 9-3)

**Driveshaft Replacement**

Press the driveshaft out of the transmission cover.


**NOTE**

Be careful not to damage the cover mating surface.


**Tool**

Shaft protector

07931-1870000

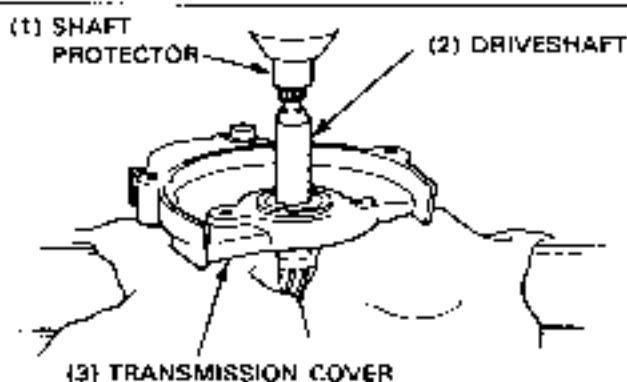

Remove the driveshaft oil seal and bearing from the transmission cover.

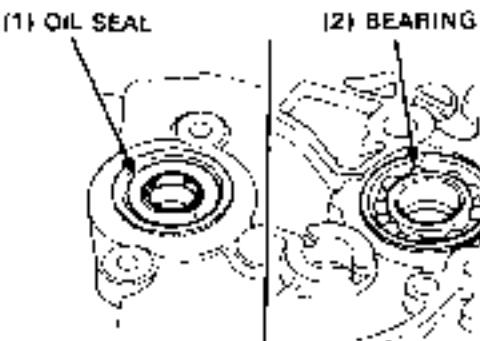

Drive a new bearing into the transmission cover with the marking facing out.

**Tool**

Driver


Attachment, 37 x 40 mm

Pilot, 17 mm

07749-0010000

07748-0010200

07748-0040400

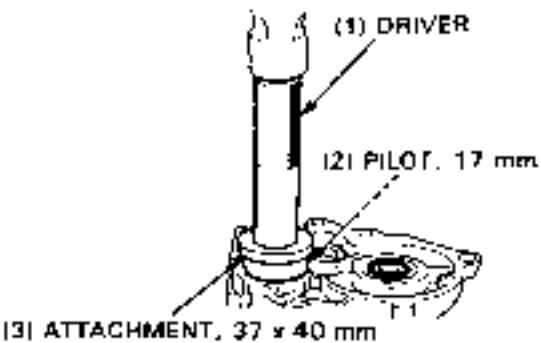

Pull the driveshaft into the bearing in the transmission cover.

**Tool**


Crankcase assembly collar

Crankcase assembly shaft

07985-GM00100

07986-GM00300

Install a new driveshaft oil seal.

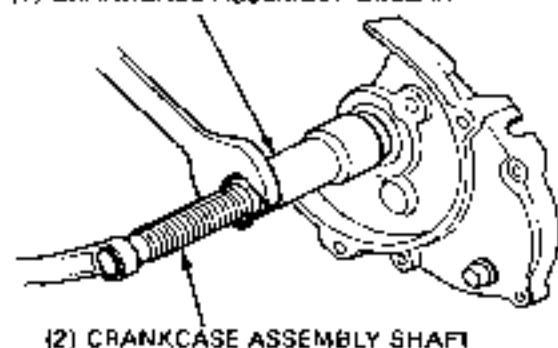**(1) CRANKCASE ASSEMBLY COLLAR**

# 10. Crankcase/Crankshaft

Service Information	10-1	Crankcase Separation/Assembly	10-2
Troubleshooting	10-1		


## Service Information

- This section covers the crankcase separation to service the crankshaft.
- The following parts must be removed before separating the crankcase:
  - Oil pump (page 4-3)
  - Carburetor (page 5-3)
  - Reed valve (page 5-8)
  - Engine (section 6)
  - Cylinder head, cylinder, piston (page 7-2)
  - Drive pulley (page 8-5)
  - Alternator (page 13-8)
  - Starter motor (page 15-4)
- In addition to the parts listed above, remove the following parts when the left crankcase half must be removed:
  - Driven pulley (page 8-6)
  - Final reduction (page 9-2)
  - Rear brake (page 12-3)
- The crankcase separation/assembly and the crankshaft removal/installation require special tools.
- When assembling the crankcases, be sure to use the special tools; position the special tool against the bearing inner race and pull the crankshaft into the bearing in the crankcase. Therefore, if the bearings stay on the crankshaft after removing the crankshaft, remove them and drive new bearings into the crankcases. Also, be sure to install new oil seals.

## Troubleshooting

### Excessive noise

- Worn connecting rod big end bearing
- Worn connecting rod small end bearing
- Worn crankshaft main journal bearing

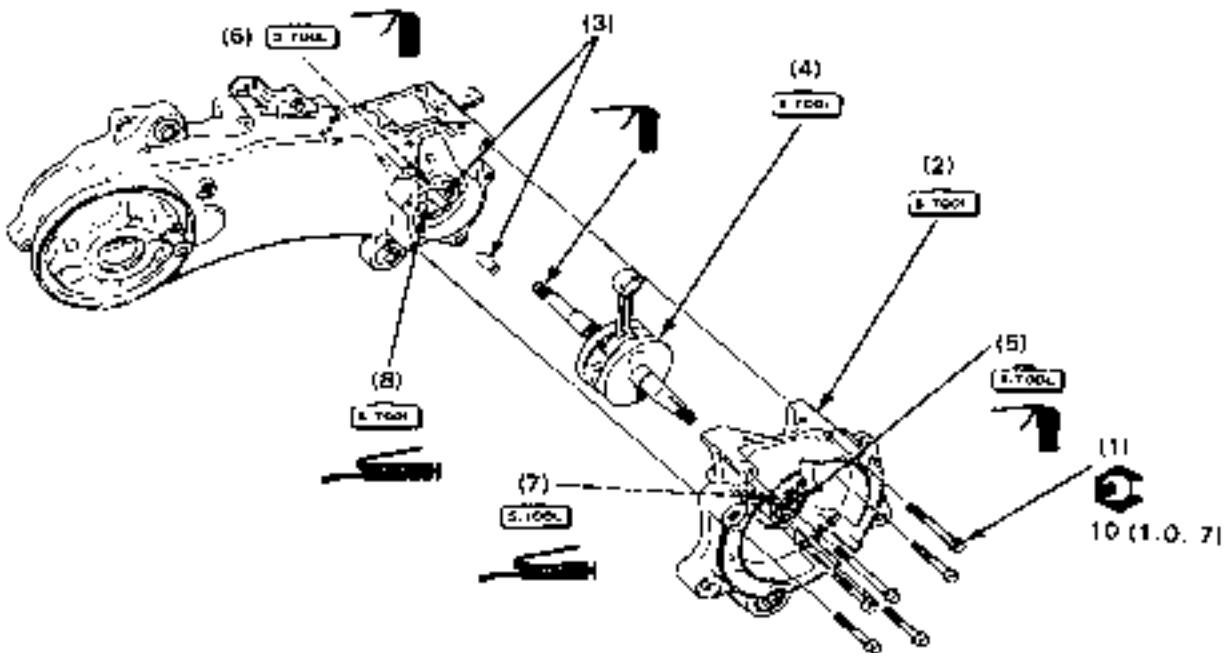**Crankcase Separation/Assembly****Requisite Service**

- Refer to page 10-1 for the parts that must be removed before separating the crankcase.

Procedure	Q'ty	Remarks
<b>Separation Order</b>		
(1) Crankcase bolt	6	
(2) Right crankcase	1	Separation (page 10-3)
(3) Dowel pin	2	
(4) Crankshaft	1	
(5) Right oil seal	1	
(6) Left oil seal	1	Removal (page 10-3)
(7) Right bearing	1	
(8) Left bearing	1	
<b>Assembly Order</b>		
(7) Right bearing	1	
(8) Left bearing	1	Installation (page 10-4)
(4) Crankshaft	1	
(6) Left oil seal	1	
(3) Dowel pin	2	
(2) Right crankcase	1	Assembly (page 10-5)
(5) Right oil seal	1	
(1) Crankcase bot	8	


**Crankcase Separation**

Screw the case puller shaft onto the crankshaft end. Attach the case puller by threading the bolts into the bolt holes of the stator. Separate the crankcase by turning the case puller shaft clockwise.

**Tools**

Case puller  
Shaft protector

07935 - GK80000  
07931 - 1870000

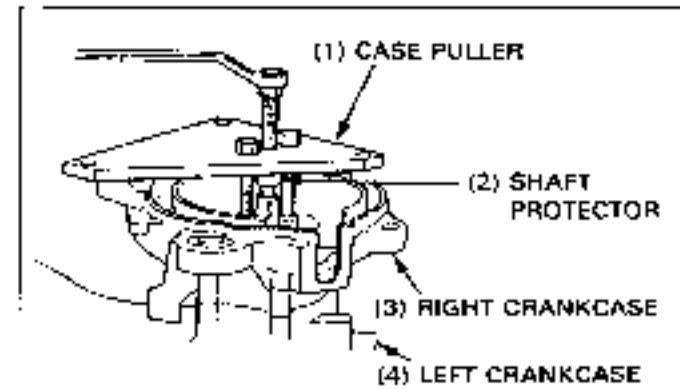**Crankshaft Removal**

Attach the case/driven gear puller on the left crankcase as shown, and remove the crankshaft by turning the puller shaft clockwise.

**Tools**

Case/driven gear puller  
Shaft protector

07935 - KG80000  
07931 - 1870000

**NOTE**

- Do not remove the crankshaft by tapping it.

Remove the right and left oil seals from the crankcases. Remove the right and left bearings from the crankcases.

When the bearing stays on the crankshaft, remove it with the universal bearing puller.



**Tools**

Universal bearing puller  
Shaft protector

07831 - 0010000  
07931 - 1870000

**NOTE**

- Replace the crankshaft bearings and oil seals with new ones when the crankcase is separated.

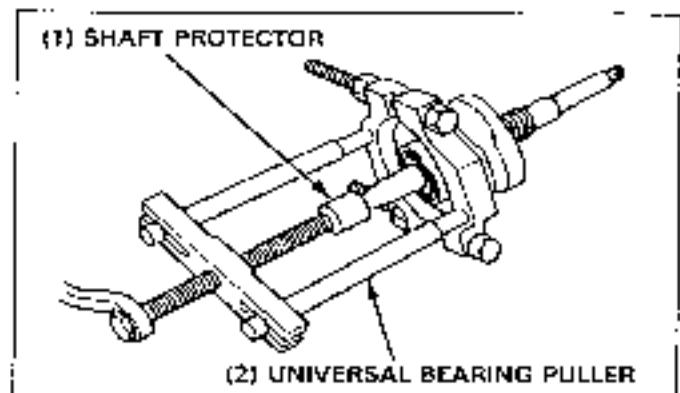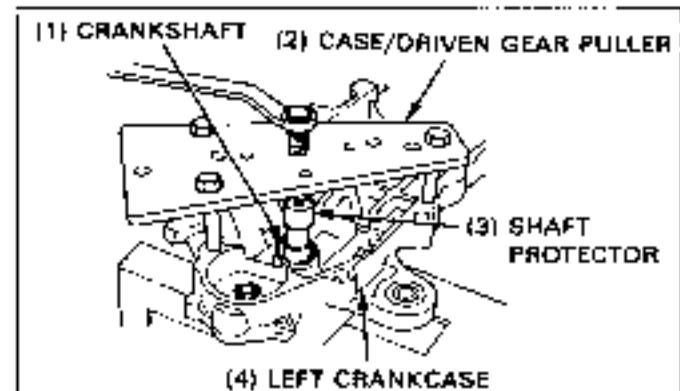**Crankshaft Installation**

Wash the crankcase in solvent and blow dry with compressed air.

Check the crankcases for cracks or other faults.

Apply clean 2-stroke engine oil to all moving and sliding surfaces.

Remove all gasket material from the crankcase mating surfaces.

Dress any roughness or irregularities with an oil stone.


## Crankcase/Crankshaft

Drive a new crankshaft bearing into the right crankcase.



Driver  
Attachment, 52 x 55 mm  
Pilot, 20 mm

07748-0010000  
07746-0010400  
07746-0040500

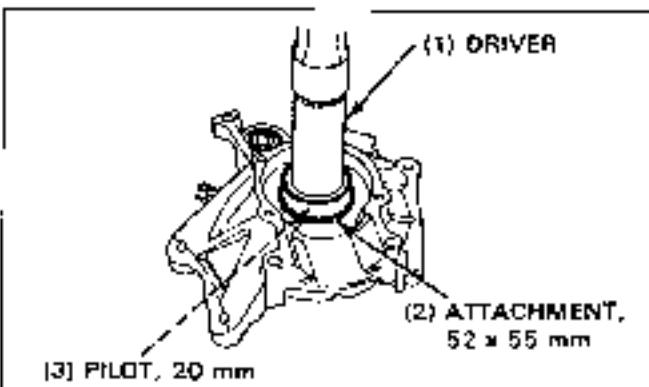


Drive a new crankshaft bearing into the left crankcase.



Driver  
Attachment, 52 x 55 mm  
Pilot, 20 mm

07749-0010000  
07748-0010400  
07746-0040500

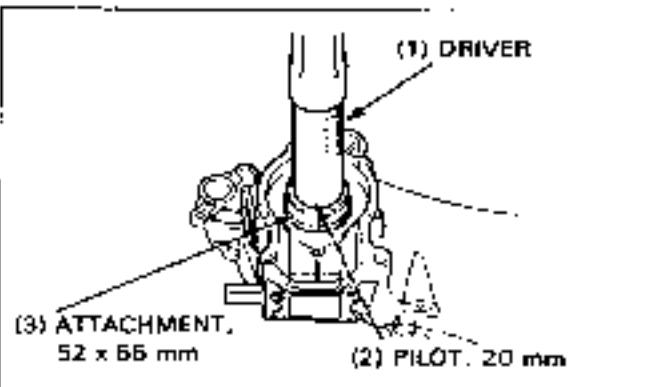

Position the assembly collar against the crankshaft bearing. Thread the assembly shaft onto the crankshaft.

Hold the assembly shaft and turn the nut counterclockwise to draw the crankshaft into the bearing inner race in the left crankcase.




Crankcase assembly collar  
Crankcase assembly shaft


07966-GM00100  
07966-1660200

### CAUTION

- Be careful not to let the connecting rod press against the crankcase mating surface while drawing the crankshaft.

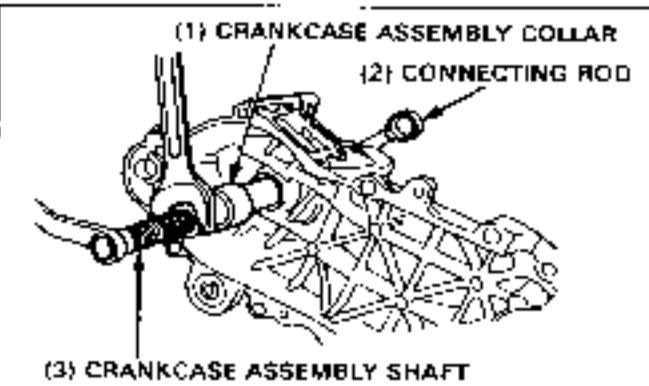

Install a new left crankcase oil seal until it is  $1.0 \pm 0.5$  mm ( $0.04 \pm 0.02$  in) below the surface of the left crankcase as shown.

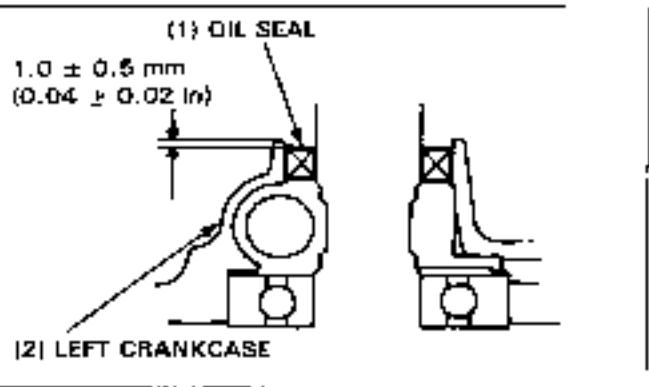

**Crankcase Assembly**

Apply liquid sealant to the crankcase mating surfaces and install the dowel pins.

Install the right crankcase over the left crankcase.

Place the crankcase assembly collar against the bearing inner race in the right crankcase. Thread the assembly shaft onto the crankshaft.

Hold the assembly shaft and turn the nut counterclockwise to draw the crankcase halves together.




Crankcase assembly collar

07985-GM00100

Crankcase assembly shaft

07985-GM00300

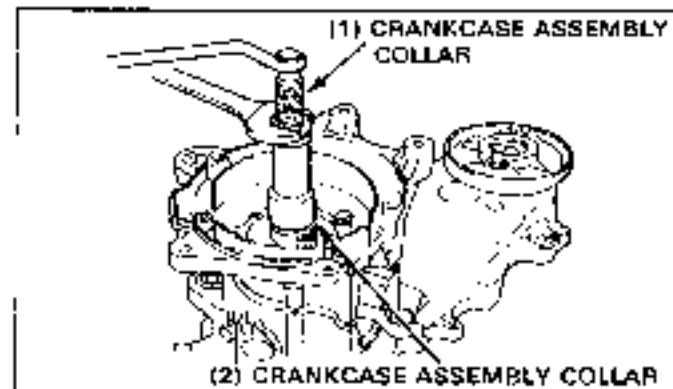

Install a new right crankcase oil seal using the crankcase assembly collar and shaft until it is  $5.0 \pm 0.5$  mm ( $0.20 \pm 0.02$  in) below the surface of the right crankcase as shown.




Crankcase assembly collar

07985-GM00100

Crankcase assembly shaft

07985-GM00300

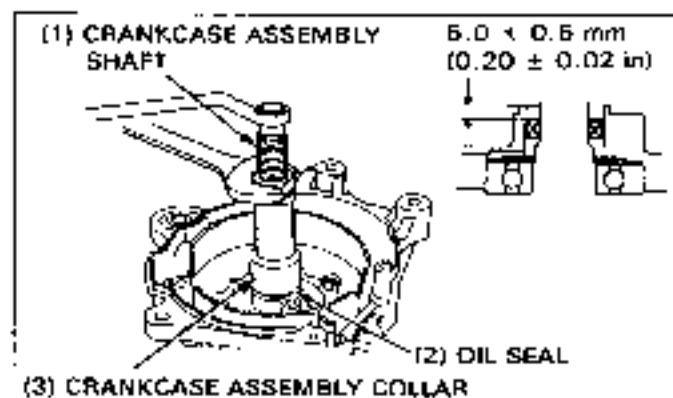

# 11. Front Wheel/Suspension/Steering/Brake

<b>Service Information</b>	11-1	<b>Throttle Housing Removal/Installation</b>	11-6
<b>Troubleshooting</b>	11-1	<b>Handlebar Removal/Installation</b>	11-6
<b>Front Wheel Removal/Installation</b>	11-2	<b>Steering Stem Removal/Installation</b>	11-7
<b>Front Wheel Disassembly/Assembly</b>	11-3	<b>Fork Disassembly/Assembly</b>	11-9
<b>Front Brake Panel Disassembly/ Assembly</b>	11-4		

## Service Information

### **WARNING**

- Inhaled asbestos fibers have been found to cause respiratory disease and cancer. Never use an air hose or dry brush to clean brake assemblies. Use a vacuum cleaner or alternate method to minimize the hazard caused by airborne asbestos fibers.
- A contaminated brake drum or lining reduces stopping power. Discard contaminated linings and clean a contaminated drum with a high quality brake degreasing agent.

- Always check the brake operation before riding the scooter.

## Troubleshooting

### **Hard steering**

- Steering top cone race too tight
- Worn or damaged steering stem bearings
- Worn or damaged steering stem bearing races
- Insufficient tire pressure

### **Stoers to one side or does not track straight**

- Bent fork
- Bent front axle
- Faulty steering stem bearings
- Bent frame
- Worn or damaged wheel bearings

### **Front wheel wobbling**

- Bent rim
- Worn front wheel bearings
- Faulty tire

### **Wheel turns hard**

- Misadjusted brake
- Faulty wheel bearings

### **Soft suspension**

- Weak fork springs

### **Front suspension noise**

- Fork spring binding
- Loose fork fasteners

### **Poor brake performance**

- Improperly adjusted brake
- Worn brake linings
- Worn brake drum
- Worn brake cam
- Improperly installed brake linings
- Brake cable sticking/needs lubrication
- Contaminated brake linings
- Contaminated brake drum
- Worn brake shoes at cam contact areas
- Improper engagement between brake arm and cam serrations


### **Brake lever hard or slow to return**

- Worn/broken return spring
- Improperly adjusted brake
- Sticking brake drum due to contamination
- Worn brake shoes at cam contact areas
- Brake cable sticking/needs lubrication
- Worn brake cam
- Improperly installed brake linings

### **Brake squeaks**

- Worn brake linings
- Worn brake drum
- Contaminated brake linings
- Contaminated brake drum

## Front Wheel Removal/Installation

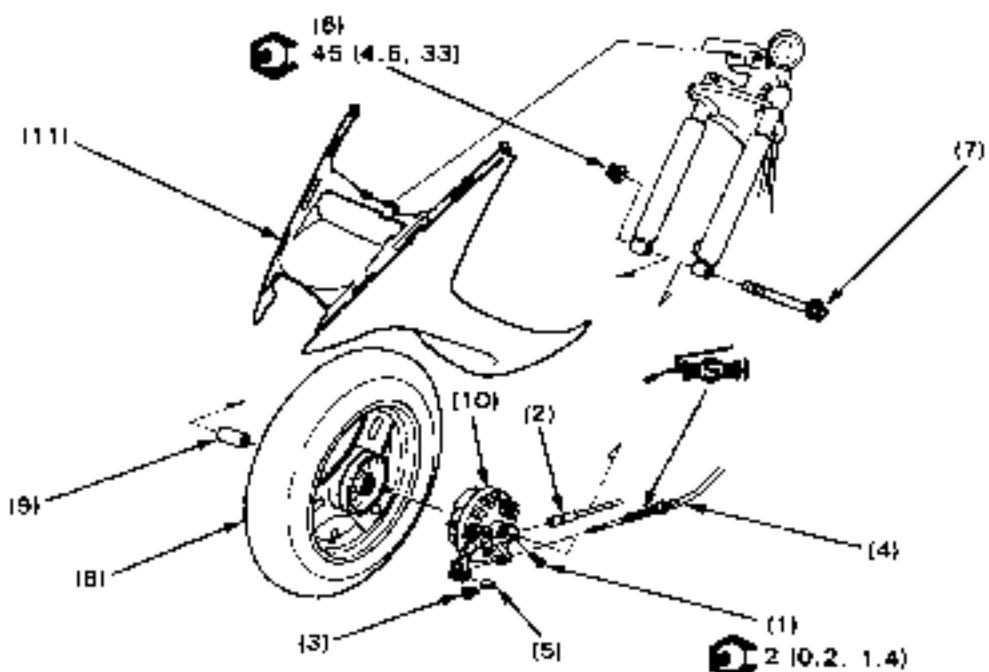**NOTE**

- After installing the front wheel, adjust the front brake.

**Requisite Service**


When removing the front fender:

- Front inner cover (page 2-6)

- Side cover removal/installation (page 2-3)

Procedure	Qty	Remarks
Removal Order		Installation is in the reverse order of removal.
(1) Speedometer cable set screw	1	
(2) Speedometer cable	1	
(3) Front brake adjusting nut	1	
(4) Front brake cable	1	
(5) Brake arm joint	1	
(6) Front axle nut	1	
(7) Front axle	1	
(8) Front wheel	1	Disassembly/Assembly (page 11-3)
(9) Side collar	1	
(10) Front brake panel	1	Disassembly/assembly (page 11-4)
(11) Front fender	1	


## Front Wheel Disassembly/Assembly

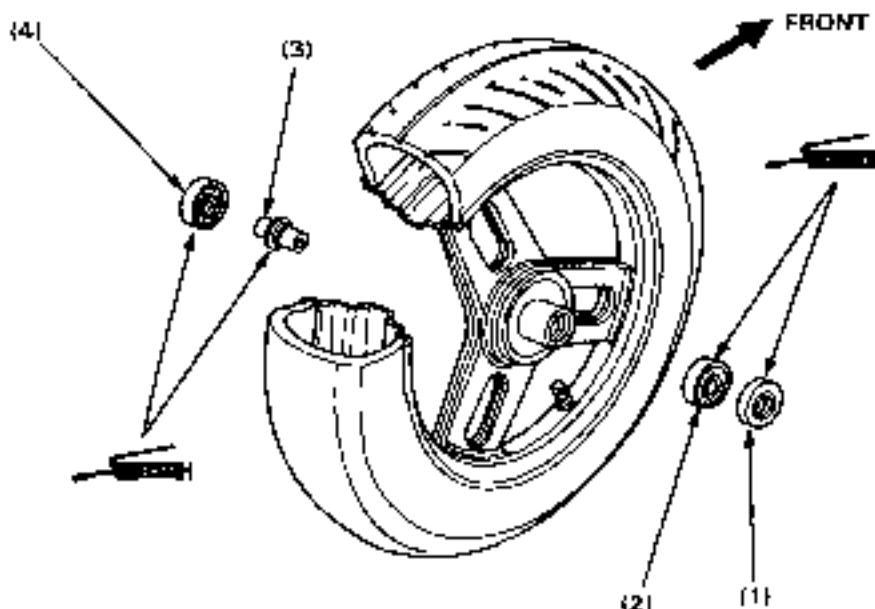

### Requisite Service

- Front wheel removal/installation (page 11-2)


Procedure	Q'ty	Remarks
<b>Disassembly Order</b>		Assembly is in the reverse order of disassembly.
(1) Dust seal	1	
(2) Right wheel bearing (8200U)	1	
(3) Distance collar	1	
(4) Left wheel bearing (8200U)	1	

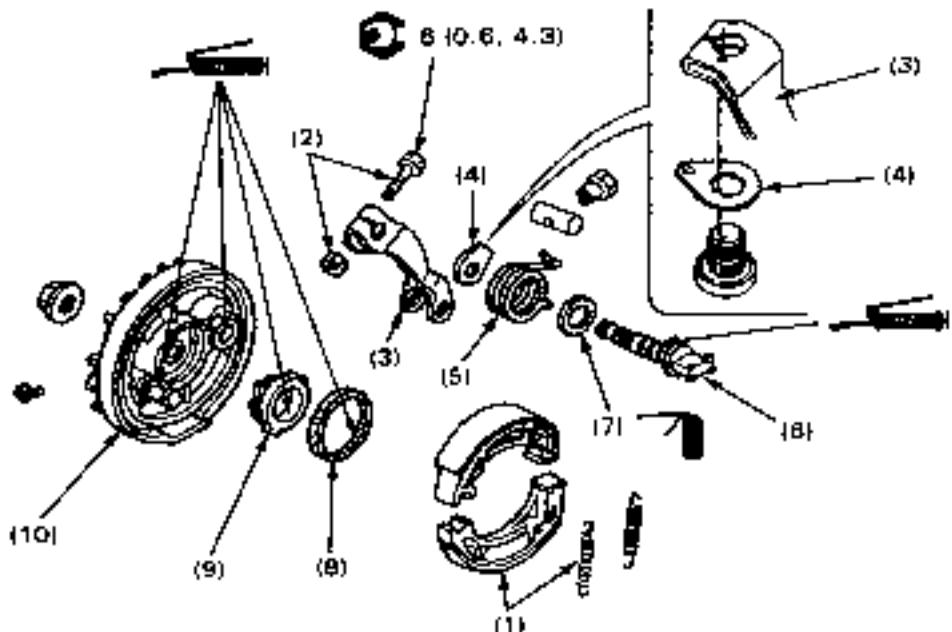**Front Brake Panel Disassembly/Assembly****Requisite Service**

- Front wheel removal/installation (page 11-2)

Procedure	Q'ty	Remarks
<b>Disassembly Order</b>		
(1) Brake shoe/shoe spring	2/2	
(2) Brake arm bolt/nut	1/1	
(3) Brake arm	1	When installing, align the punch mark on the arm with the index mark on the brake cam.
(4) Wear indicator	1	
(5) Return spring	1	
(6) Brake cam	1	
(7) Felt seal	1	
(8) Dust seal	1	
(9) Speedometer drive gear	1	
(10) Brake panel	1	

## Throttle Housing Removal/Installation

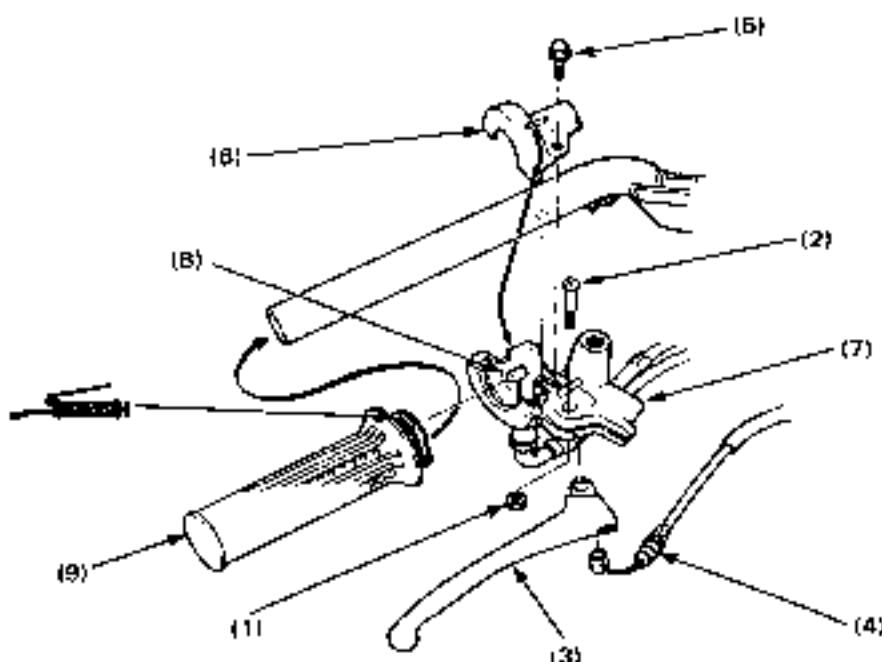


### Requisite Service

- Handle cover removal/installation (page 2-7)

Procedure	O'ty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
Front brake lever		
(1) Nut	1	
(2) Front brake lever pivot screw	1	
(3) Front brake lever	1	
(4) Front brake cable	1	
Throttle housing		
(5) Bolt	1	
(6) Upper throttle housing	1	When installing, hook the slot in the upper housing to the tab of the lower housing.
(7) Lower throttle housing	1	When installing, align the boss on the housing with the hole in the handlebar.
(8) Throttle cable	1	
(9) Throttle grip	1	

## Handlebar Removal/Installation

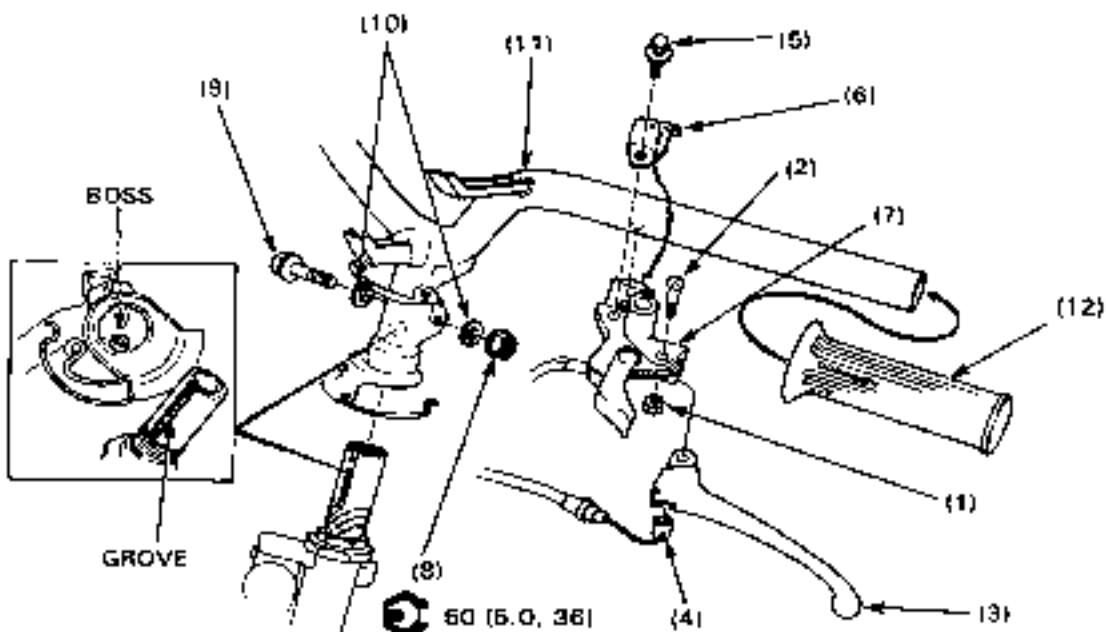


### Requisite Service

- Throttle housing removal/installation (page 11-5)

Procedure		Qty	Remarks
(1)	Remove Order Rear brake lever Nut	1	Installation is in the reverse order of removal.
(2)	Rear brake lever pivot screw	1	
(3)	Rear brake lever	1	
(4)	Rear brake cable	1	
(5)	Rear brake lever bracket Bolt	1	
(6)	Lever bracket band	1	When installing, hook the slot in the band to the tab of the lever bracket.
(7)	Rear brake lever bracket	1	When installing, align the boss on the bracket with the hole in the handlebar.
(8)	Nut	1	
(9)	Handlebar pinch bolt	1	
(10)	Washer	2	
(11)	Handlebar	1	When installing, align the boss of the handlebar with the groove in the steering stem.
(12)	Handle grip	1	

## Steering Stem Removal/Installation

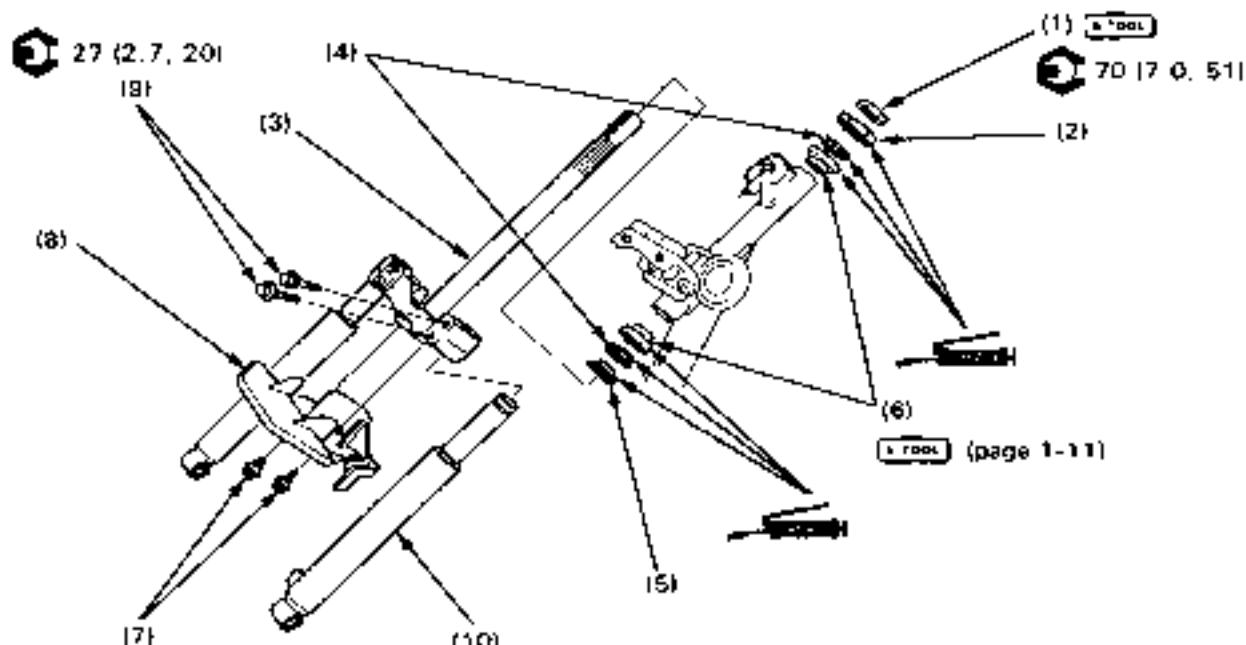

### Requisite Service

• Front wheel removal/installation (page 11-2)

• Handlebar removal/installation (page 11-6)

Procedure	Qty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
<b>Steering stem</b>	1	Installation (page 11-8)
(1) Steering stem lock nut	1	
(2) Top cone race	1	
(3) Steering stem	1	
<b>Steering stem bearings/races</b>		
(4) Steering stem bearing	2	
(5) Bottom cone race	1	
(6) Ball race	2	
<b>Front inner fender</b>		
(7) Attaching bolt	2	
(8) Front inner fender	1	
<b>Fork</b>		
(9) Fork pinch bolt	4	NOTE - The upper pinch bolts are the locating bolts. Disassembly/Assembly (page 11-9)
(10) Fork	2	

**Top Cone Race/Stem Lock Nut Installation**

Install the top cone race and hand-tighten it.

Rotate the steering stem lock-to-lock several times to seat the bearings.

Make sure that the steering stem rotates smoothly without vertical play.

Hold the top cone race and tighten the steering stem lock nut.

Torque: 70 N·m (7.0 kg-m, 51 ft-lb)


[17mm]

Lock nut wrench A


07918-KM10000

Lock nut wrench B

07918-1870100

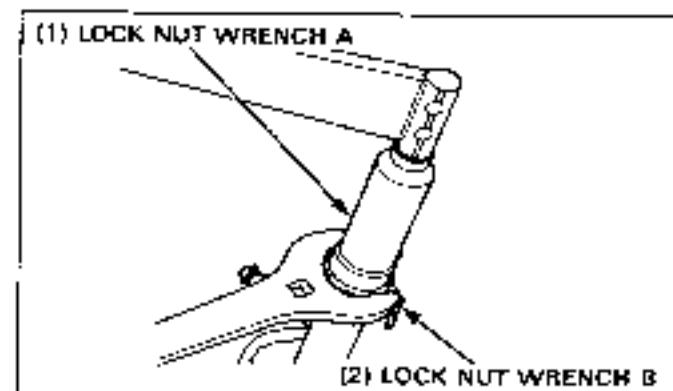

## Fork Disassembly/Assembly

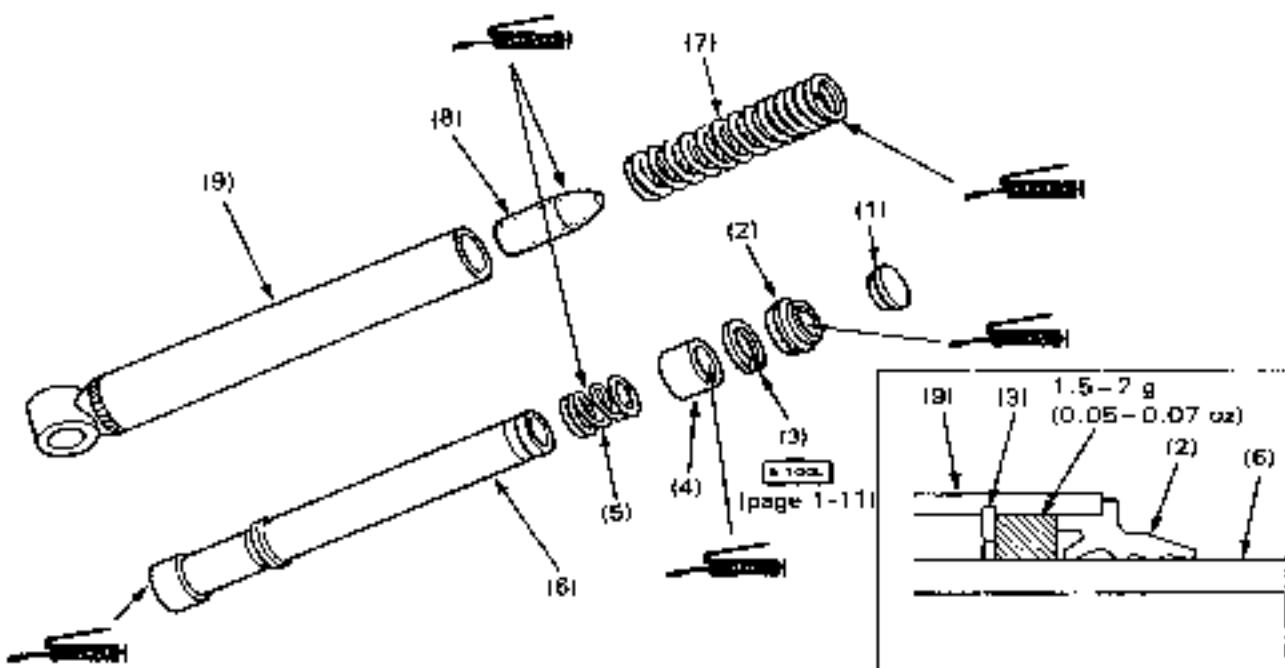

### Requisite Service

- Fork removal/installation (page 11-7)

Procedure		Q'ty	Remarks
<b>Disassembly Order</b>			Assembly is in the reverse order of disassembly.
(1)	Fork tube cap	1	
(2)	Dust seal	1	
(3)	Snap ring	1	<b>NOTE</b> - After installation, pack 1.5-2 g (0.05-0.07 oz) of grease between the bottom case and fork tube as shown.
(4)	Bushing	1	
(5)	Rebound spring	1	
(6)	Fork tube	1	
(7)	Fork spring	1	
(8)	Stopper rubber	1	
(9)	Bottom case	1	

# 12. Rear Wheel/Suspension/Brake

Service Information	12-1	Rear Brake Disassembly/Assembly	12-3
Troubleshooting	12-1	Shock Absorber Removal/Installation	12-4
Rear Wheel Removal/Installation	12-2		

## Service Information

### **WARNING**

- Inhaled asbestos fibers have been found to cause respiratory disease and cancer. Never use an air hose or dry brush to clean brake assemblies. Use a vacuum cleaner or alternate method to minimize the hazard caused by airborne asbestos fibers.
- A contaminated brake drum or lining reduces stopping power. Discard contaminated linings and clean a contaminated drum with a high quality brake degreasing agent.

- Always check the brake operation before riding the scooter.

## Troubleshooting

### Rear wheel wobbling

- Bent rim
- Axle nut not tightened properly
- Faulty tire
- Insufficient tire pressure

### Wheel turns hard

- Misadjusted brake
- Faulty wheel bearings

### Soft suspension

- Worn shock absorber spring
- Oil leakage from damper unit

### Hard suspension

- Bent damper rod

### Rear suspension noise

- Shock absorber spring binding

### Poor brake performance


- Improperly adjusted brake
- Worn brake linings
- Worn brake drum
- Worn brake cam
- Improperly installed brake linings
- Brake cable sticking/needs lubrication
- Contaminated brake linings
- Contaminated brake drum
- Worn brake shoes at cam contact areas
- Improper engagement between brake arm and cam serrations

### Brake lever hard or slow to return

- Worn/broken return spring
- Improperly adjusted brake
- Sticking brake drum due to contamination
- Worn brake shoes at cam contact areas
- Brake cable sticking/needs lubrication
- Worn brake cam
- Improperly installed brake linings

### Brake squeak


- Worn brake linings
- Worn brake drum
- Contaminated brake linings
- Contaminated brake drum

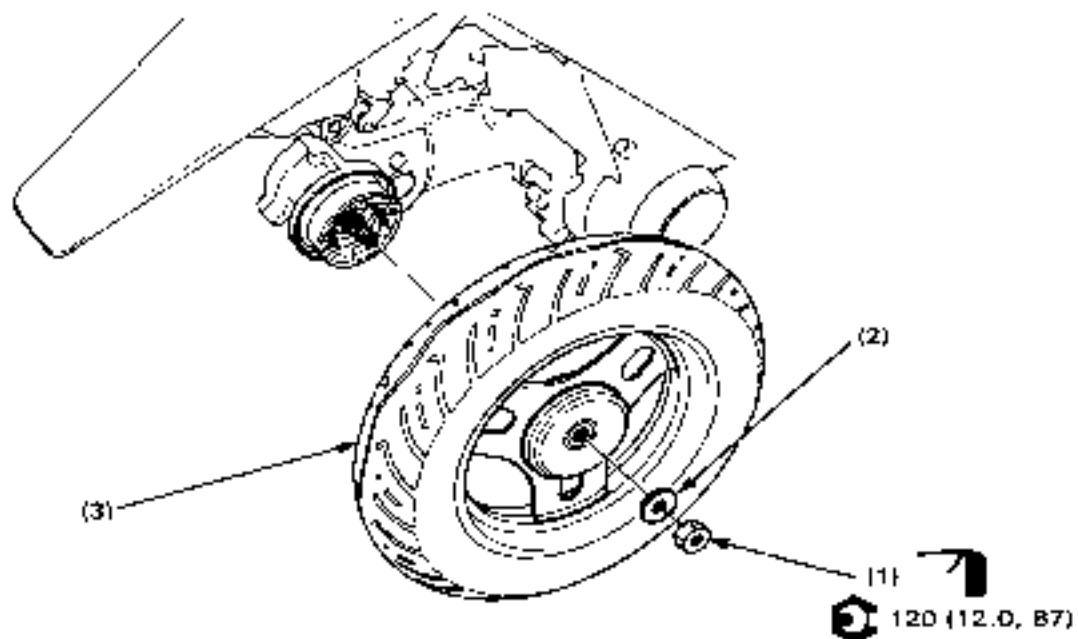**Rear Wheel Removal/Installation****Requisite Service**

- Muffler removal/installation (page 2-8)

Procedure	Q'ty	Remarks
<b>Removal Order</b>		
[1] Rear axle nut	1	
[2] Washer	1	
[3] Rear wheel	1	
Installation is in the reverse order of removal.		

## Rear Brake Disassembly/Assembly

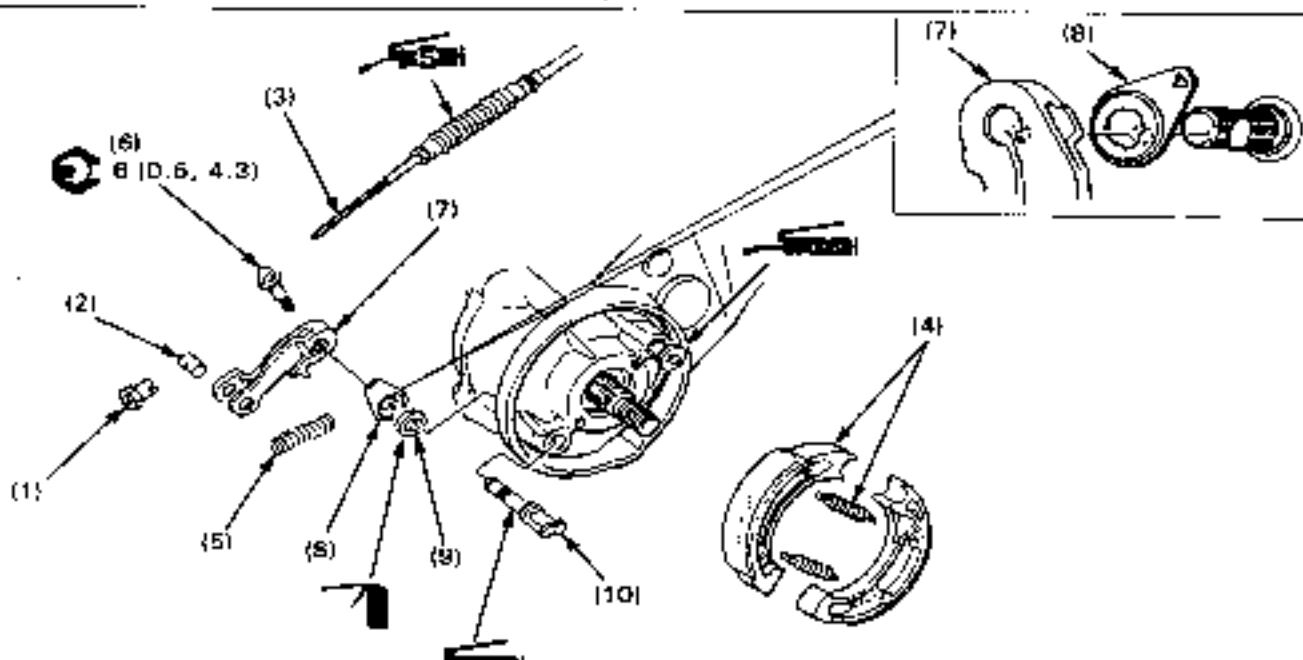

### NOTE


- After installing the rear wheel, adjust the rear brake.

### Requisite Service

- Rear wheel removal/installation (page 12-2)

Procedure	Q'ty	Remarks
<b>Disassembly Order</b>		
(1) Rear brake adjusting nut	1	Assembly is in the reverse order of disassembly.
(2) Rear brake cable	1	
(3) Brake arm point	1	
(4) Brake shoe/shoe spring	2/2	
(5) Return spring	1	
(6) Brake arm bolt	1	
(7) Brake arm	1	When installing, align the punch mark with the wide groove in the brake cam.
(8) Wear indicator	1	
(9) Felt seal	1	
(10) Brake cam	1	

## Shock Absorber Removal/Installation

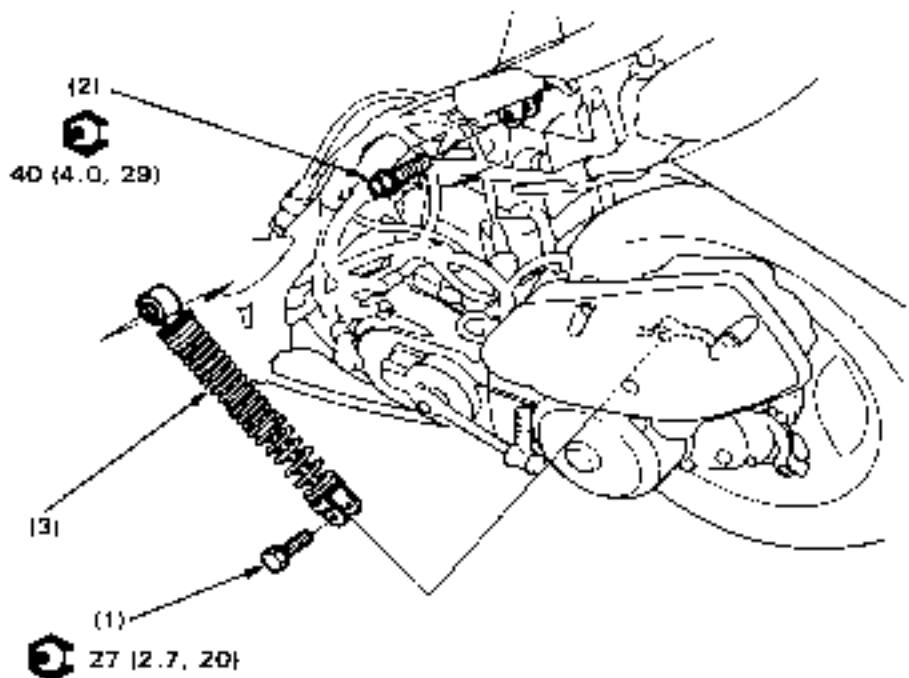**NOTE**

- Do not attempt to disassemble the shock absorber. Replace it as an assembly.

**Requisite Service**

- Frame body cover removal/installation (page 2-3)

	Procedure	Q'ty	Remarks
(1)	<b>Removal Order</b>		
(1)	Lower mounting bolt	1	
(2)	Upper mounting bolt	1	
(3)	Shock absorber	1	Installation is in the reverse order of removal.

# 13. Charging System/Alternator

Service Information	13-1	Lighting Voltage Inspection	13-8
System Location	13-2	Regulator/Rectifier Inspection	13-6
Troubleshooting	13-3	Alternator Removal/Installation	13-8
Battery Removal/Installation	13-4	Alternator Inspection	13-9
Charging System Inspection	13-5	Resistor Inspection	13-9

## Service Information

- The battery gives off explosive gases; keep sparks, flames, and cigarettes away. Provide adequate ventilation when charging or using the battery in an enclosed space.
  - The battery contains sulfuric acid (electrolyte). Contact with skin or eyes may cause severe burns. Wear protective clothing and a face shield.
    - If electrolyte gets on your skin, flush with water.
    - If electrolyte gets in your eyes, flush with water for at least 15 minutes and call a physician immediately.
  - Electrolyte is poisonous. If swallowed, drink large quantities of water or milk and follow with milk of magnesia or vegetable oil and call a physician.
  - KEEP OUT OF REACH OF CHILDREN.**
- Always turn off the ignition switch before disconnecting any electrical component.

### CAUTION

- Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch is ON and current is present.

- For extended storage, remove the battery, give it a full charge, and store it in a cool, dry place.
- For battery remaining in a stored scooter, disconnect the negative battery cable from the battery terminal.

### NOTE



- The maintenance free battery must be replaced when it reaches the end of its service life.

### CAUTION

- The battery caps should not be removed. Attempting to remove the sealing caps from the cells may damage the battery.

- Battery can be damaged if overcharged or undercharged, or if left to discharge for long periods. These same conditions contribute to shortening the "life span" of the battery. Even under normal use, the performance of battery deteriorates after 2-3 years.
- Battery voltage may recover after battery charging, but under heavy load, battery voltage will drop quickly and eventually die out. For this reason, the charging system is often suspected to be the problem. Battery overcharge often results from problems in the battery itself, which may appear to be an overcharge symptom. If one of the battery cells is shorted and battery voltage does not increase, the regulator/rectifier supplies excess voltage to the battery. Under these conditions, the electrolyte level goes down quickly.
- Before troubleshooting the charging system, check for proper use and maintenance of the battery. Check if the battery is frequently under heavy load.
- The battery will self-discharge when the scooter is not in use. For this reason, charge the battery every two weeks to prevent sulfation from forming.
- Filling a new battery with electrolyte will produce some voltage, but in order to achieve its maximum performance, always charge the battery. Also, the battery life is lengthened when it is initial-charged.
- When checking the charging system, always follow the steps in the troubleshooting flow chart (page 13-3).
- For battery testing/charging, refer to section 22 of the Common Service Manual.
- For charging system location, see page 13-2.

## System Location

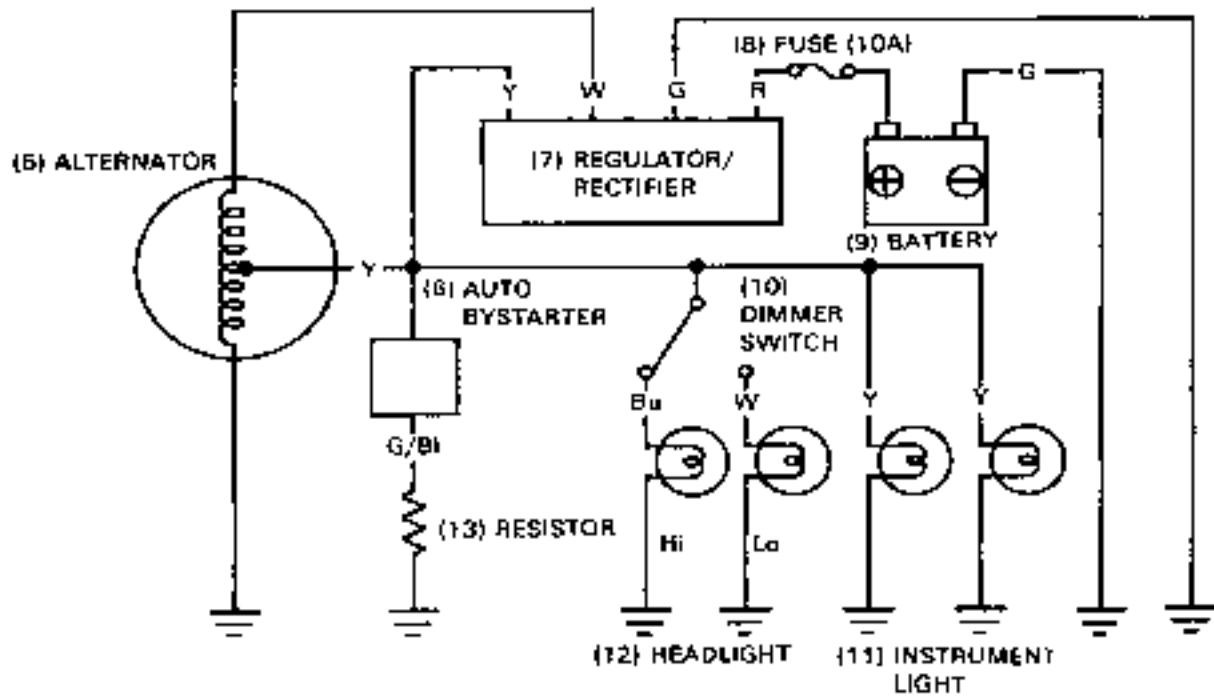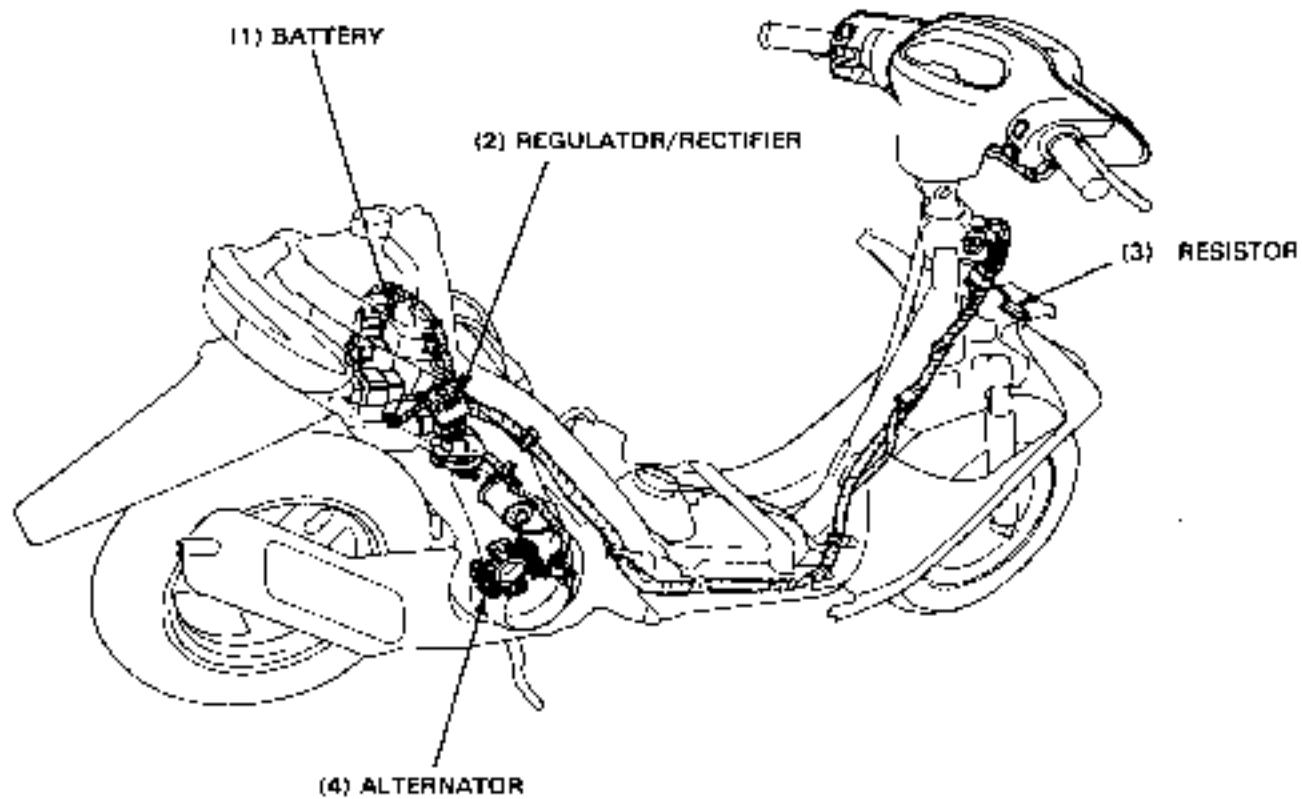

## Troubleshooting


### Battery Overcharging

- Faulty regulator/rectifier
- Broken regulator/rectifier ground wire or faulty connection.


### Battery undercharging

#### NOTE

- In order to obtain accurate test readings for charging system, the battery must be fully charged and in good condition.
- See Common Service Manual section 22 for check the battery condition.

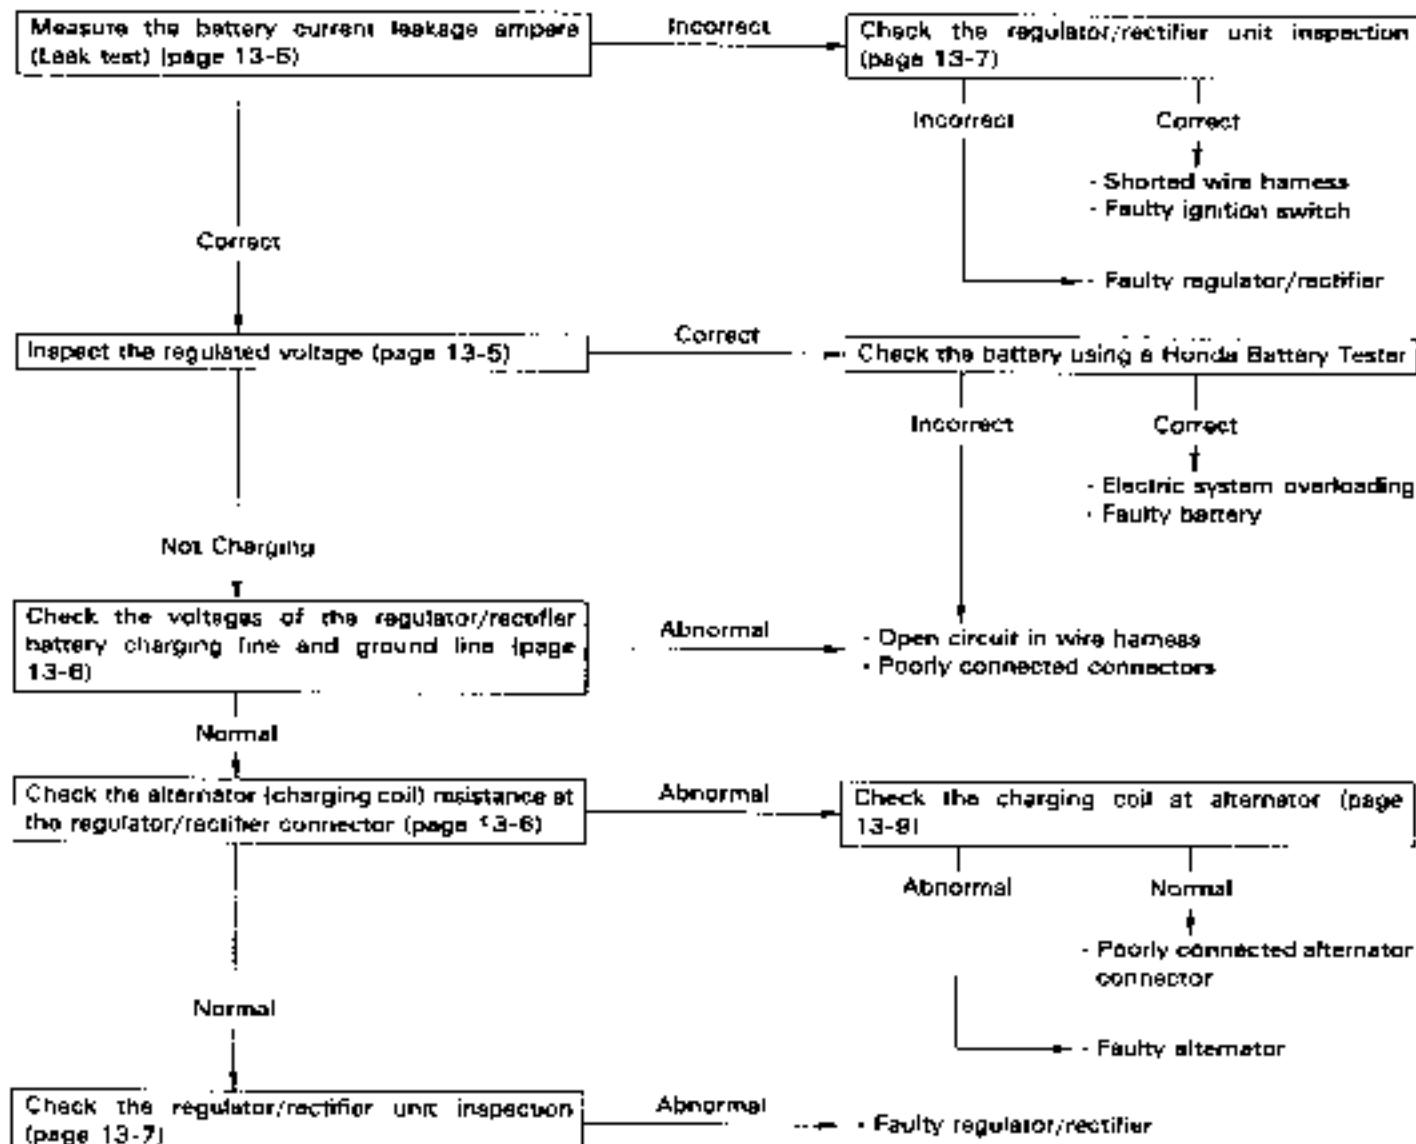

## Battery Removal/Installation

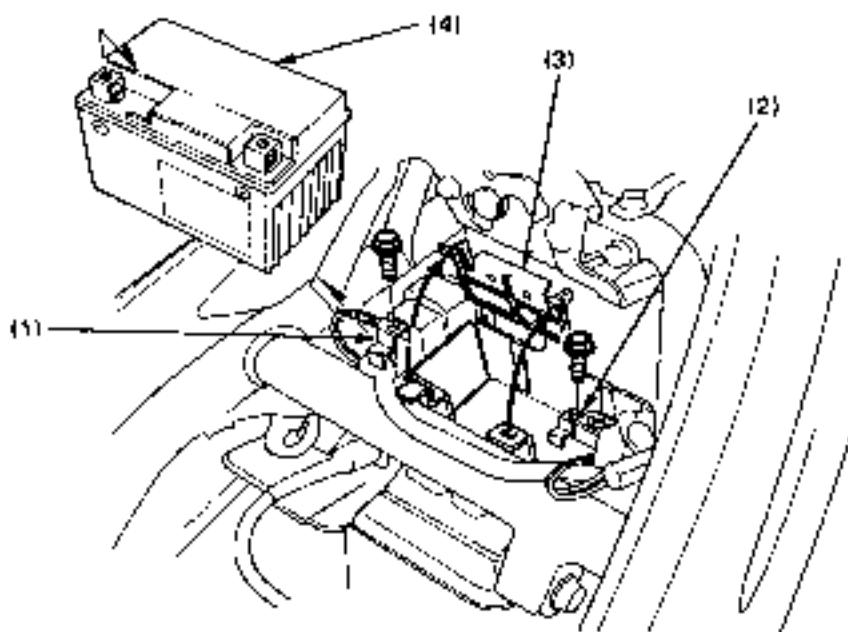

### Requisite Service

- Luggage box removal/installation (page 2-4)

	Procedure	Q'ty	Remarks
(1)	<b>Removal Order</b> Battery negative (-) wire terminal	1	Installation is in the reverse order of removal. <b>CAUTION</b> With the ignition switch OFF, remove the negative (-) terminal first, then the positive (+) terminal.
(2)	Battery positive (+) wire terminal	1	<b>CAUTION</b> When installing, install the positive (+) terminal first, then the negative (-) terminal.
(3)	Battery holder	1	
(4)	Battery	1	

## Charging System Inspection

### Leak Test

Remove the battery cover (page 2-4).


Turn the ignition switch off and disconnect the ground (-) wire from the battery.

Connect the ammeter (+) probe to the ground wire and the ammeter (-) probe to the battery (-) terminal.

With the ignition switch off, check for current leakage.

#### NOTE

- When measuring current using a tester, set it to a high range, and then bring the range down to an appropriate level. Current flow larger than the range selected may blow out the fuse in the tester.
- While measuring current, do not turn the ignition on. A sudden surge of current may blow out the fuse in the tester.

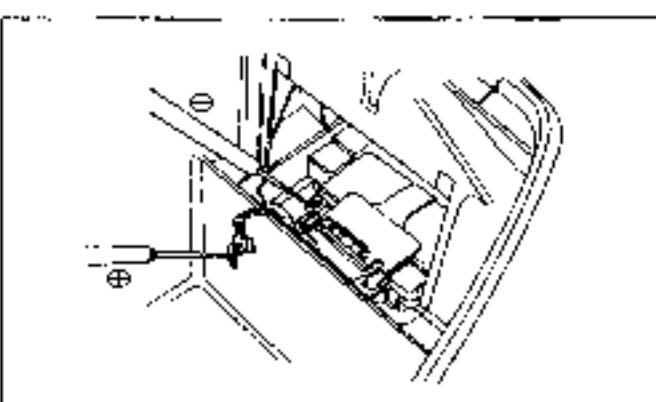

**Specified Current Leakage: 1 mA max.**

If current leakage exceeds the specified value, a shorted circuit is likely.

Locate the short by disconnecting connections one by one and measuring the current.

### Regulated Voltage/Ampere Inspection

#### NOTE

- Before performing this test, be sure that the battery is fully charged and that the voltage between its terminals is greater than 13.0 V.

Start the engine and warm it up to operating temperature, then turn the ignition switch OFF.

- If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area.
- The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and lead to death.

Remove the battery cover (page 2-4).

Connect the tachometer.

Connect a multimeter between the battery terminals.


**[]**

Digital Multimeter

07411-0020000

Open the fuse holder and remove the fuse.

Connect the ammeter between the fuse terminals as shown.

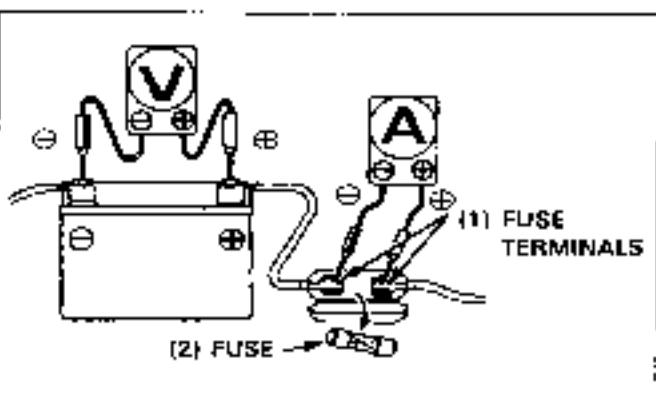

### CAUTION

- Be careful not to short any tester probes.
- Although the current could be measured when the ammeter is connected between the battery positive terminal and the positive cable, a sudden surge of current to the starter motor could damage the ammeter.
- Always turn the ignition off when conducting the test. Disconnecting the ammeter or wires when current is flowing may damage the ammeter.

Start the engine and increase the engine speed gradually.

Regulated voltage: 14.0–15.0 V/5,000 min<sup>-1</sup> (rpm)

Charging current: 0–0.5 A/5,000 min<sup>-1</sup> (rpm)

## Lighting Voltage Inspection

### CAUTION

- Failure to measure the lighting voltage may lead to electrical damage of lighting components.

Remove the handle front cover (page 2-7).

Connect the tachometer.

Start the engine and turn the headlight dimmer switch to "HI" position.

With the headlight connector connected, connect the ammeter  $\oplus$  probe to the blue wire terminal, and  $\ominus$  probe to the green wire terminal.

### NOTE

- Select the AC range on the multimeter

Gradually increase the engine speed and read the lighting regulated voltage.

Regulated voltage: 12.8–13.8 V/5,000 min<sup>-1</sup> (rpm)


## Regulator/Rectifier

### Wire Harness Inspection

### NOTE

- If the engine has been running, after stopping the engine, wait for 10 minutes or more and perform the inspection.

Disconnect the regulator/rectifier connector and check the connector for loose or corroded terminals.

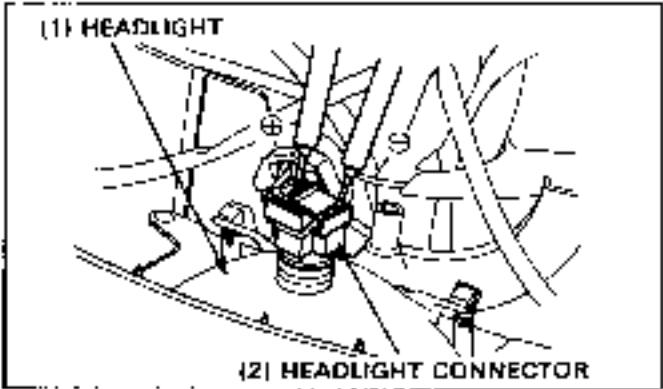

Measure the following between connector terminals of the wire harness side.

Item	Terminals	Specification
Battery charging line	Red (+) and ground	Battery voltage should be measured
Ground line	Green and ground	Continuity
Charging line	White and ground	0.4~1.0 Ω (20°C/68°F)
Lighting line	Yellow and ground	0.2~0.8 Ω (20°C/68°F)

\* Disconnect the auto bypasser connector, taillight yellow connector and 9P connector located at the steering head and measure.

### Unit inspection

Provided the circuit on the wire harness side are normal and there are no loose connections at the connector, inspect the regulator/rectifier unit by measuring the resistance between the terminals.

Unit: Ω

① Probe	A	L	B	E
② Probe				
A		∞	3~50	∞
L	∞		∞	5~100
B	∞	∞		∞
E	∞	5~100	∞	

### NOTE

- You'll get false readings if the probes touch your fingers.
- Use the specified multimeters. Using other equipment may not allow you to obtain the correct results. This is due to the characteristic of semiconductors, which have different resistance values depending on the applied voltage.

### Specific Multimeter:

- 07411-0020000 (KOWA Digital type)
- 07308-0020001 (SANWA Analogue type)
- TH-5H (KOWA Analogue type)



- Select the following range:

SANWA: kΩ  
KOWA: ×100


- An old battery stored in the multimeter could cause inaccurate readings. Check the battery if the multimeter registers incorrectly.

- When using the KOWA multimeter, remember that all readings should be multiplied by 100.

Replace the regulator/rectifier unit if the resistance value between the terminals is abnormal.

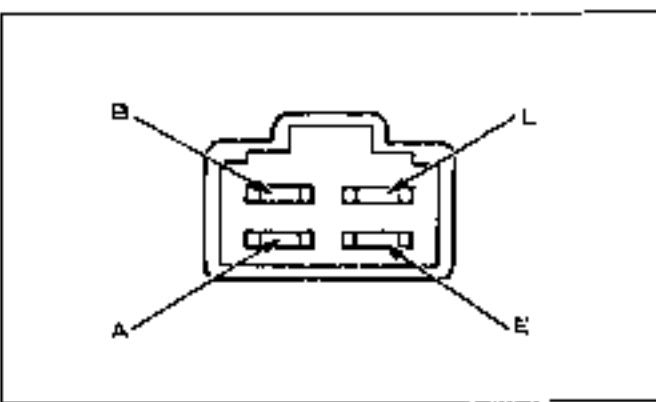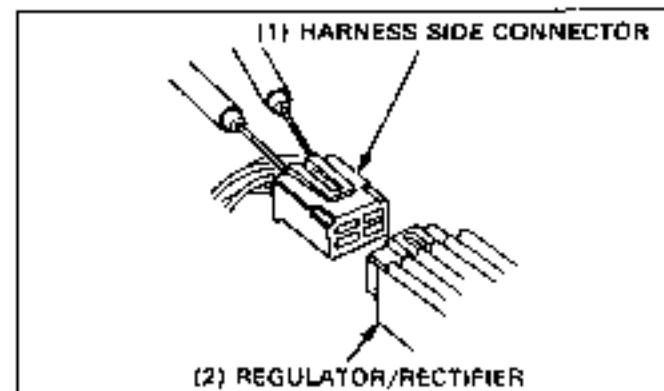

## Alternator Removal/Installation

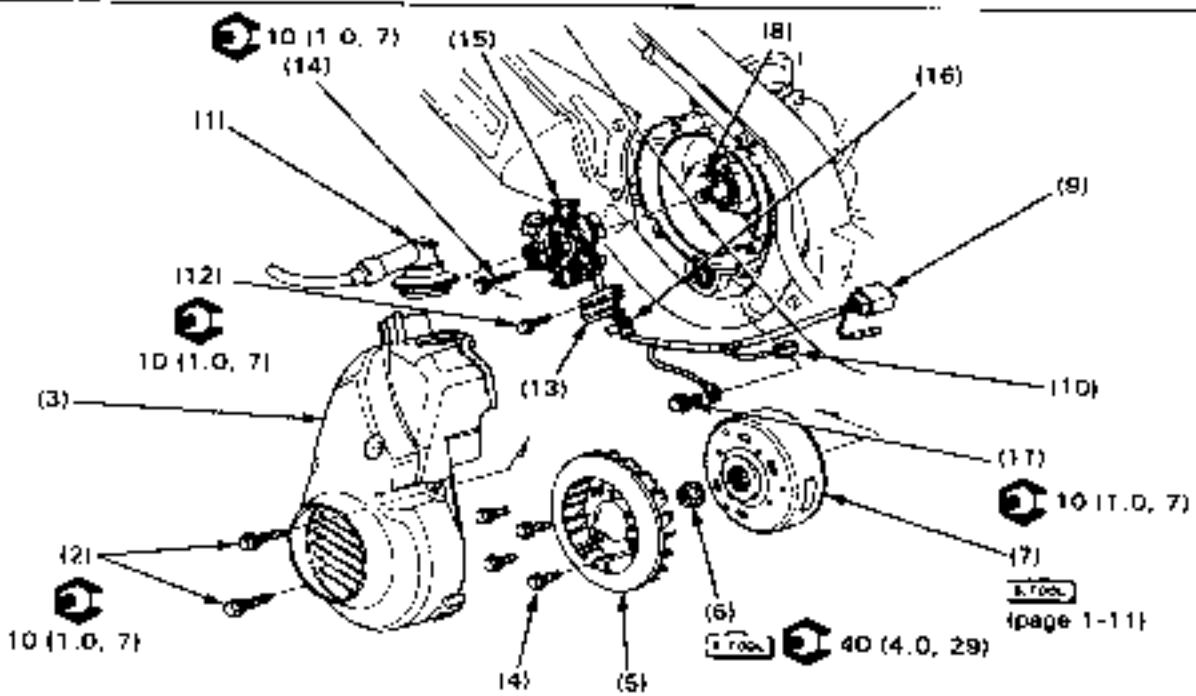

## Requisite Service

- Frame body cover removal/installation (page 2-3)

Procedure	Qty	Remarks
<b>Removal Order</b>		
(1) Spark plug cap	1	
(2) Bolt	2	
(3) Fan cover	1	
(4) Bolt	4	
(5) Cooling fan	1	
(6) Flywheel nut	1	
(7) Flywheel	1	
(8) Woodruff key	1	
(9) Alternator wire connector	2	
(10) Starter motor connector	1	
(11) Starter motor lower mounting bolt	1	
(12) Pulse generator bolt	2	
(13) Pulse generator	1	
(14) Stator bolt	2	
(15) Stator	1	
(16) Grommet	1	
Installation is in the reverse order of removal.		
Removal/Installation (page 13-9)		
Remove the starter motor ground wire.		

**Flywheel Nut Removal/Installation**

Hold the flywheel with the universal holder and remove the flywheel nut.




**Universal holder**

**D7725-0030000**

Install the nut in the reverse order of removal.

(1) FLYWHEEL NUT

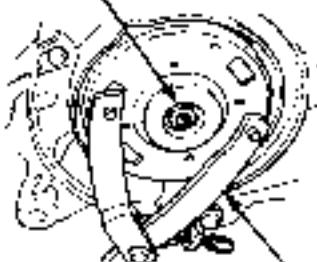

(2) UNIVERSAL HOLDER

**Alternator Inspection****NOTE**

\* This inspection can be performed with the stator installed.

Remove the frame body cover (page 2-6).


Disconnect the alternator 6P connector.

Measure the charging coil resistance between the white wire terminal and ground.

**Standard: 0.4 – 1.0 Ω (20°C/68°F)**

Measure the lighting coil resistance between the yellow wire terminal and ground.

**Standard: 0.2 - 0.8 Ω (20°C/68°F)**

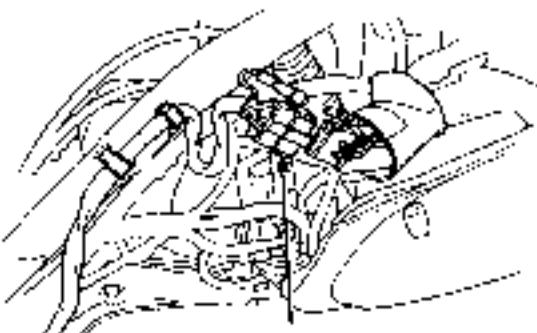

(1) ALTERNATOR 6P CONNECTOR


**Resistor Inspection**

Remove the front cover (page 2-5).

Disconnect the resistor wire connector and measure the resistance between the wire terminal and body ground.

**Standard: 4.7 – 5.3 Ω (20°C/68°F)**

(1) RESISTOR WIRE

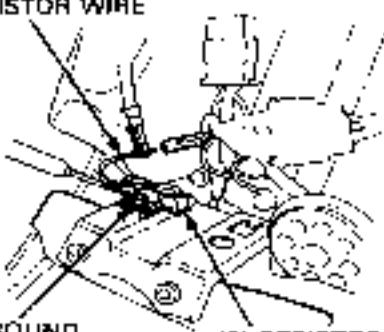

(3) GROUND

(2) RESISTOR

# 14. Ignition System

Service Information	14-1	Ignition Coil	14-6
System Location	14-2	Alternator Inspection	14-7
Troubleshooting	14-3	Ignition Timing	14-7
Ignition System Inspection	14-4		



## Service Information

### Attention

- If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area.
- The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and lead to death.

- When checking the ignition system, always follow the steps in the troubleshooting flow chart (page 14-3).
- The CDI ignition system uses an electrically controlled ignition timing system. No adjustment can be made to the ignition timing.
- The CDI unit may be damaged if dropped. Also, if the connector is disconnected when current is flowing, the excessive voltage may damage the unit. Always turn off the ignition switch before servicing.
- A faulty ignition system is often related to poorly connected connectors. Check those connections before proceeding.
- Make sure the battery is adequately charged. A weak battery may be unable to turn the starter motor quickly enough, or adequate ignition current may not be supplied.
- Use a spark plug of the correct heat range. Using a spark plug with an incorrect heat range can damage the engine. Refer to section 23 of the Common Service Manual.
- For ignition switch inspection, check for continuity on the continuity chart of the Wiring Diagram (section 17).

## System Location

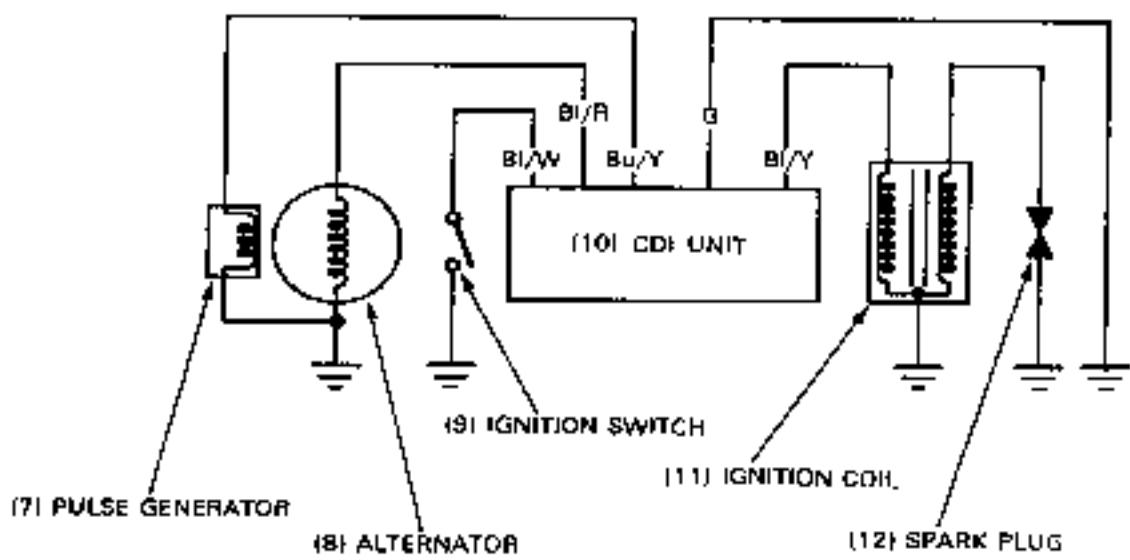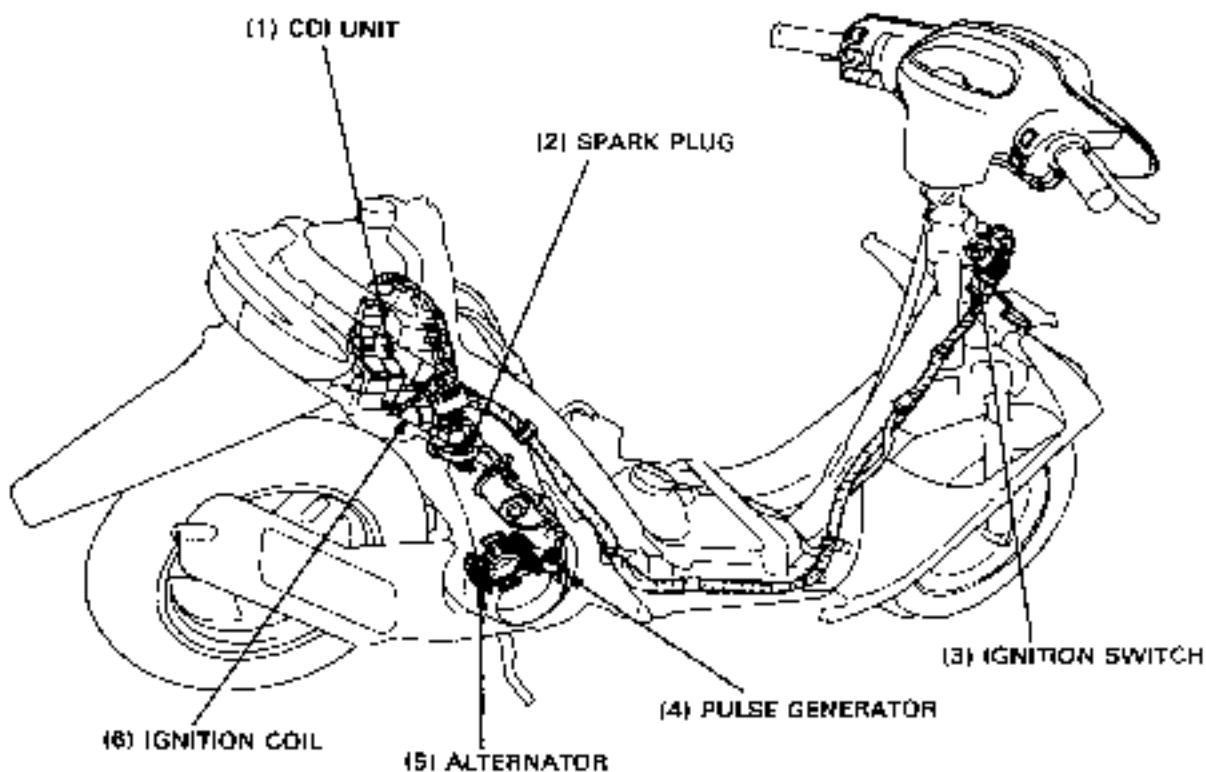

## Troubleshooting

- Before troubleshooting, check that no spark jumps at the spark plug using a known good spark plug (to ensure that the plug does not cause the problem).
- Moreover, check for proper spark plug gap and loose spark plug wire as well as for leakage of the ignition coil secondary current caused by moisture.

### No spark at plug

Unusual condition		Probable cause (Check in numerical order)
Ignition coil primary voltage	Low peak voltage.	<ul style="list-style-type: none"> <li>①The multimeter impedance is too low.</li> <li>②Cranking speed is too low.           <ul style="list-style-type: none"> <li>• Battery is undercharged or operating force of the kickstarter is weak.</li> </ul> </li> <li>③The sampling timing of the tester and measured pulse were not synchronized. (System is normal if measured voltage is over the standard voltage at least once).</li> <li>④Poorly connected connectors or an open circuit in ignition system.</li> <li>⑤Faulty exciter coil. (Measure the peak voltage.)</li> <li>⑥Faulty ignition coil.</li> <li>⑦Faulty CDI unit (in case when above No. ①–⑥ are normal)</li> </ul>
	No peak voltage.	<ul style="list-style-type: none"> <li>⑧Incorrect peak voltage adaptor connections.</li> <li>⑨Faulty ignition switch.</li> <li>⑩Loose or poorly connected CDI unit connector.</li> <li>⑪Open circuit or poor connection in ground wire of the CDI unit.</li> <li>⑫Faulty peak voltage adaptor.</li> <li>⑬Faulty exciter coil. (Measure the peak voltage.)</li> <li>⑭Faulty pulse generator. (Measure the peak voltage.)</li> <li>⑮Faulty CDI unit (in case when above No. ①–⑯ are normal).</li> </ul>
	Peak voltage is normal, but no spark jumps at plug.	<ul style="list-style-type: none"> <li>⑯Faulty spark plug or leaking ignition coil secondary current.</li> <li>⑰Faulty ignition coil.</li> </ul>
Exciter coil	Low peak voltage.	<ul style="list-style-type: none"> <li>①The multimeter impedance is too low.</li> <li>②Cranking speed is too low.           <ul style="list-style-type: none"> <li>• Battery is undercharged or operating force of the kickstarter is weak.</li> </ul> </li> <li>③The sampling timing of the tester and measured pulse were not synchronized. (System is normal if measured voltage is over the standard voltage at least once).</li> <li>④Faulty exciter coil (in case when above No. ①–③ are normal)</li> </ul>
	No peak voltage.	<ul style="list-style-type: none"> <li>⑮Faulty peak voltage adaptor.</li> <li>⑯Faulty exciter coil.</li> </ul>
Pulse generator	Low peak voltage.	<ul style="list-style-type: none"> <li>①The multimeter impedance is too low.</li> <li>②Cranking speed is too low.           <ul style="list-style-type: none"> <li>• Battery is undercharged or operating force of the kickstarter is weak.</li> </ul> </li> <li>③The sampling timing of the tester and measured pulse were not synchronized. (System is normal if measured voltage is over the standard voltage at least once).</li> <li>④Faulty pulse generator (in case when above No. ①–③ are normal).</li> </ul>
	No peak voltage.	<ul style="list-style-type: none"> <li>⑮Faulty peak voltage adaptor.</li> <li>⑯Faulty pulse generator.</li> </ul>

## Ignition System Inspection

## NOTE

- If no spark jumps at the plug, check all connections for loose or poor contact before measuring peak voltage.
- The reading differs depending on the multimeter input impedance. Therefore, use only Honda genuine digital multimeter or commercially available multimeters with the input impedance higher than 10 MΩ/DCV.
- If using Innis diagnostic tester (model 625), follow the manufacturer's instructions.

Connect the peak voltage adaptor to the digital multimeter.

## NOTE

Innis diagnostic tester (model 625) made in Australia or  
Peak voltage adaptor 07HGJ-0020100 with  
Digital multimeter 07411-0020000

### Ignition Coil Primary Peak Voltage

## NOTE

- Check all system connections before inspection. Poor connected connectors can cause incorrect readings.
- Check that the cylinder compression is normal and the spark plug is installed correctly into the cylinder head.

Place the scooter on its center stand.

Remove the frame body cover (page 2-3).

Remove the spark plug cap from the plug. Install a known good spark plug to the plug cap and ground it to the engine as shown.

Connect the peak voltage adaptor  $\oplus$  probe to the ignition coil primary (black/yellow) wire terminal and the  $\ominus$  probe to the body ground.

Turn the ignition switch ON.

Crank the engine with the kickstarter or starter motor and read the ignition coil primary peak voltage.

## Connection:

Black/yellow wire terminal  $\oplus$ —Body ground  $\ominus$


Peak voltage: 100 V minimum

## NOTE


- To avoid possible electrical shock during voltage measurements, do not touch test probe metal parts.

If the peak voltage is abnormal, check an open circuit or poorly connected connectors in black/yellow wire.


If no defects are found in the harness, refer to the troubleshooting chart (page 14-3).

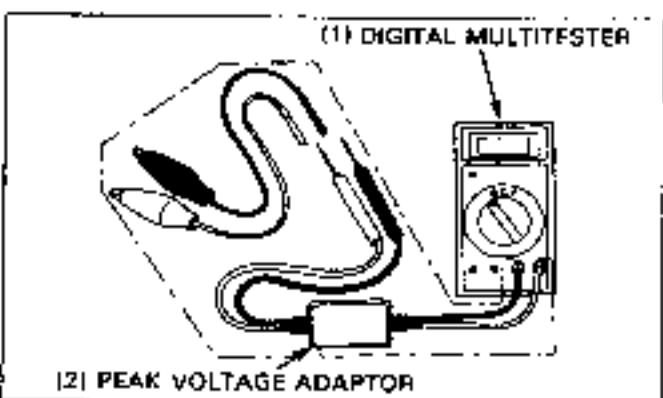

(2) PEAK VOLTAGE ADAPTOR

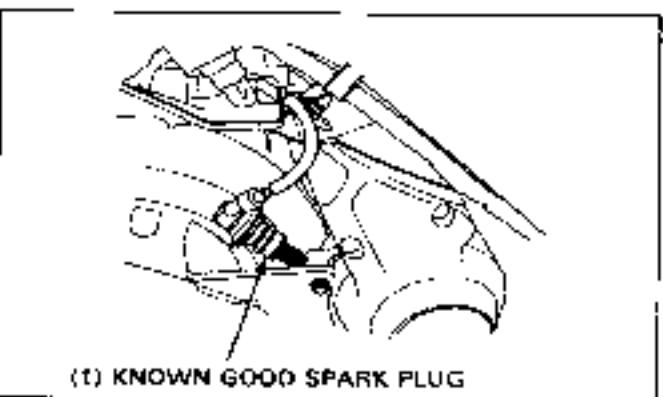

(1) KNOWN GOOD SPARK PLUG

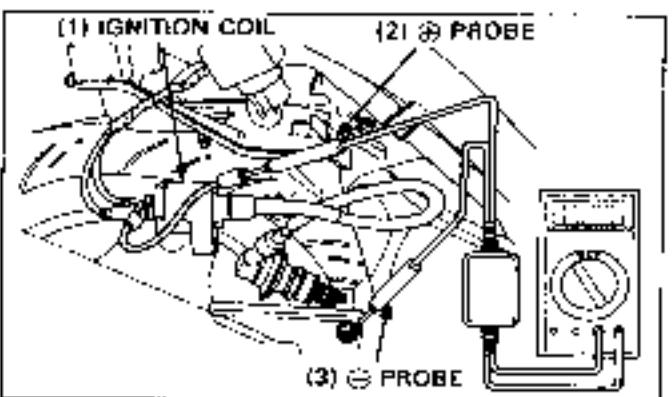

## Exciter Coil Peak Voltage

### NOTE


- Install the spark plug into the cylinder head and measure the peak voltage under normal cylinder compression.

Remove the frame body cover (page 2-3).

Remove the CDI unit from the rear fender and disconnect 6P connector from the CDI unit.

Connect the peak voltage adaptor  $\oplus$  probe to the exciter coil (black/red) wire terminal and the  $\ominus$  probe to the ground (green) wire terminal.

Crank the engine with the kickstarter or starter motor and read the exciter coil peak voltage.

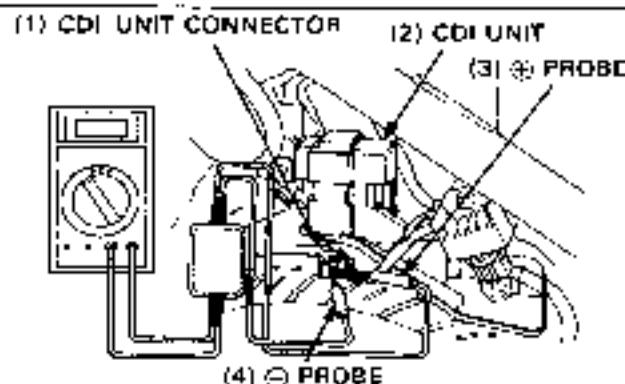

### Connection:

Black/red wire terminal  $\oplus$ —Green wire terminal  $\ominus$

Peak voltage: 100 V minimum

### WARNING

- To avoid possible electrical shock during voltage measurements, do not touch test probe metal parts.

If the peak voltage measured at the CDI unit connector is abnormal, disconnect the alternator wire connector and connect the adaptor probes to the exciter coil terminal and engine ground.

In the same manner as at the CDI unit connector, measure the peak voltage and compare it to the voltage measured at the CDI unit connector.

- If the peak voltage measured at the CDI unit is abnormal and the one measured at the exciter coil is normal, the wire harness has an open circuit or loose connections.
- If both peak voltages measured are abnormal, check each item in the troubleshooting chart. If all items are normal, the exciter coil is faulty.

## Pulse Generator Peak Voltage

### NOTE

- Install the spark plug into the cylinder head and measure the peak voltage under normal cylinder compression.

Remove the frame body cover (page 2-3).

Remove the CDI unit from the rear fender and disconnect 6P connector from the CDI unit.



Connect the peak voltage adaptor  $\oplus$  probe to the pulse generator (blue/yellow) wire terminal and the  $\ominus$  probe to the ground (green) wire terminal.

Crank the engine with the kickstarter or starter motor and read the pulse generator peak voltage.

### Connection:

Blue/yellow wire terminal  $\oplus$ —Green wire terminal  $\ominus$

Peak voltage: 0.7 V minimum

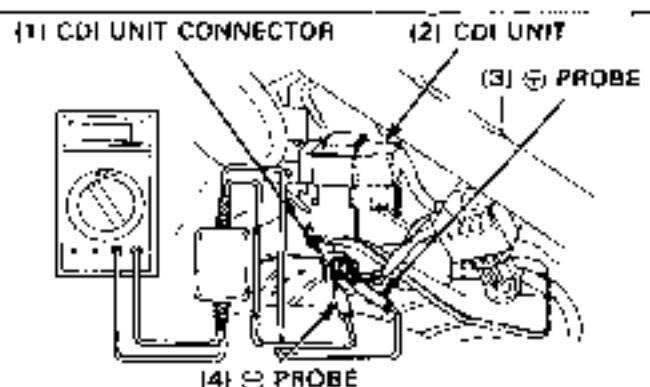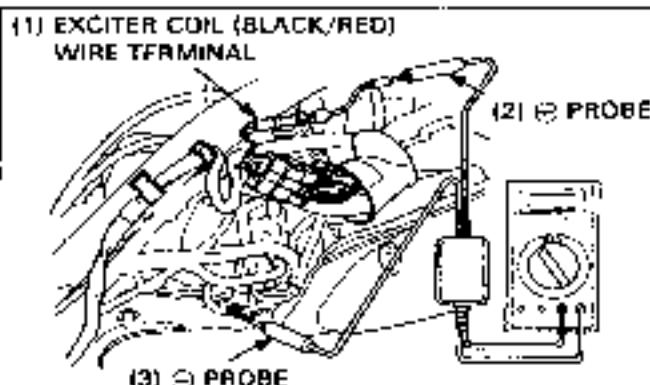

## Ignition System

### CAUTION

- To avoid possible electrical shock during voltage measurements, do not touch test probe metal parts.

If the peak voltage measured at the CDI unit connector is abnormal, disconnect the alternator wire 6P connector and connect the adaptor probes to the pulse generator terminal and engine ground.

In the same manner as at the CDI unit connector, measure the peak voltage and compare it to the voltage measured at the CDI unit connector.

- If the peak voltage measured at the CDI unit is abnormal and the one measured at the pulse generator is normal, the wire harness has an open circuit or loose connections.
- If both peak voltages measured are abnormal, check each item in the troubleshooting chart. If all items are normal, the pulse generator is faulty.

## Ignition Coil

### Removal



Remove the frame body cover (page 2-3).

Remove the spark plug cap from the spark plug.

Remove the mounting bolt and the ignition coil.

Disconnect the ignition coil primary wires from the coil.


### 11) ALTERNATOR 6P CONNECTOR

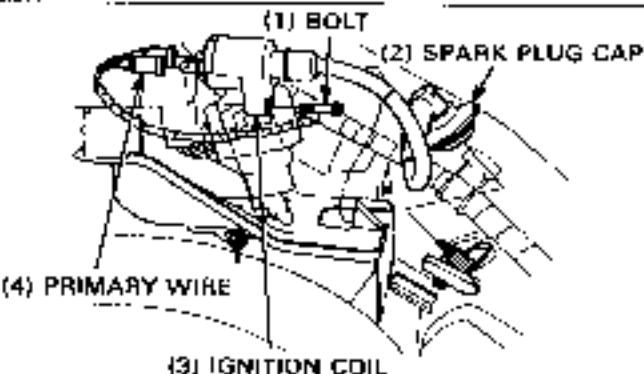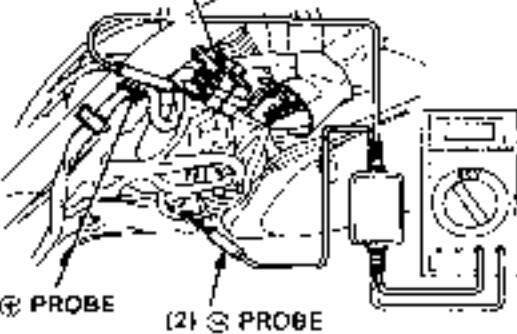

### Continuity Test

Measure the primary coil resistance between the primary wire terminals.

Standard: 0.1–0.4 Ω (20°C/68°F)

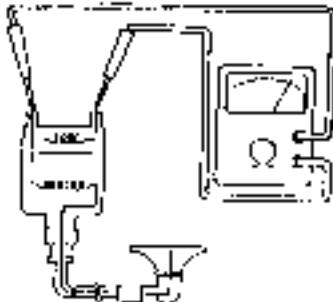

Measure the secondary coil resistance between the spark plug cap and primary wire (-) terminal.


Standard (with plug cap): 6.6–9.7 kΩ (20°C/68°F)

Remove the spark plug cap from the spark plug wire.

Measure the secondary coil resistance between the spark plug wire and primary wire (-) terminal.

Standard (without plug cap): 2.7–3.5 kΩ (20°C/68°F)

Install the removed parts in the reverse order of removal.

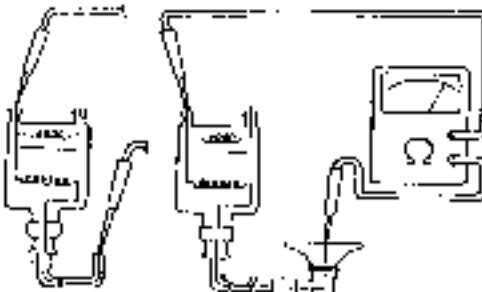

## Alternator Inspection

### NOTE

- This inspection can be performed with the alternator installed into the engine.

Remove the frame body cover (page 2-3).

### Exciter Coil

Disconnect the alternator black/red wire connector.  
Measure the exciter coil resistance between the black/red wire terminal and engine ground.


Standard: 400 - 800 Ω (20°C/68°F)

### Pulse Generator

Disconnect the alternator wire BP connector.  
Measure the pulse generator resistance between the blue/yellow wire terminal and engine ground.

Standard: 50 - 200 Ω (20°C/68°F)

(1) BLACK/RED WIRE CONNECTOR

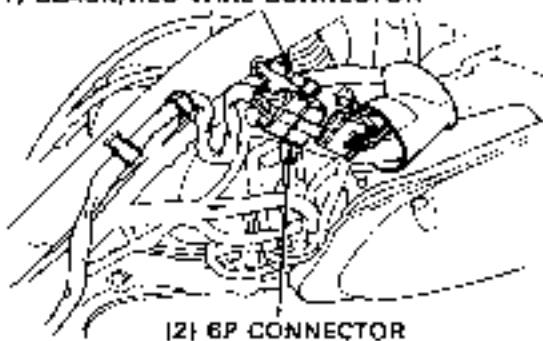

## Ignition Timing

### NOTE

- The CDI ignition timing is not adjustable. If the timing is not correct, check the CDI unit, exciter coil and pulse generator, and replace any faulty parts.

Remove the cooling fan cover (page 13-8).

Warm up the engine and connect the timing light and tachometer.

### NOTE


- Follow the timing light and tachometer manufacturer's instructions before operating.

Start the engine and check the ignition timing.

The ignition timing is correct if the 'F' mark on the flywheel aligns with the index mark of the crankcase at 1,800 min<sup>-1</sup> (rpm).

Ignition timing: 17°BTDC at 1,800 min<sup>-1</sup> (rpm)

(1) INDEX MARK

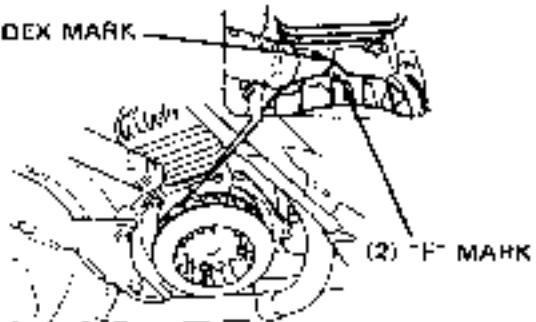

# 15. Electric Starter

<b>Service Information</b>	15-1	<b>Starter Motor Removal/Installation</b>	15-4
<b>System Location</b>	15-2	<b>Starter Motor Disassembly/Assembly</b>	15-5
<b>Troubleshooting</b>	15-3		



## Service Information



• Always turn the ignition switch OFF before servicing the starter motor. The motor could suddenly start, causing serious injury.

- A weak battery may be unable to turn the starter motor quickly enough, or supply adequate ignition current.
- If the current is kept flowing through the starter motor to turn it while the engine is not cranking over, the starter motor may be damaged.


## System Location

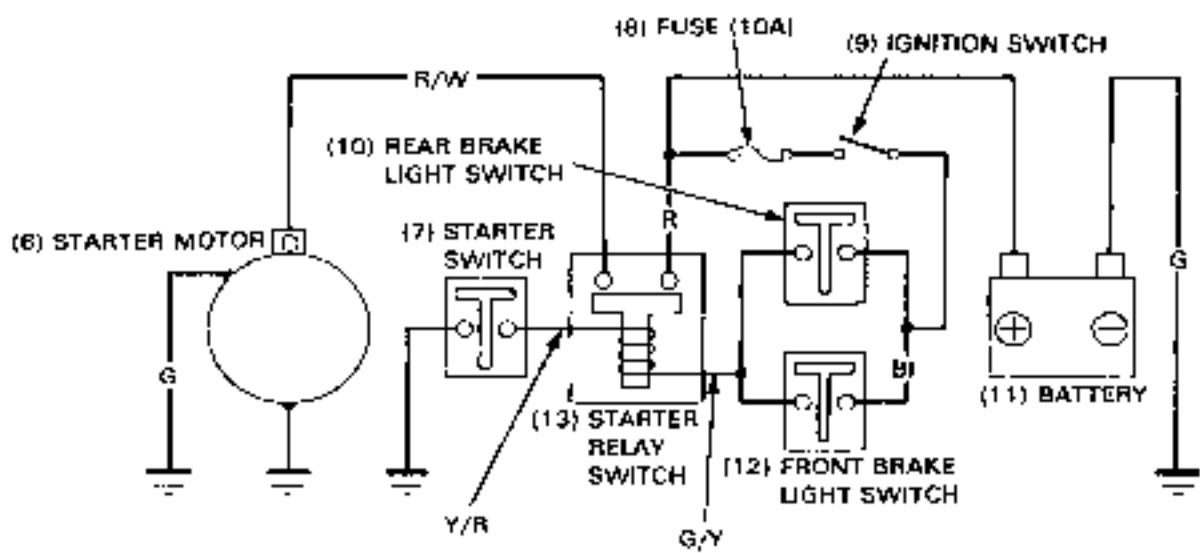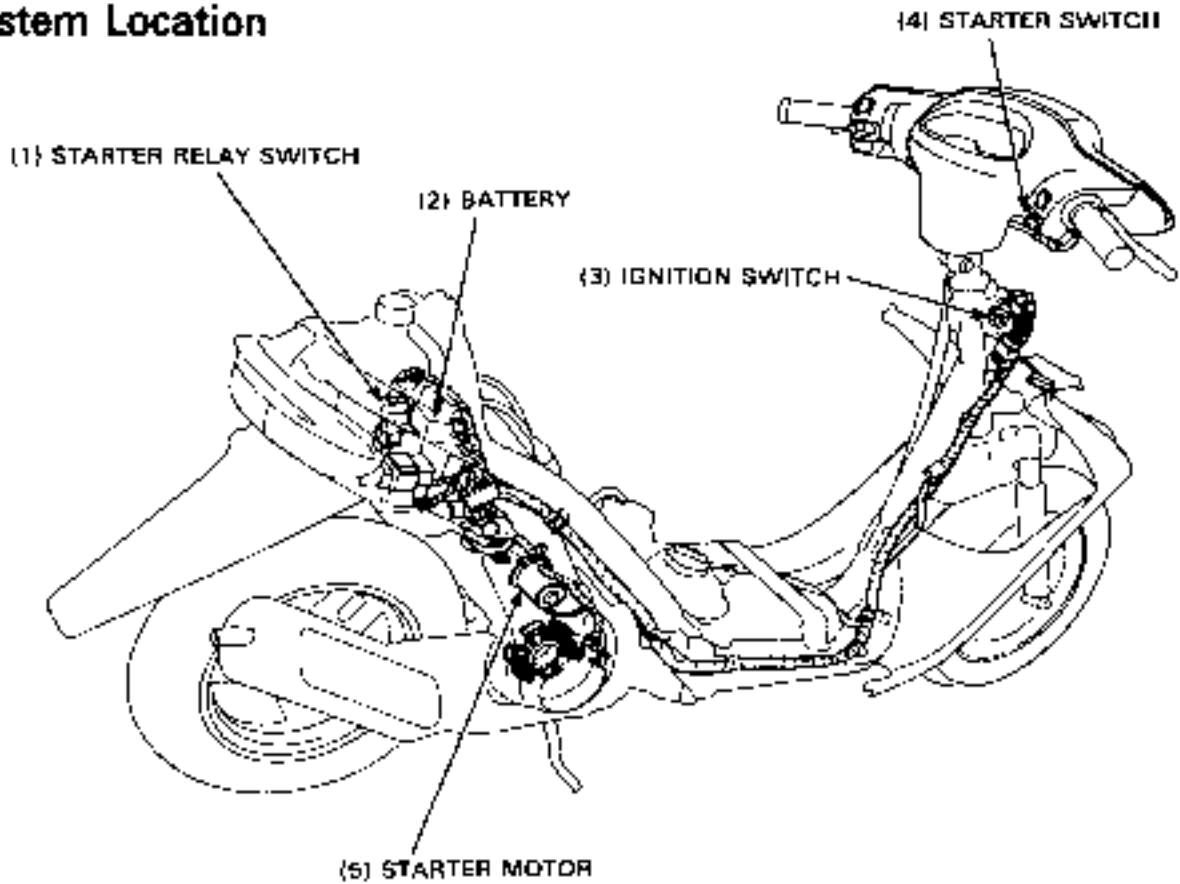

## Troubleshooting

**Starter motor will not turn**

- Check for blown fuse before checking.

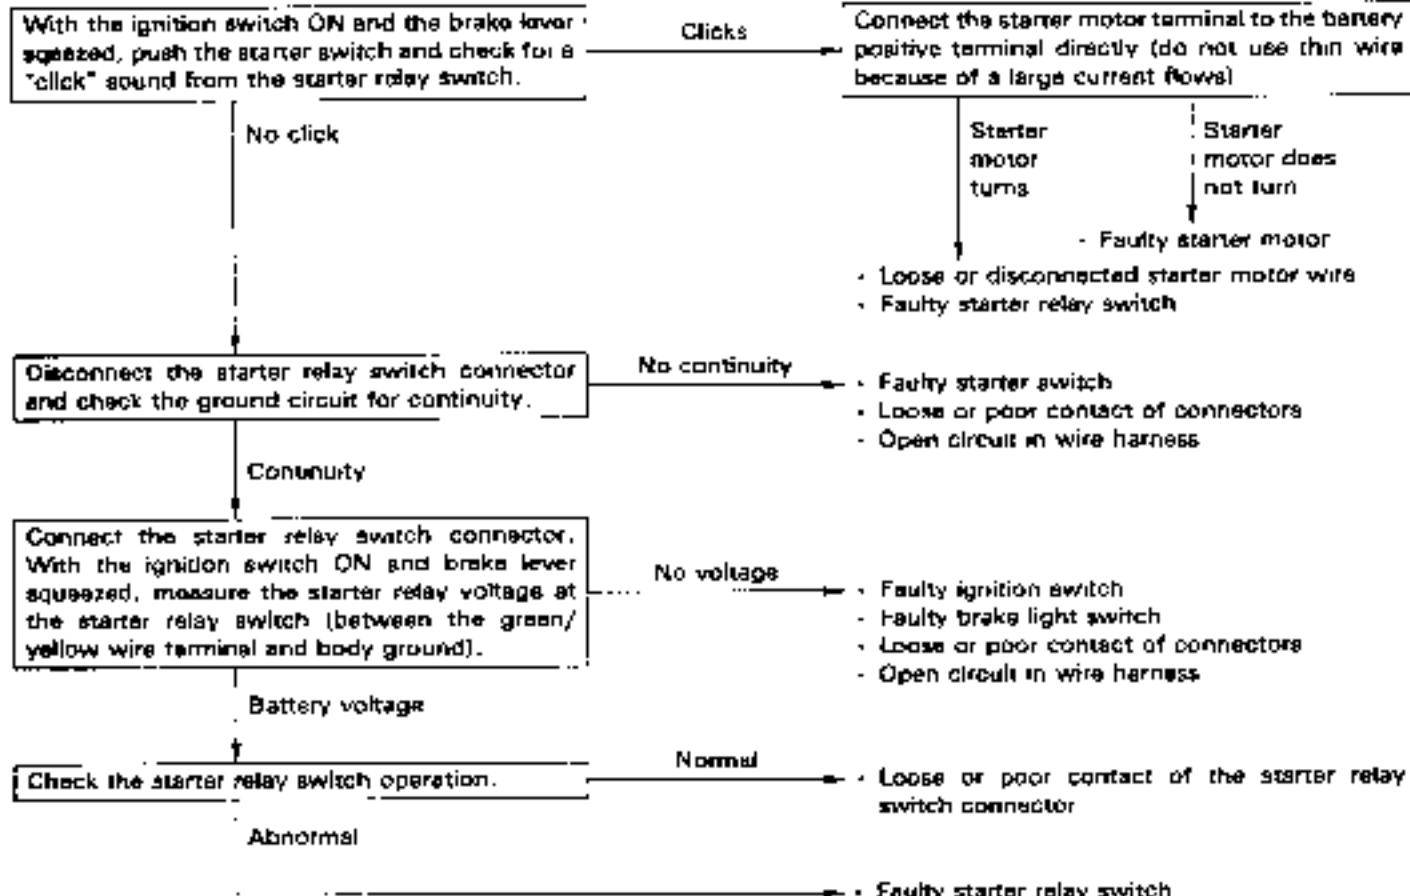

**Starter motor turns slowly**

- Weak battery
- Poorly connected battery wire terminals
- Poorly connected starter motor wire
- Faulty starter motor


**Starter motor turns, but engine does not turn**

- Faulty starter pinion

**Starter motor and engine turn, but engine does not start**

- Faulty ignition system
- Engine problem
  - Low compression
  - Fouled spark plug

## Starter Motor Removal/Installation

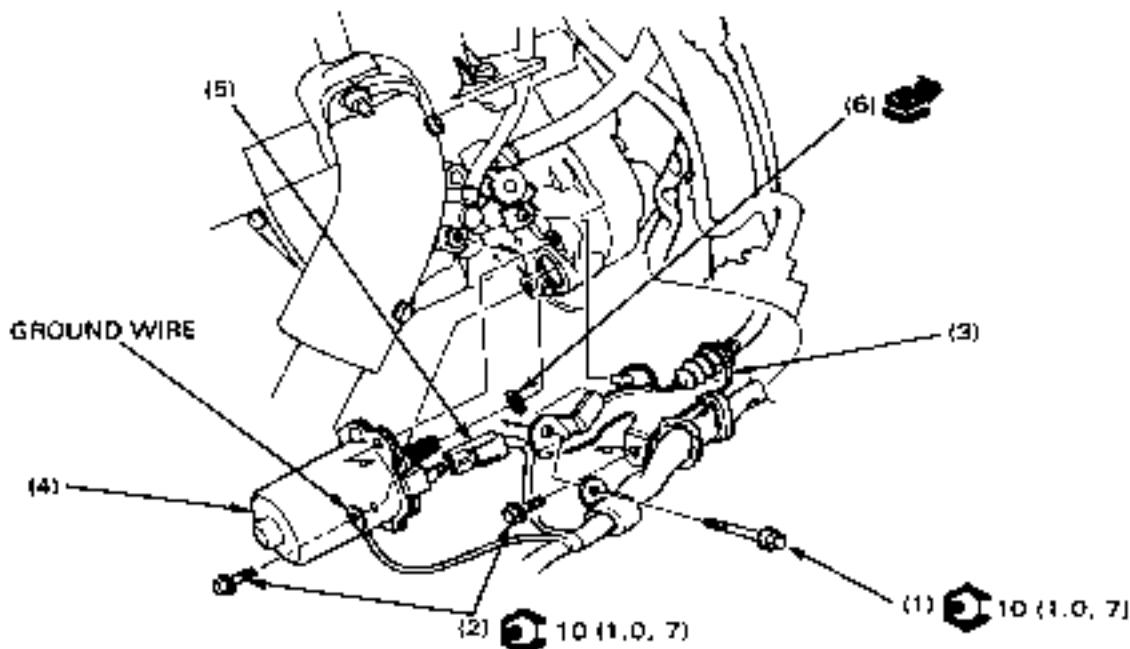


### Requisite Service

- Frame body cover removal/installation (page 2-3)

Procedure	Qty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
(1) Oil pump mounting bolt	1	
(2) Starter motor mounting bolt	2	When installing, do not forget to install the ground wire with the lower mounting bolt.
(3) Oil pump control cable stay	1	<b>NOTE</b> • Do not loosen the oil pump control cable lock nut and adjusting nut. If they are loosened, perform the oil pump control cable adjustment (page 3-8) Disassembly/assembly (page 16-5)
(4) Starter motor	1	
(5) Starter motor wire connector	1	
(6) O-ring	1	

## Starter Motor Disassembly/Assembly

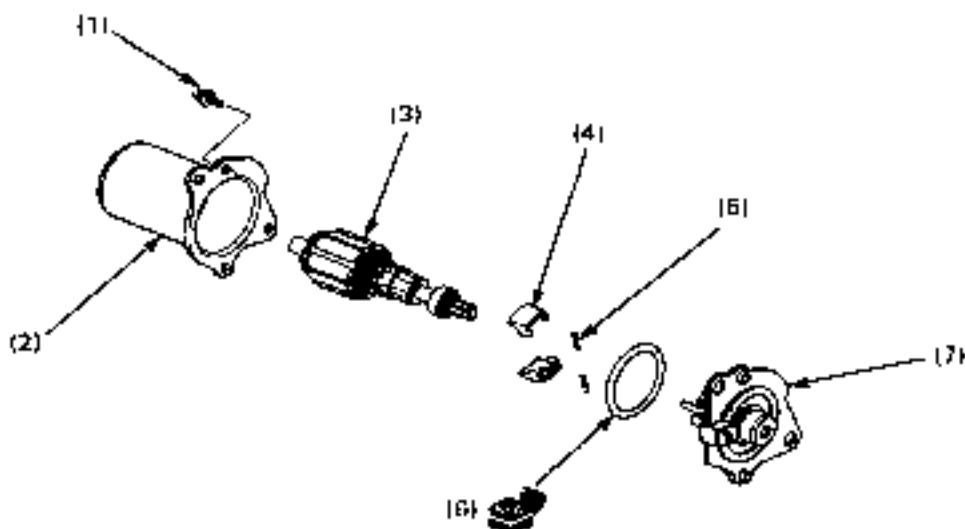

### Requisite Service

- Starter motor removal/installation (page 15-4)

	Procedure	Q'ty	Remarks
(1)	<b>Disassembly Order</b>		Assembly is in the reverse order of disassembly.
(1)	Motor case screw	2	
(2)	Motor case	1	<b>NOTE</b> • When installing, make sure that there are no metal particle inside the case
(3)	Armature	1	
(4)	Brush holder	2	
(5)	Spring	2	
(6)	O-ring	1	
(7)	Front bracket	1	

# **16. Lights/Meters/Switches**

<b>Service Information</b>	<b>16-1</b>	<b>Ignition Switch Replacement</b>	<b>16-2</b>
<b>Fuel Level Sensor Inspection</b>	<b>16-2</b>	<b>Bulb Replacement</b>	<b>16-2</b>
<b>Oil Level Switch Inspection</b>	<b>16-2</b>	<b>Rear Combination Dummy Removal/ Installation</b>	<b>16-4</b>

## **Service Information**


- A continuity test can be made with the switches installed on the scooter. Refer to the continuity chart of the wiring diagram (section 17) for switch continuity.
- Check the battery condition before performing any inspection that requires proper battery voltage.
- Refer to page 25-2 of the Common Service Manual for oil level indicator inspection.
- Refer to page 26-7 of the Common Service Manual for fuel gauge inspection.

## Fuel Level Sensor Inspection

Remove the fuel level sensor (page 2-8).

Move the float with your hand and measure the resistances between the terminals with the float at the FULL (upper) and EMPTY (lower) positions.

Wire color or terminal	FULL	EMPTY
Green and yellow/white	25 - 45Ω	400 - 700Ω
Green and blue/white	400 - 700Ω	25 - 45Ω
Yellow/white and blue/white	450 - 750Ω	450 - 750Ω

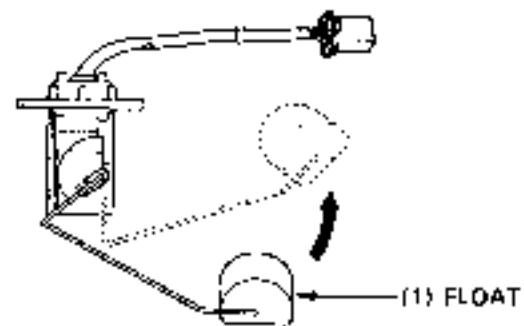


## Oil Level Switch Inspection

Remove the oil level switch (page 4-4).

Check for continuity between the terminals.

There should be continuity with the float at upper position and no continuity with the float at lower position.

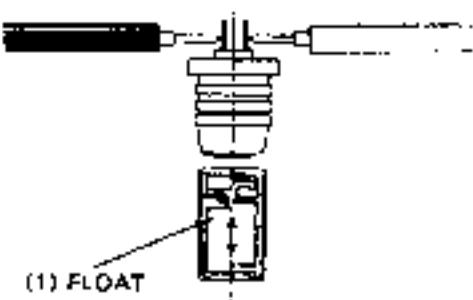

## Ignition Switch Replacement

Remove the front cover (page 2-6).

Disconnect the ignition switch wire connector.

Remove the two screws and the ignition switch.

Install the Ignition switch in the reverse order of removal.

## Bulb Replacement

### Headlight

#### NOTE

- If the headlight bulb has been blown, replace the headlight unit.



Remove the handle front cover (page 2-7).

Remove the four screws and the headlight with the bracket from the handle front cover.

Remove the two adjusting screws, attaching screw and the headlight from the bracket.

Install a new headlight in the reverse order of removal.

After installing, adjust the headlight aim (page 3-6).

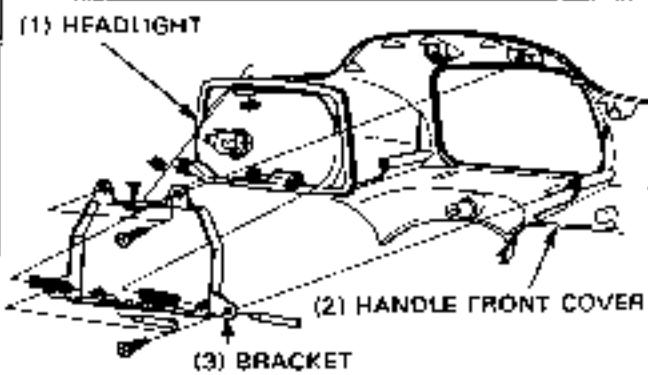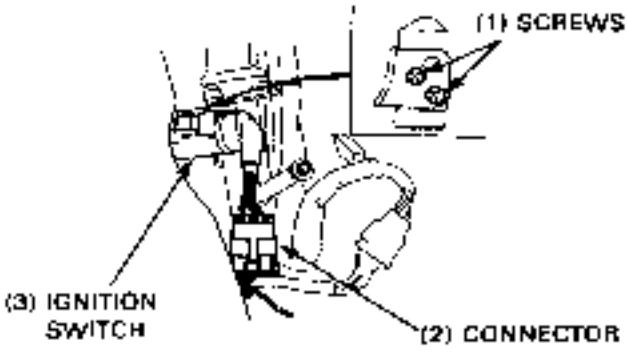

**Front Turn Signal Light**


Remove the handle front cover (page 2-7).

Remove the bulb socket from the turn signal light by turning it counterclockwise.

Pull the bulb out of the socket.

Install a new bulb and removed parts in the reverse order of removal.

(1) TURN SIGNAL LIGHT

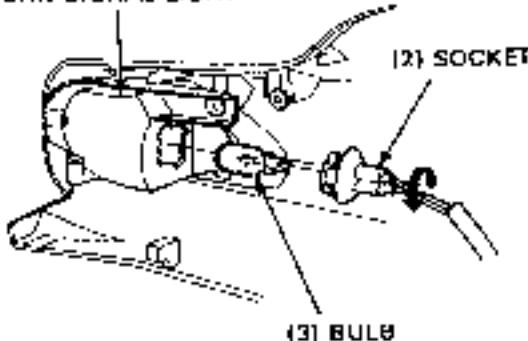**Instrument/Indicator light**


Remove the handle rear cover (page 2-7).

Remove the bulb socket from the instrument case.

Pull the bulb out of the socket.

Install a new bulb and removed parts in the reverse order of removal.

(1) INSTRUMENT CASE

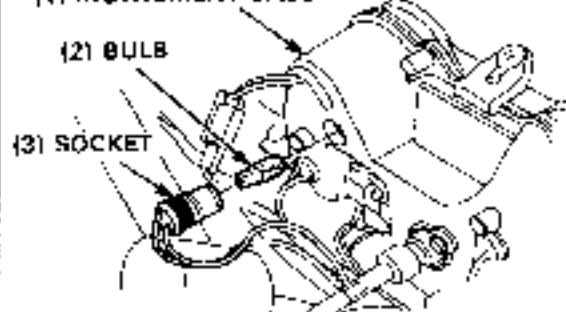
**Taillight**

Remove the two screws, taillight lens and packing.

Turn the bulb counterclockwise while pushing it in, and remove it.

Install a new bulb and removed parts in the reverse order of removal.

(1) BULB

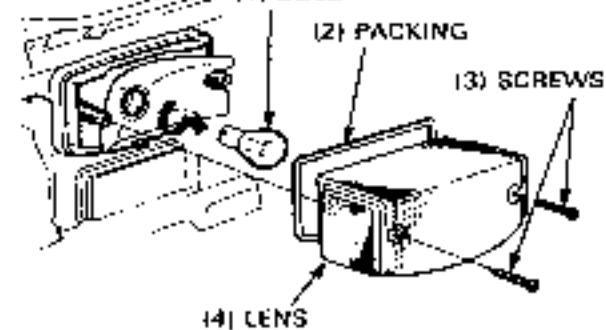**Rear Turn Signal Light**

Remove the screw, turn signal light lens and packing.


Turn the bulb counterclockwise while pushing it in, and remove it.

Install a new bulb and removed parts in the reverse order of removal.

**NOTE**

- Align the lug on the lens with the slot in the light case properly.

(1) BULB

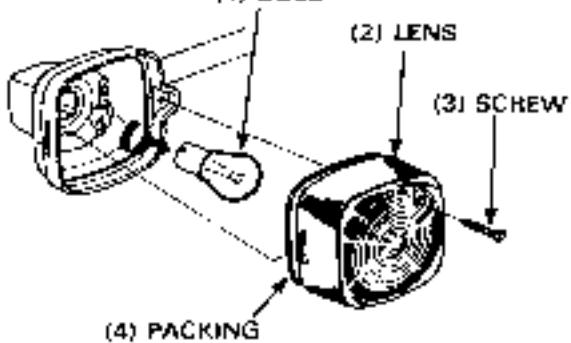

## Rear Combination Dummy Removal/Installation


Remove the frame body cover (page 2-3).

Remove the two bolts and the rear combination dummy. Remove the taillight/turn signal light wires and wire clamp from the rear combination dummy.


Install in the reverse order of removal.

**NOTE**

- Route the taillight/turn signal light wires properly.

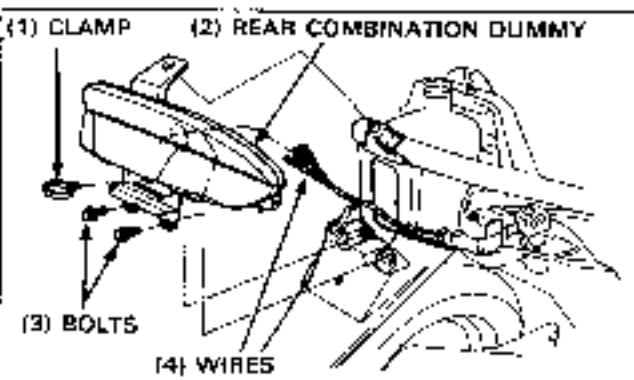

## 17. Wiring Diagram

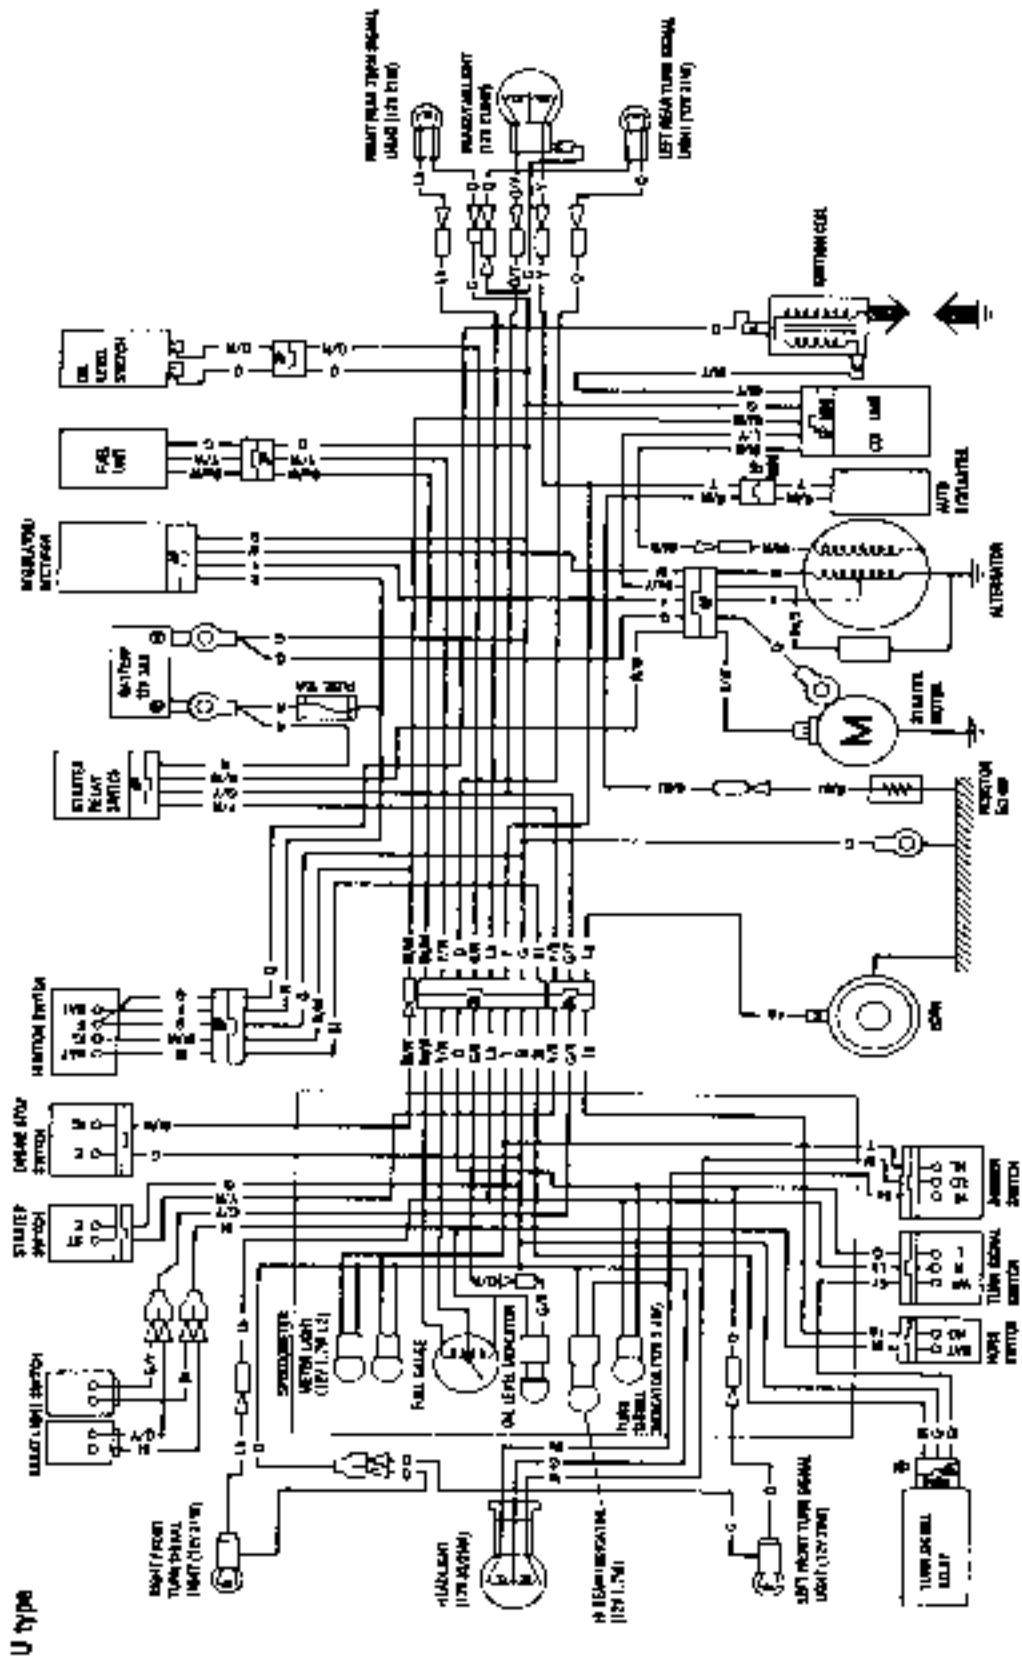

17

17-1

E930Z-G4H-000

# 18. Troubleshooting

Engine Does Not Start or is Hard to Start	18-1	Poor Performance at Low and Idle Speeds	18-3
Engine Lacks Power	18-2	Poor Performance at High Speed	18-3

## Engine Does Not Start or is Hard to Start

1. Check if fuel is getting to carburetor by loosening drain screw

### GETTING TO CARBURETOR

2. Try a spark test

### SPARK

3. Test cylinder compression

### NORMAL COMPRESSION

4. Start by following normal starting procedure

### ENGINE DOES NOT FIRE

5. Remove spark plug

### DRY

### NOT GETTING TO CARBURETOR

- No fuel in fuel tank
- Clogged fuel tube to carburetor
- Clogged fuel filter
- Clogged float valve
- Clogged fuel tank cap breather hole
- Faulty fuel pump

### WEAK OR NO SPARK

- Faulty spark plug
- Fouled spark plug
- Faulty CDI unit
- Faulty alternator
- Broken or shorted spark plug wire
- Broken or shorted ignition coil
- Faulty ignition switch

### LOW COMPRESSION

- Stuck piston rings
- Faulty or deteriorated head valve
- Worn cylinder and piston rings
- Compression leak past crankcase
- Leaking cylinder head gasket


### ENGINE FIRES BUT SOON STOPS

- Faulty auto bypasser
- Air leaking past intake pipe
- Improper ignition timing
- Misadjusted idle speed


### WET PLUG

- Carburetor flooded
- Faulty auto bypasser
- Throttle valve excessively open
- Clogged air cleaner element


## Engine Lacks Power

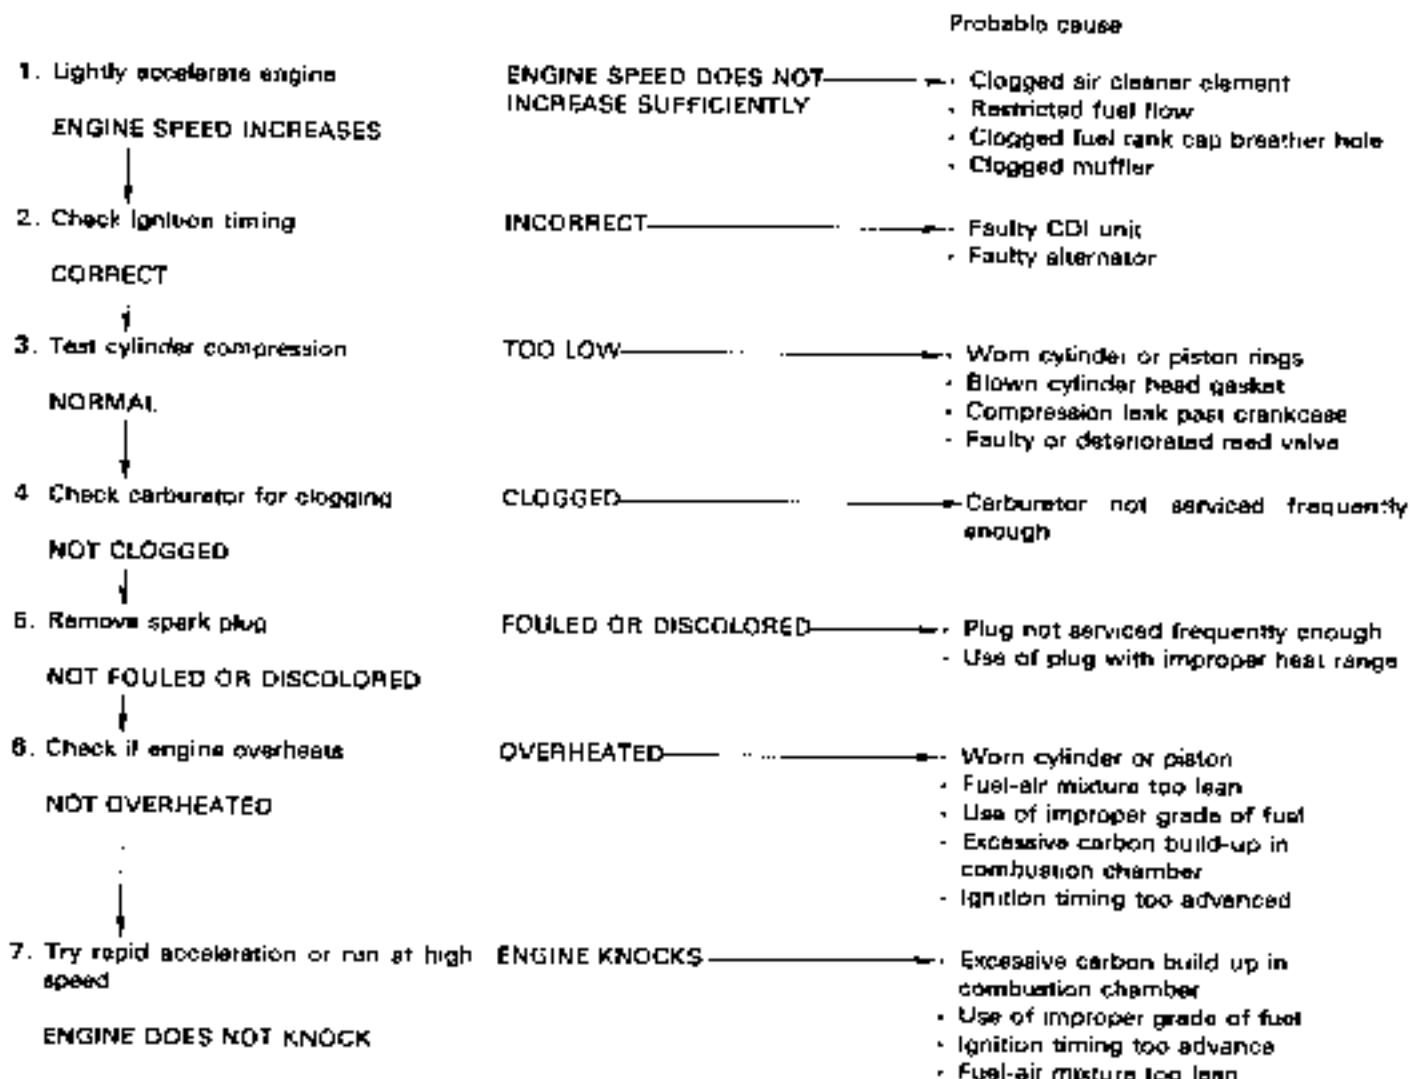

## Poor Performance at Low and Idle Speeds

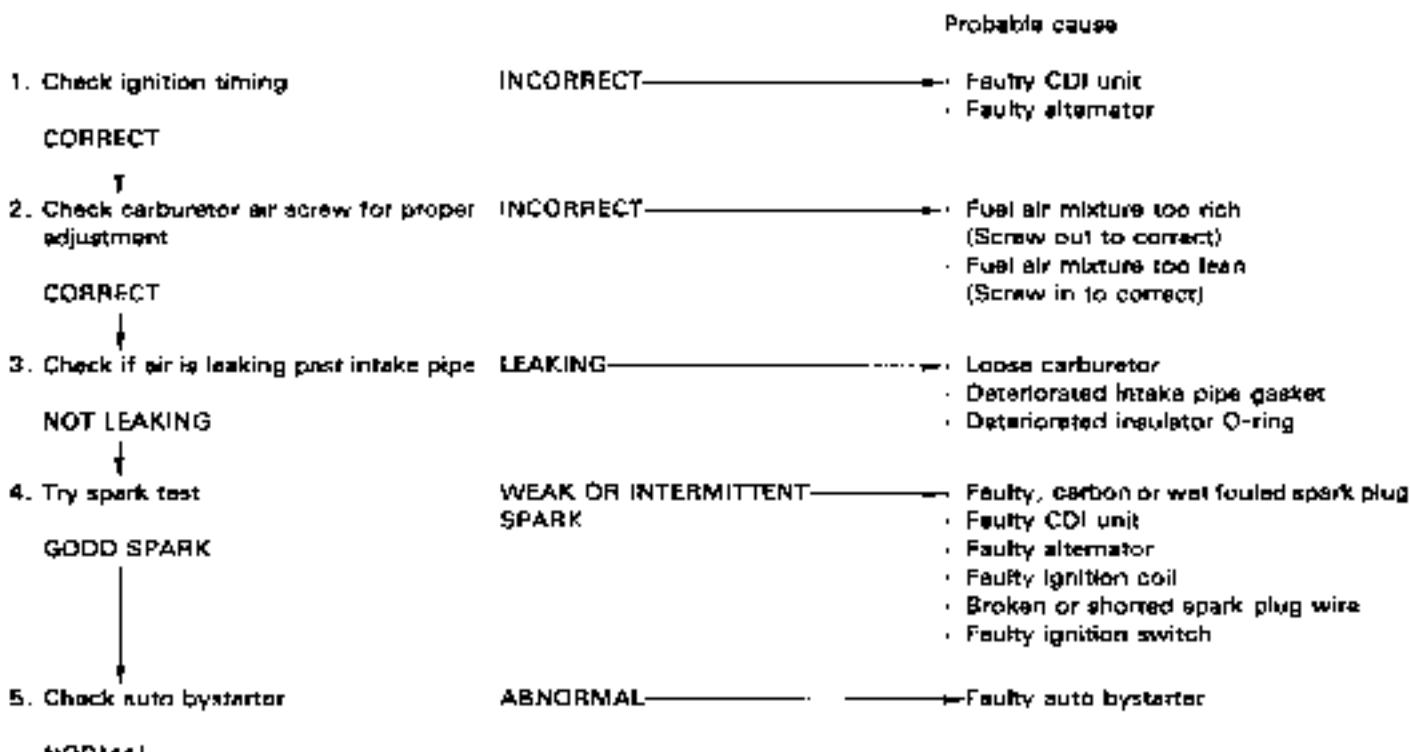

## Poor Performance at High Speed

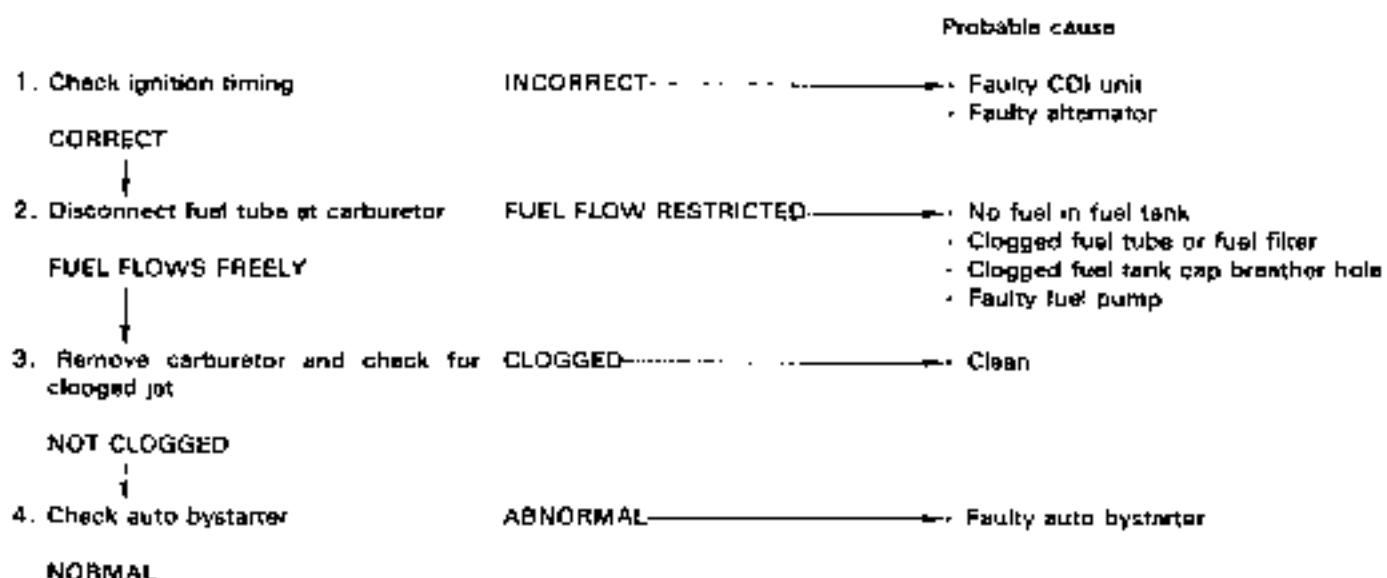

# Index

Air Cleaner Case Removal/Installation .....	5-7
Alternator Inspection .....	13-9, 14-7
Removal/Installation .....	13-8
Battery Removal/Installation .....	13-4
Bulb Replacement .....	16-2
Cable & Harness Routing .....	1-14
Carburetor Disassembly/Assembly .....	5-5
Removal/Installation .....	5-3
Charging System Inspection .....	13-5
Clutch/Driven Pulley Disassembly/Assembly .....	8-8
Crankcase Separation/Assembly .....	10-2
Cylinder Head, Cylinder and Piston Removal/Installation .....	7-2
Drive Pulley and Clutch/Driven Pulley Removal/Installation .....	8-5
Engine Does Not Start or is Hard to Start .....	18-1
Engine Lacks Power .....	18-2
Engine Removal/Installation .....	8-2
Final Reduction Disassembly/Assembly .....	9-2
Fork Disassembly/Assembly .....	11-9
Frame Cover Removal/Installation .....	2-2
Front Brake Panel Disassembly/Assembly .....	11-4
Front Wheel Disassembly/Assembly .....	11-3
Removal/Installation .....	11-2
Fuel Level Sensor Inspection .....	18-2
Fuel Pump Removal/Installation .....	5-8
Fuel Tank Removal/Installation .....	2-8
General Safety .....	1-1
Handlebar Removal/Installation .....	11-6
Headlight Aim .....	3-6
Ignition Coil .....	14-6
Ignition Switch Replacement .....	16-2
Ignition System Inspection .....	14-4
Ignition Timing .....	14-7
Kickstarter Removal/Installation .....	8-3
Left Crankcase Cover Removal/Installation .....	8-2
Lighting Voltage Inspection .....	13-8
Lubrication & Seal Points .....	1-12
Lubrication System Diagram .....	4-2
Maintenance Schedule .....	3-4
Model Identification .....	1-2
Movable Drive Face Disassembly/Assembly .....	8-7
Muffler Removal/Installation .....	2-8
Oil Level Switch Inspection .....	16-2
Oil Pump Removal/Installation .....	4-3
Oil Pump and Oil Line .....	3-6
Oil Tank Removal/Installation .....	4-4
Poor Performance at High Speed .....	18-3
Poor Performance at Low and Idle Speeds .....	18-3
Rear Brake Disassembly/Assembly .....	12-3
Rear Combination Dummy Removal/ Installation .....	16-4
Rear Wheel Removal/Installation .....	12-2
Rear Valve Removal/Installation .....	5-6
Regulator/Rectifier Inspection .....	13-6
Resistor Inspection .....	13-9
Service Access Guide .....	3-2

## Service Information

Charging System/Alternator .....	13-1
Crankcase/Crankshaft .....	10-1
Cylinder Head/Cylinder/Piston .....	7-1
Electric Starter .....	15-1
Engine Removal/Installation .....	8-1
Final Reduction .....	9-1
Frame/Body Panels/Exhaust System .....	2-1
Front Wheel/Suspension/Steering/ Brake .....	11-1
Fuel System .....	5-1
Ignition System .....	14-1
Kickstarter/Drive Pulley/Clutch/ Driven Pulley .....	8-1
Lights/Meters/Switches .....	18-1
Lubrication System .....	4-1
Maintenance .....	3-1
Rear Wheel/Suspension/Brake .....	12-1
Shock Absorber Removal/Installation .....	12-4
Specifications .....	1-3
Starter Motor Disassembly/Assembly .....	15-5
Removal/Installation .....	15-4
Steering Stem Removal/Installation .....	11-7
System Location Charging System/Alternator .....	13-2
Electric Starter .....	15-2
Ignition System .....	14-2
Throttle Housing Removal/Installation .....	11-5
Throttle Valve Disassembly/Assembly .....	5-4
Tools .....	1-11
Torque Values .....	1-9
Troubleshooting .....	
Charging System/Alternator .....	13-3
Crankcase/Crankshaft .....	10-1
Cylinder Head/Cylinder/Piston .....	7-1
Electric Starter .....	15-3
Final Reduction .....	9-1
Frame/Body Panels/Exhaust System .....	2-1
Front Wheel/Suspension/Steering/ Brake .....	11-1
Fuel System .....	5-2
Ignition System .....	14-3
Kickstarter/Drive Pulley/Clutch/ Driven Pulley .....	8-1
Lubrication System .....	4-1
Rear Wheel/Suspension/Brake .....	12-1
Wiring Diagram .....	17-1

To print chapters, click on the printer icon and fill in the page range.

1.	<b>General information</b>	5 - 20
2.	<b>Frame/Body panels/Exhaust</b>	21 - 29
3.	<b>Maintenance</b>	30 - 35
4.	<b>Lubrication system</b>	36 - 39
5.	<b>Fuel system</b>	40 - 48
6.	<b>Engine removal/installation</b>	49 - 51
7.	<b>Cylinder head/Cylinder/Piston</b>	52 - 54
8.	<b>Kickstarter/Drive Pulley/Clutch/Driven Pulley</b>	55 - 63
9.	<b>Final reduction</b>	64 - 66
10.	<b>Crankcase/Crankshaft</b>	67 - 71
11.	<b>Frontwheel/Suspension/Steering/Brake</b>	72 - 80
12.	<b>Rear wheel/Suspension/Steering/Brake</b>	81 - 84
13.	<b>Charging system/Alternator</b>	85 - 93
14.	<b>Ignition system</b>	94 - 100
15.	<b>Electric starter</b>	101 - 105
16.	<b>Lights/Meters/Switches</b>	106 - 109
17.	<b>Wiring diagrams</b>	110
18.	<b>Troubleshooting</b>	111 - 113
	<b>Index</b>	1

Note: Make sure to select  Shrink to fit in the printer dialog box when printing wiring diagrams.